MTNC040103A1

B05

Service Manual

Color Television

Simplified

CT-32E14J / CT-32E14UJ

GN3_(NA10)

This simplified service manual is issued to add listed models to the main service manual order No. MTNC030623C1(CT-25L8G). A complete parts list and schematics are included in this simplified service manual. Please file and use this simplified servicemanual together with the main service manual order No. MTNC030623C1(CT-25L8G).

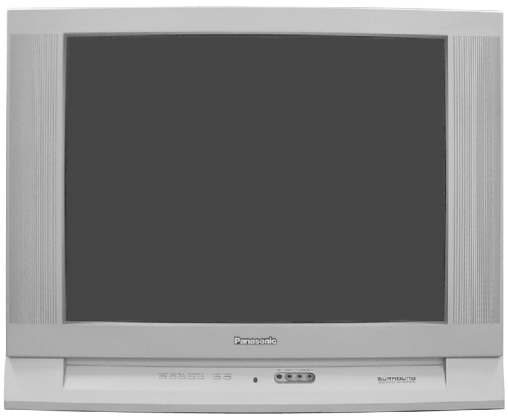

Panasonic®

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

1. Safety precautions

General guidelines

An isolation transformer should always be used during the servicing of a receiver whose chassis is not isolated from AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injuryfrom electrical shocks. It will also protect the receiver from being damaged by accidental shorting that may occur during servicing.
When servicing, observe the original lead dress, especially in the high voltage circuit. Replace all damaged parts (also parts that show signs of overheating.)
Always replace protective devices, such as fish paper, isolation resistors and capacitors, and shields after servicing the receiver. Use only manufacturer's recommended rating for fuses, circuits breakers, etc.
High potentials are present when this receiver is operating. Operation of the receiver without the rear cover introduces danger for electrical shock. Servicing should not be performed by anyone who is not thoroughly familiar with the necessary precautionswhen servicing high voltage equipment.
Extreme care should be practiced when handling the picture tube. Rough handling may cause it to implode due to atmospheric pressure. (14.7 lbs per sq. in.). Do not nick or scratch the glass or subject it to any undue pressure. When handling, usesafety goggles and heavy gloves for protection. Discharge the picture tube by shorting the anode to chassis ground (not to the cabinet or to other mounting hardware). When discharging connect cold ground (i.e. dag ground lead) to the anode with a wellinsulated wire or use a grounding probe.Avoid prolonged exposure at close range to unshielded areas of the picture tube to prevent exposure to x ray radiation.
The test picture tube used for servicing the chassis at the bench should incorporate safety glass and magnetic shielding. The safety glass provide shielding for the tube viewing area against x ray radiation as well as implosion. The magnetic shieldlimits the x ray radiation around the bell of the picture tube in addition to the restricting magnetic effects. When using a picture tube test jig for service, ensure that the jig is capable of handling 50kV without causing x ray radiation.
Before returning a serviced receiver to the owner, the service technician must thoroughly test the unit to ensure that is completely safe to operate. Do not use a line isolation transformer when testing.

Leakage current cold check

Unplug the A.C. cord and connect a jumper between the two plug prongs.Measure the resistance between the jumpered AC plug and expose metallic parts such as screwheads, antenna

terminals, control shafts, etc. If the exposed metallic part has a returnpath to the chassis, the reading should be between 240k Ω and 5.2M Ω . If the exposed metallic part does not have a return path to the chassis, the reading should be infinite.

Leakage current hot check

Plug the AC cord directly into the AC outlet. Do not use an isolation transformer during the check.
Connect a 1.5k Ω 10 watt resistor in parallel with a 0.15 μ F capacitor between an exposed metallic part and ground. Use earth ground, for example a water pipe.
Using a DVM with a 1000 ohms/volt sensitivity or higher, measure the AC potential across the resistor.
Repeat the procedure and measure the voltage present with all other exposed metallic parts.
Verify that any potential does not exceed 0.75 volt RMS. A leakage current tester (such a Simpson model 229, Sencore model PR57 or equivalent) may be used in the above procedure, in which case any current measure must not exceed 0.5 milliamp. Ifany measurement is out of the specified limits, there is a possibility of a shock hazard and the receiver must be repaired and rechecked before it is returned to the customer.

Hot check circuit

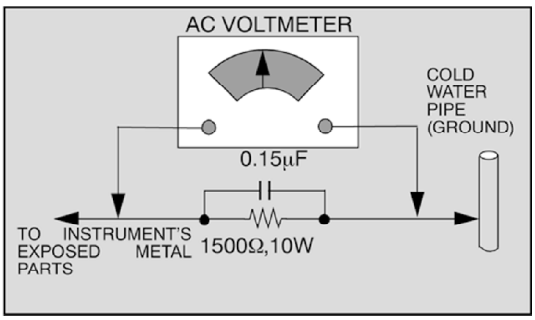

Insulation test

Connect an insulation tester between an exposed metallic part and A.C. line. Apply 1080VAC/ 60Hz for 1 second. Confirm that the current measurement is 0.5mA ~ 2.0mA. Repeat test with other metallic exposed parts.

X ray radiation

WARNING
The potential source of x-ray radiation in the TV set is in the high voltage section and the picture tube.

NOTE
It is important to use an accurate, calibrated high voltage meter.

Set the brightness, picture, sharpness and color controls to minimum.
Measure the high voltage. The high voltage should be 29.25 ± 1.25kV. If the upper limit is out of tolerance, immediate service and correction is required to insure safe operation and to prevent

the possibility of prematurecomponent failure.

Horizontal oscillator disable circuit test

This test must be performed as a final check before the receiver is returned to the customer. See horizontal oscillator disable circuit procedure check in this manual.

2. Service notes

NOTE

These components are affixed with glue. Be careful not to break or damage any foil under the component or at the pins of the ICs when removing. Usually applying heat to the component for a short time while twisting with tweezers will break the component loose.

Leadless chip component (surface mount)

Chip components must be replaced with identical chips due to critical foil track spacing. There are no holes in the board to mount standard transistors or diodes. Some chips capacitor or resistor board solder pads may have holes through the board,however the hole diameter limits standard resistor replacement to 1/8 watt. Standard capacitor may also be limited for the same reason. It is recommended that identical components be used.

Chip resistor have a three digit numerical resistance code, 1st and 2nd significant digits and a multiplier. Example: 162 = 1600 or 1.6k Ω resistor, 0 = 0 Ω (jumper).

Chip capacitors generally do not have the value indicated on the capacitor. The color of the component indicates the general range of the capacitance.

Chip transistors are identified by a two letter code. The first letter indicates the type and the second letter, the grade of transistor.

Chip diodes have a two letter identification code as per the code chart and are a dual diode pack with either common anode or common cathode. Check the parts list for correct diode number.

Component removal

1. **Use solder wick to remove solder from component end caps or terminal.**
2. **Without pulling up, carefully twist the component with tweezers to break the adhesive.**
3. **Do not reuse removed leadless or chip components since they are subject to stress fracture during removal.**

Chip component installation

1. **Put a small amount of solder on the board soldering pads.**

2. **Hold the chip component against the soldering pads with tweezers or with a miniature alligator clip and apply heat to the pad area with a 30 watt iron until solder flows. Do not apply heat for more than 3 seconds.**

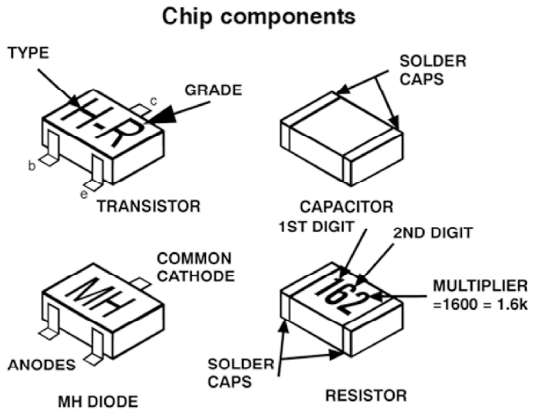

How to replace flat ic (required tools)

1. **Remove the solder from all of the pins of a Flat IC by using a desolder braid**

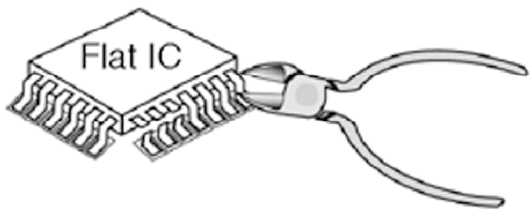

2. **Put the iron wire under the pins of the Flat IC and pull it in the direction indicated while heating the pins using a soldering iron. A small awl can be used instead of the iron wire.**

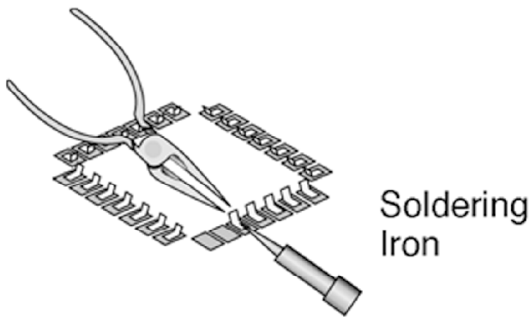

3. **Remove the solder from all the pads of the Flat IC by using a de solder braid**

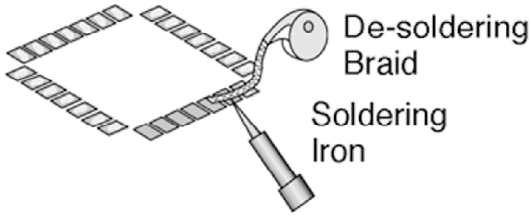

4. **Position the new Flat IC in place (apply the pins of the Flat IC to the soldering pads where the pins need to be soldered). Properly determine the positions of the soldering pads and pins by correctly aligning the polarity symbol**

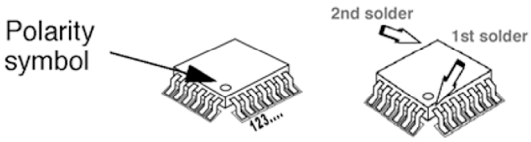

5. **Solder all pins to the soldering pads using a fine tipped soldering iron**

6. **Check with a magnifier for solder bridge between the pins or for dry joint between pins and soldering pads. To remove a solder bridge, use a de solder braid as shown in the figure below**

IMPORTANT

To protect against possible damage to the solid state devices due to arching or static discharge, make certain that all ground wires and CRT DAG wire are securely connected.

CAUTION

The power supply circuit is above earth ground and the chassis cannot be polarized. Use an isolation transformer when servicing the receiver to avoid damage to the test equipment or to the

chassis. Connect the test equipment to the proper ground(hot) or (cold) when servicing, or incorrect voltages will be measured.

2.1. X-Ray Protection Circuit Check & Adjustments

This test must be performed as final check before the receiver is returned to the customer. If voltages are out of tolerance, immediate service and correction is required to insure safe operation and to prevent the possibility of premature componentfailure.

Equipment:

1. **Isolation transformer.**
2. **High voltage meter.**
3. **D.C. Ammeter**
4. **Short jumper.**
5. **HHS jig (See figure below).**

Diode Connection Jumper.

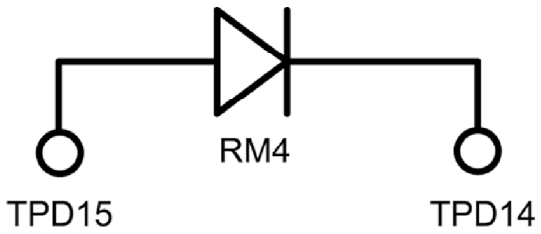

Preparation:

1. **Make sure the receiver is turned off.**
2. **Connect the receiver to an isolation transformer.**
3. **Connect the ammeter serial from the flyback anode lead to the picture tube anode socket.**
4. **Prepare short jumper and HHS jig.**

Procedure:

1. **Connect the short jumper between TPD16 & TPD17.**
2. **Connect the jumper diode between TPD14 and TPD15 (anode connected to TPD15 and cathode to TPD14).**
3. **Apply 75VAC to AC input of isolation transformer.**
4. **Turn the receiver on.**

5. **Apply a monoscope pattern.**
6. **Set customer picture and brightness controls to the minimum.**
7. **Set current within 50 μA to 100 μA by changing the picture and bright controls.**
8. **Slowly increase A.C. voltage at the input of the isolation transformer and confirm HHS voltage measure 34kV.**
9. **Turn power off and remove jigs.**

3. EEPROM replacement

If a new EEPROM integrated circuit is replaced for servicing, follow the next procedure once that the memory is properly assembled:

1. **Enter to service mode.**
2. **Turn the TV set ON.**
3. **Once inside service mode the first image that appears on-screen is the ID1 register with the respective address value (FF) like the image below.**

   Note:

   All 3 registers (ID1,ID2,ID3) should appear with FF values if a new EEPROM is assembled.

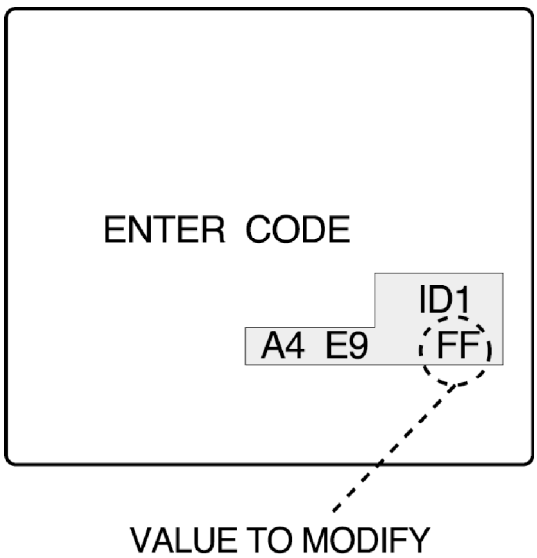

4. **With "VOL" keys adjust the correct value according with the service adjustment table (see "Service Mode" section on page 17).**
5. **Change to the next ID switch register with "CH" keys and repeat**

the same procedure as step 4.

6. **When replacing a new EEPROM be sure to set the correct ID switch values for each model.**
7. **Once that all 3 registers are set with the correct address value, perform all of the remaining adjustments and servicing.**

IMPORTANT:

Correct ID switch configuration should be input when replacing EEPROM for each television model, otherwise if wrong values are configured, the television software will not function accordingly and properly.

4. About lead free solder (PbF)

NOTE

Lead is listed as (Pb) in the periodic table of elements. / In the information below, Pb will refer to lead solder, and PbF will refer to Lead Free Solder. / The lead free solder used in our manufacturing process and discussed below is (Sn+Ag+Cu). / Thatis Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For / service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be / used. / PCBs manufacturedusing lead free solder will have the "PbF" or a leaf symbol stamped on the / back of PCB.

CAUTION

- **Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30 ~ 40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).**
- **Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C). / If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If thisis not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.**
- **After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the**

opposite side.

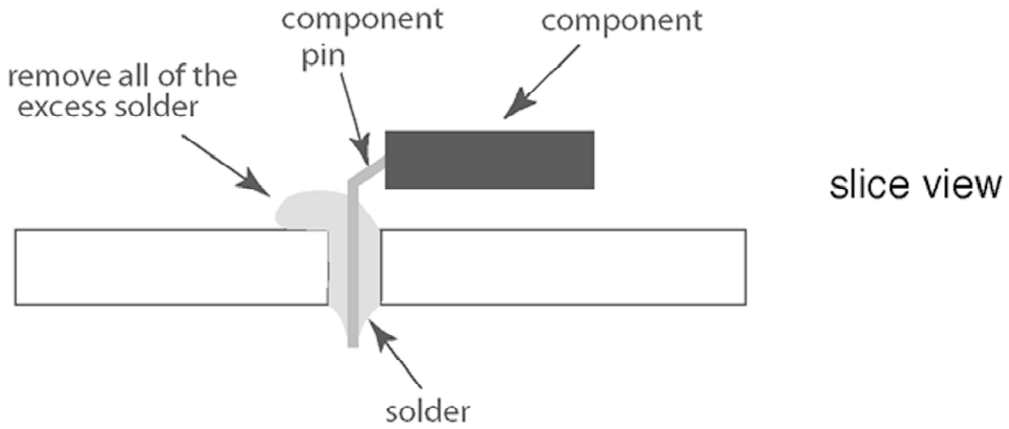

Suggested Pb free solder

There are several kinds of Pb free solder available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper), Sn+Zn+Bi (tin, zinc, bismuth) solder can also beused.

0.3mm X 100g	0.6mm X 100g	1.0mm X 100g
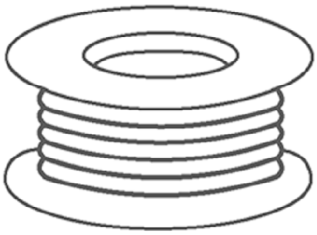	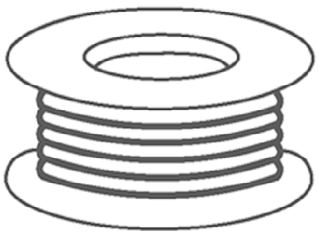	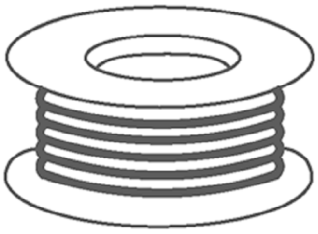

5. Receiver feature table

FEATURE/MODEL	CT-27E13G
CHASSIS	JP424
MICRO	128K
MENU LANGUAGE	ENG/SPAN/FR
CLOSED CAPTION	X
V-CHIP (USA/CANADA)	X
CHANNEL COUNT	181
REMOTE CONTROL	EUR7613ZB0
CRT SUPPLIER	MDDA
CHASSIS	GN3
COMB FILTER	3 DIGITAL
COLOR TEMP	X
HEC/VEC (X=BOTH)	X
V/A NORM (X=BOTH)	X
MTS/SAP/DBX	X
BUILT-IN AUDIO POWER	5Wx2 (10%)
No. OF SPEAKERS	2
SURROUND SOUND	X
AI SOUND	X
BASS / BAL / TREBLE	X
A/V IN (REAR/FRONT)	3(2/1)
COMPONENT INPUT (Y, Pb, Pr)	1
S-VIDEO INPUT (REAR/FRONT)	1/0
DIMENSIONS(WxDxH)	943.0x644.0x780.0mm
	37.12x25.35x30.7in
WEIGHT (Kg/Lbs.)	49.5/109.13
VIDEO INPUT JACK	1Vp-p 75 Ω , phono jack
AUDIO INPUT JACK	500mV RMS 47k Ω
HEADPHONE JACK	X

Note:
Specifications are subject to change without notice or obligation. Dimensions and weights are approximate.

6. Board description table

BOARD	PART NUMBER	DESCRIPTION
A	TNP2AH060KC	MAIN BOARD
C	TNP2AA167KA	CRT BOARD

NOTE
When ordering a replacement board assembly, append an “S” to the board number

EXAMPLE
To order the A-Board, the replacement board is TNP2AH060KCS.

7. TV Location of controls

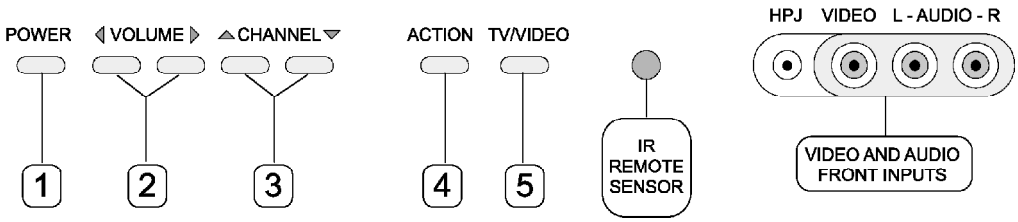

Quick reference control operation	
1	**Power -** Press to turn ON or OFF.
2	**Volume** - Press to adjust sound level, or to adjust audio menus, video menus, and select operating features when menus are displayed
3	**Channel** - Press to select programmed channels. Press to highlight desired features when menus are displayed. Also use to select cable converter box channels after programming remote control infra-red codes (the TV/AUX/CABLE switch must be set in CABLE position).
4	**Action -** Press to display main menu and access on screen feature and adjustment menus.
5	**TV/Video -** Press to select TV or one of the video inputs, for the main picture or the PIP frame (when PIP frame is displayed).

8. Location of controls (remote)

8.1. EUR7613ZB0

POWER
Press to turn ON and OFF.

TV - VCR - DBS/CBL - DVD
Press to select a component.

MUTE
Press to mute sound.

TV/VIDEO
Press to select TV, Video mode.

MENU
Press to select TV, Video mode.

KEYBOARD
Press to select any channel.

R-TUNE
Press to switch to previously viewed channel or video mode.

SAP
Press to acces the secondary audio program broadcast.

CH
Press to select next or previous channel and navigate in menus.

VOL
Press to adjust TV sound and navigate in menus.

RECALL
Press to display time, channel sleep timer and other options.

GUIDE
DBS and DVD functions button.

EXIT
DBS menu function button.

PROG
Press for delimiter between major and minor channel number.

Note:
For additional information about this remote please refer to the owner's manual section remote operation, listed on the parts list section.

9. Dissasembly for service

Back cover

Remove all the screws marked with an arrow (←) from the back of the receiver

NOTE

Screw configuration, type, and number of screws vary depending on the model of the receiver serviced and the application; various models are covered in this manual. Use same hardware when reassembling the receiver.

- 3 screws at the top edge of the receiver.
- 2 screw by the A/V jacks.
- 1 screw at each lower corner of the receiver.
- 1 screw by the Flyback.
- 1 screw by the A.C. cord.

A-Board - Main chassis

1. Slide the chassis completely out of the guide rails.
2. Stand the receiver on its edge. The underside of the board is completely accessible for component replacement.

Note:
Some tie-wraps that secure the wire dressings may need to be unfastened for chassis removal.

C-Board - CRT output

The board plugs onto the socket on the CRT neck. To release the Focus wire, use a dull object to release the tab on the socket (near the wire opening) and carefully pull on the wire. To connect the focus wire, press on the tab to lock it then insertthe wire in the opening and press on it until it is fully inserted and locked in place. Use the same procedure of the focus wire. Carefully disconnect C1, C2, C10 and C11.

Focus cable release

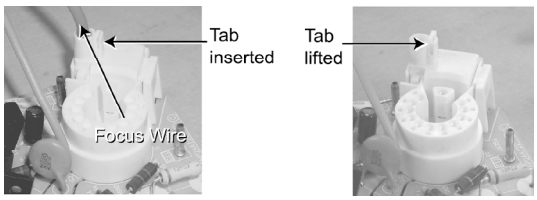

Speakers
Each speaker is secured to the cabinet with 4 screws.

NOTE
When reassembling speakers be sure to connect the speaker wires to the correct speaker lead (+) (-)

9.1. Disassembly for CRT replacement

1. Discharge the CRT as instructed in the “safety precautions”.
2. Disconnect the yoke (DY) plug, degaussing coil (DEG) plug from the main board.
3. Unplug the CRT 2nd anode button from the main board.
4. Remove the C-Board from the CRT base and unplug the black wires (CRT dag ground) C10 & C11.
5. Disconnect the speakers plug from the A-Board.

6. **Lift the main chassis (A-Board) and all mounted boards completely out with the CRT board attached.**
7. **Perform complete removal of chassis, as instructed in "disassembly for service" section.**

CRT replacement

1. **Perform "disassembly for CRT replacement" procedure.**
2. **Insure that the CRT H.V. Anode button is discharged before handling the CRT. Read the "safety precautions" section on handling the picture tube.**
3. **Remove the components from the CRT neck and place the cabinet face down on a soft pad.**
4. **Note the original order for the CRT mounting hardware as they are remove from the CRT mounting brackets at each corner of the CRT.**
5. **Remove the CRT with the degaussing coil and the dag ground braid attached.**
6. **Note the original locations and mounting of the degaussing coil and the dag ground assembly to insure proper reinstallation on the replacement CRT.**
   To remove and remount the degaussing coil:
   - **Unhook the coil spring from the bottom corners of the CRT ears.**
   - **Release the braid loop from the upper corners of the CRT ears.**
7. **Mount the dag ground braid on the replacement CRT. Position the degaussing coil with new ties.**
   Dress coil as was on the original CRT.
8. **Replace the components on CRT neck and reinstall into cabinet. Verify that all ground wires and circuit board plugs get connected.**
   IMPORTANT NOTICE
   When ordering the CRT, please order CRT and CRT kit also.
   Please see parts list section for part numbers

9.2. Back Cover Removal

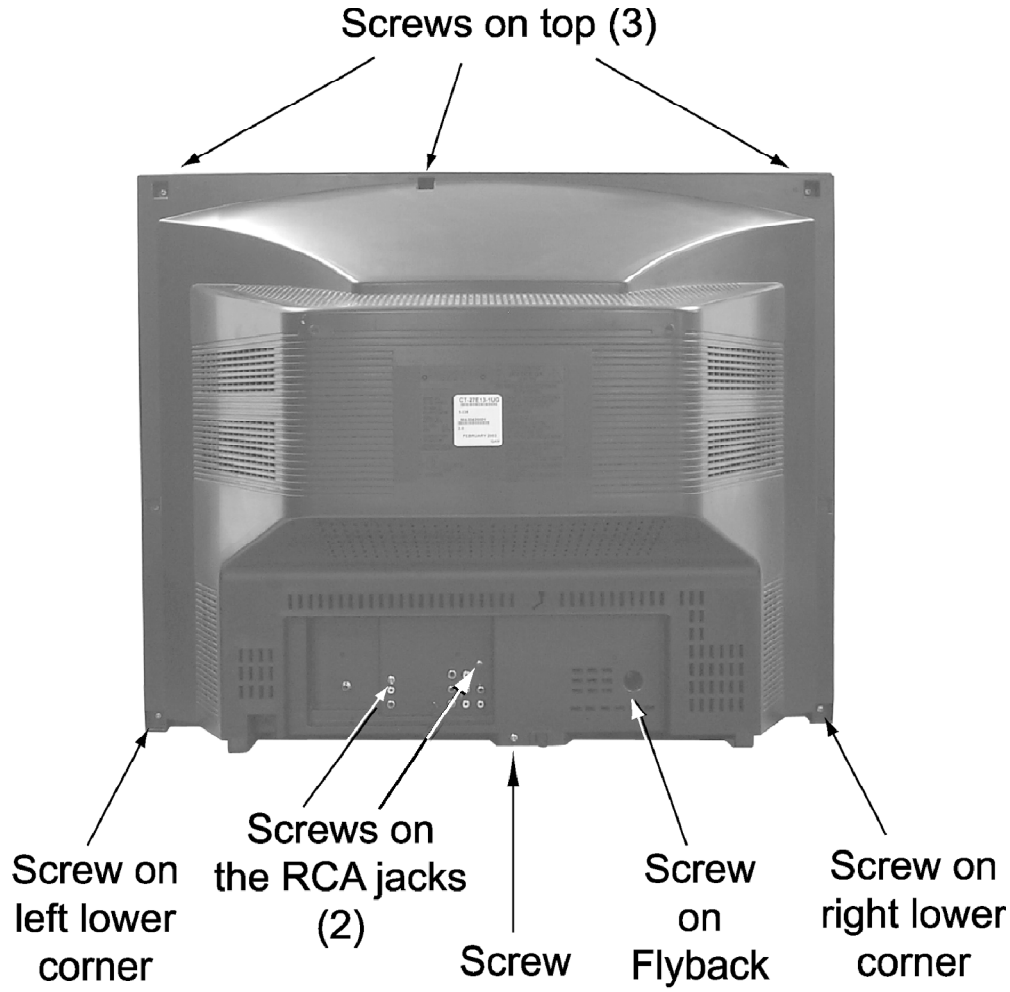

10. Chassis service adjustment procedures

All service adjustments are factory preset and should not require adjustment unless controls and/ or associated components are replaced.

Note:

Connect the (-) lead of the voltmeter to the appropriate ground. Use IC801's heat sink when the HOT ground symbol is used. Otherwise, use COLD ground (tuner shield, IC451's heat sink or FA2).

Component and voltage test points

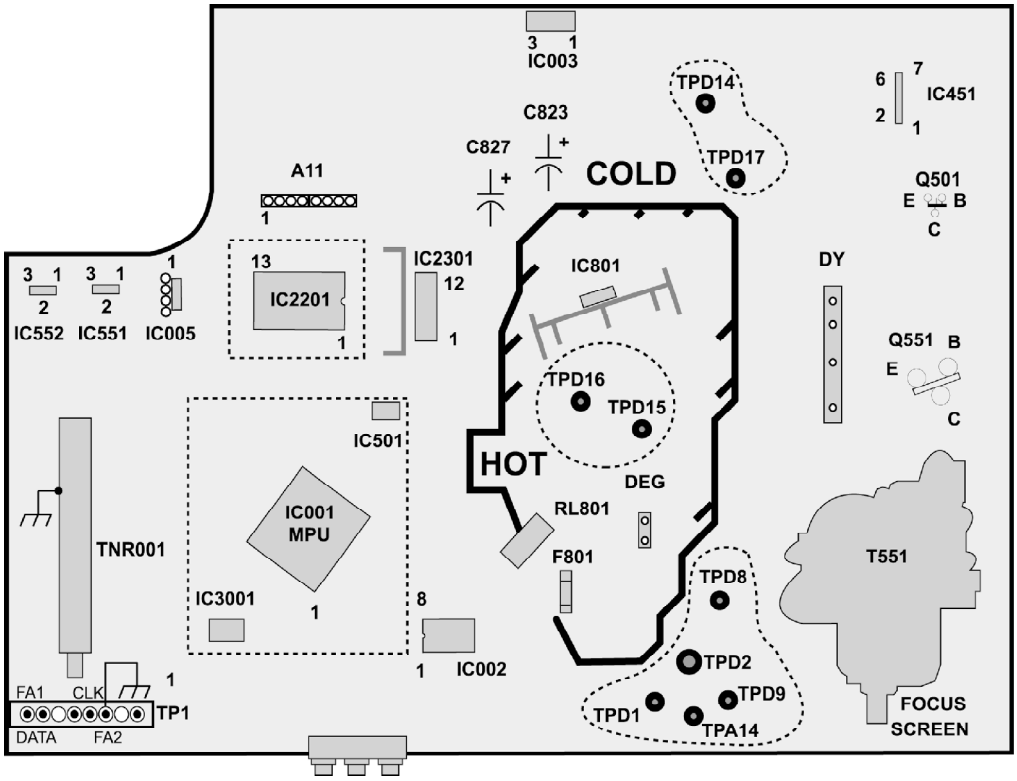

Note:

Components and test points within doted areas are located on trace side.

B+ voltage check

1. **Set the BRIGHT and PICTURE to minimum by using the PICTURE menu.**
2. **Connect the DVM between C825 (+ side) or TPD14 and cold ground.**
3. **Confirm that B+ voltage is 131.0V ± 2.0V. This voltage supplies B+ to the horizontal output and flyback circuits.**

Source voltage chart

120V AC line input. Set the BRIGHT and the PICTURE to minimum by using the PICTURE menu. Use cold or hot ground for the (-) lead of the DVM as needed.

A-BOARD	TEST POINT	VOLTAGE
+B2	TPD14	131.0 ± 2.0V
SOUND	C823 (+)	22.7 ± 1.0V
STB12V	C827 (+)	12.8 ± 1.0 V
220V	TPA14	217 ± 10 V
VERTICAL	TPD8	27.4 ± 1.5V
9V	IC551 pin 3	9.0 ± 0.5V
5V	IC552 pin 3	5.0 ± 0.5V
3.3V	IC005 pin 2	3.3 ± 0.3V
EHT	CRT anode	29.25 ± 1.25kV
HEATER	JK351 H-GND	6.0 ± 0.24V

High voltage check

1. **Select an active TV channel and confirm that horizontal is in sync.**
2. **Adjust BRIGHTNESS and CONTRAST using PICTURE icon menu so video just disappears.**
3. **Using a high voltage meter confirm that the high voltage is 29.25 ± 1.25kV.**

11. Service mode (electronic adjustments)

This receiver has electronic technology using the I^2C bus concept. It performs as a control function and it replaces many mechanical controls. Instead of adjusting mechanical controls individually, many of the control functions are nowperformed by using "on screen display menu". (The service adjustment mode).

NOTE

It is suggested that the technician reads all the way through and understand the following procedure for entering/exiting the service adjustment mode; then proceed with the instructions working with the receiver. When becoming familiarwith the procedure, the flow chart for service mode may be used as a quick guide.

Quick entry to service mode

When minor adjustments need to be done to the electronic controls, the method of entering the service mode without removal of the cabinet back is as follows using the remote control:

1. **Select SET-UP icon and select CABLE mode.**
2. **Select TIMER icon and set SLEEP time for 30 Min.**
3. **Press "ACTION" twice to exit menus.**
4. **Tune to the channel 124.**

5. Adjust VOLUME to minimum (0).

6. Press VOL → (decrease) on receiver. Red “CHK” appears in upper corner.

To toggle between aging and service modes:

While the “CHK” is displayed on the left top corner of the CRT, pressing “ACTION” and “VOL” UP on the TV simultaneously will toggle between the modes. Red “CHK” for serviceand yellow “CHK” for aging.

7. Press POWER on the remote control to display the service adjustment modes menu, select adjustment by pressing the volume right/left buttons and channel up/down buttons on the remote and ACTION to enter the adjustment.

MTS	MTSIN	SEPAL	SEPAH	
CLOCK	CLOCK			HHSTH
VIDEO	COLOR	TINT	BRIGH	CONT
	B-Y_G	CUT_G	CUT_R	CUT_B
	BRT	R-DR	B-DR	
HDEF	H-POS	H-WID	PCC	
	TOPG	BTMG	TRAP	
FINE	PCCHG	PCCLG	PCCHS	PCCLS
	TOPSL	BTMSL		
VDEF	VEAMP	V-C	V-S	VPOS
SETID	ID1	ID2	ID3	

Exiting the service mode:

This TV goes out from service mode when it is unplugged or turned OFF. To exit the service mode, turn the TV OFF from or unplug the TV from A.C.

Other method

Press ACTION and POWER on the receiver simultaneously for at least 2 seconds.
The receiver momentarily shuts off; then comes back on tuned to channel 3 with a preset level of sound.
Any programmed channels, channels caption data and some others user defined settings will be erased when exited by pressing ACTION and POWER on receiver.

IMPORTANT NOTE
Always check that the TV exits the service mode.

To confirm colors

When in service mode (red “CHK” is displayed) press RECALL on the remote control to enter the

purity field check mode

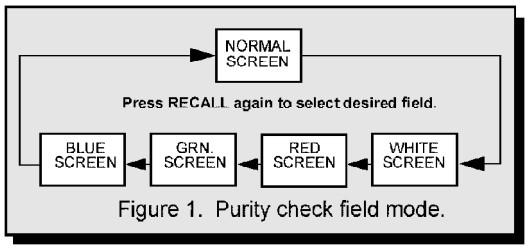

Figure 1. Purity check field mode.

Entering service mode (open-back method)

While the receiver is connected and operating in normal mode, momentarily short test point FA1 (TP1 pin 2) to cold ground (TP1 pin 3).
The receiver enters the aging mode.
Yellow letters "CHK" appear in the upper left corner of the screen. / (The volume right/left and channel up/down will adjust rapidly).

Note:

If service mode is accessed by this method be sure to reset the set after service is performed.

11.1. Service adjustment default values for items

NAME	DESCRIPTION	REGISTER VALUE
MTSIN	MTS INPUT LEVEL	31
SEPAL	MTS LOW LEVEL SEPARATION	0C
SEPAH	MTS HIGH LEVEL SEPARATION	29
CLOCK	CLOCK	124
HHSTH	HHS VOLTAGE LEVEL REFERENCE	9A
COLOR	COLOR	01 B0
TINT	TINT	43
BRIGH	SUB-BRIGHTNESS	49
CONT	SUB-CONTRAST	3A
B-Y_G	MAGENTA TINT ADJ	7F
CUT_G	GREEN CUT-OFF	02 07
CUT_R	RED CUT-OFF	02 32
CUT_B	BLUE CUT-OFF	01 BB
BRT	BRIGHT	49
R-DR	RED DRIVE	08 B0
B-DR	BLUE DRIVE	08 63
H-POS	HORIZONTAL POSITION	79
H-WID	HORIZONTAL WIDTH	13
PCC	PINCUSHION CORRECTION	21
TOPG	TOP CORNER PINCUSHION	BB
BTMG	BOTTOM CORNER PINCUSHION	BA

NAME	DESCRIPTION	REGISTER VALUE
TRAP	TRAPEZOID	7D
PCCHG	PINCUSHION HIGH	0B
PCCLG	PINCUSHION LOW	12
PCCHS	PINCUSHION HIGH	04
PCCLS	PINCUSHION LOW	04
TOPSL	TOP CORNER PINCUSHION SLICE LEVEL	6B
BTMSL	BOTTOM CORNER PINCUSHION SLICE LEVEL	10
VEAMP	VERTICAL SIZE	93
V-C	VERTICAL LINEARITY	4C
V-S	VERTICAL SIZE CORRECTION	09
VPOS	VERTICAL POSITION	7A

NAME	DESCRIPTION	VALUE
ID1*	ID SWITCH 1	F8
ID2*	ID SWITCH 2	4F
ID3*	ID SWITCH 3	77

IMPORTANT:

These table values are approximated and could change due to variation of electrical characteristics in each set, except for the ID switch values.

***Note:**

The correspondent ID switch (ID1,ID2, ID3) data configuration should not be modified in any way. If EEPROM circuit needs to be replaced, these ID values should be configured according with this table.

12. Service adjustments (electronic controls)

NOTE
Please correlate with available pattern on all adjustments

12.1. Sub-Brightness and Contrast / Service DAC adjustment (BRIGH, CONT)

Adjustment of this control is important for setting proper operation of customer brightness and picture controls. Do not adjust the SCREEN VR after the sub-brightness is set.
This adjustment is factory set. Do not adjust unless repairs are made to associated circuit, the CRT Board or when the CRT is replaced.

Preparation

1. Apply a colorbar pattern.

2. Set the PICTURE control to the maximum.
3. Set COLOR control to minimum (no color on picture).
4. Set the BRIGHTNESS control to the center.
5. Set the SHARPNESS control to the center.
6. Connect the oscilloscope to TP47G.

Procedure

1. In the service mode, select DAC for brightness adjustment "BRIGH", and adjust data to obtain 3.6±0.1V between 7.5 IRE and GND level at TP47G. (See waveform detail).
2. In service mode, select DAC for contrast adjustment "CONT", and adjust data to obtain 2.9±0.2V between 7.5IRE and 100IRE level at TP47G. (See waveform detail)

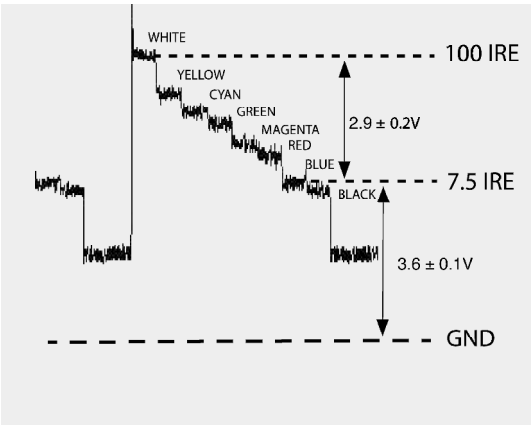

12.2. Color output adjustment / Service DAC adjustment (COLOR, TINT)

NOTE
if a rainbow pattern generator is available perform the following procedure; the next section describes the procedure with no rainbow pattern.

Make sure that sub-contrast adjustment was finished prior to perform this adjustment.

PREPARATION

1. Normalize the picture settings.
2. Set the BRIGHTNESS control to minimum.

3. Set the COLOR control to the center.
4. Set the TINT control to the center.
5. Set the PICTURE control to the maximum.
6. Set the SHARPNESS control to the minimum.

PROCEDURE

1. Apply a rainbow color bar pattern.
2. Connect the oscilloscope to TP37 and GND.
3. In service mode adjust “TINT” register until the waveform measured is as the one shown. Tint level from A and B peaks must be almost in the same level (0.35 Vpp).

TP37 Waveform (TP47B).

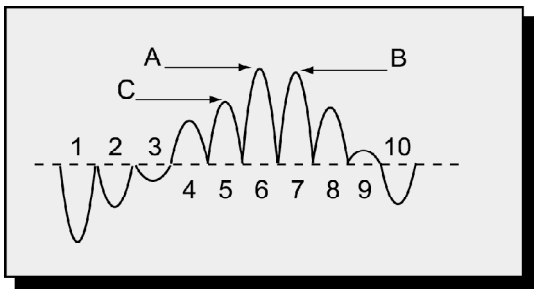

4. Connect the oscilloscope to TP35 and GND.
5. Adjust “COLOR” register so that the amplitude is 0.9±0.05Vp-p.

TP35 Waveform (TP47G).

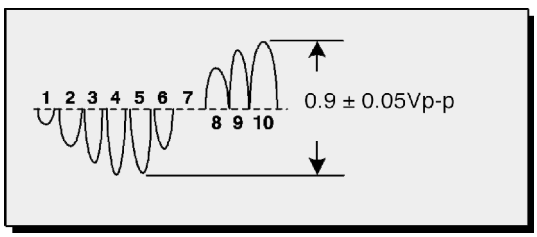

12.3. Color output adjustment / Service DAC adjustment / (COLOR, TINT, B-Y_G)

NOTE

Color and tint adjustment sets the reference settings for the user controls; It is important to read the procedures.

(NO RAINBOW PATTERN)

Make sure that sub-contrast adjustment was finished prior to perform this adjustment

PREPARATION

Normalize the picture settings.

PROCEDURE

1. **Apply a color bar pattern.**
2. **In service mode adjust “R DR” and “B DR” data to “80”.**
3. **In service mode adjust “TINT” data so that the color does not become greenish or redish.**
4. **In service mode adjust “COLOR” data so that the color level is not too high (saturated) or too low (tending to black and white).**
5. **In service mode adjust “B-Y G” data so that blue and green seem natural.**
6. **Confirm that saturation and picture are normal (normal image).**
7. **If image is not satisfactory, repeat adjustment until the image is normal and natural.**

NOTE

The image can be compared against other set to see the image quality.

12.4. Color temperature adjustment / (B / W Tracking) / Service DAC Adjust. / (CUT R) (CUT G) (CUT B) (R DR) (B DR)

Minor Touch-Up Method

OBSERVE low and high brightness areas of a B/W picture for proper tracking. Adjust only as required for “good gray scale and warm highlights”.

1. **LOW LIGHT areas - In service mode for making electronic adjustments, select CUT R, CUT G, CUT B and adjust the picture for gray.**
2. **HIGH LIGHT areas - In service mode for making electronic**

adjustments, select drive R DR, B DR and adjust the picture for warm whites.

Complete adjustment

PREPARATION

1. **Turn the receiver “ON” and allow 30 minutes warm up at WHITE PATTERN.**
2. **Apply a color bar pattern (with no color).**
3. **Turn the SCREEN control (part of FBT T551) fully counterclockwise.**
4. **Preset the following service DACs for best results:**

   - **BRIGH_____1 D0**
   - **CUT R_____02 00**
   - **CUT G_____02 00**
   - **CUT B_____02 00**
   - **R DR_____07 FF**
   - **B DR_____07 FF**

PROCEDURE

1. **Connect the oscilloscope to KG (CRT-Board).**
2. **In service mode for making electronic adjustment, select “BRIGH” DAC.**
3. **Press RECALL button on the remote control to collapse the raster. (service SW).**
4. **Connect oscilloscope to KG on C-Board and adjust service mode “CUT-G” DAC until 195±2V above DC ground is measured.**
5. **Remove the probe from KG.**
6. **Turn screen clockwise slowly until color is slightly appeared.**
7. **Then adjust “CUT R” and “CUT B” until line becomes white.**
8. **Press RECALL button on the remote to restore the raster.**
9. **Adjust “R DR” and “B DR” so the white seems like white and black like black.**

10. Apply a normal signal and confirm that the image is normal and a good gray scale.

11. If correction is needed perform minor touch-up method.

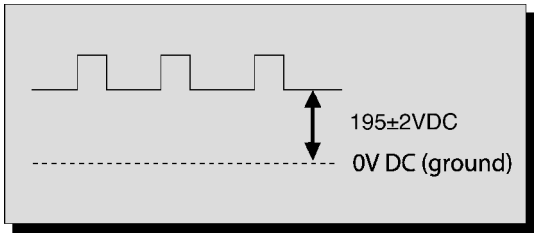

12.5. Deflection adjustments

To reset deflection adjustments

To reset deflection adjustments to factory adjusted default, enter to service mode (with red CHK displayed), press POWER button on remote to display the service menu, then press and hold RECALL button for at least three seconds, a reset message will appear in the image.
Use this feature when deflection adjustment gets off adjustment to the point that it cannot be adjusted back easily.

12.5.1. H-Center adjustment

PREPARATION

1. Apply a crosshatch pattern.

2. Normalize the picture settings.

PROCEDURE

1. Apply a monoscope pattern to center the picture.

Horizontal Center Adjustment

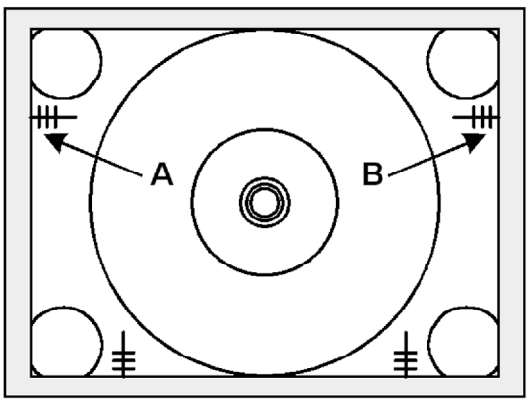

2. **If the horizontal center is not aligned, in service mode adjust “H POS” DATA to adjust the horizontal center of the monoscope pattern to the CRT center.**
3. **Verify that horizontal width (A & B mark) is within 4.5 ± 0.7.**

12.5.2. Horizontal width adjustment / (H-WID)

PREPARATION
Apply a pattern that permits the centering of the image.

Procedure:

1. **Adjust “VRAS” data so that the picture is in the center and lines are straight (check mark on CRT sides).**
2. **Apply a crosshatch pattern.**
3. **Adjust “PCC” data to make lines straight.**
4. **Adjust “H-WID” data to correct vertical size of the image.**
5. **Adjust “VEAMP” data to correct vertical size of the image.**

12.5.3. Vertical linearity(V-C), V-Size and V-Position adjustment

PREPARATION

1. **Apply a crosshatch pattern**
2. **Normalize the picture settings.**

PROCEDURE

1. **Enter service mode, select DAC adjustment / “V-POS” and adjust monoscope pattern to the center vertical position of the CRT center mark.**
2. **Adjust linearity data “V-C” so that interval of “a” is same as “b” (a= b).**

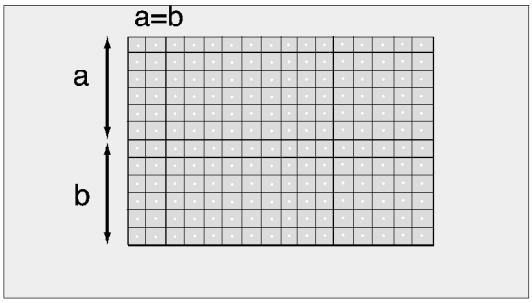

3. If the v-position is not at the CRT center, adjust / V position “V POS” DATA again.
4. Apply a monoscope pattern.
5. Confirm that center horizontal line is in center mark on CRT.
6. Adjust “VEAMP” register for correct vertical size by making monoscope round circle leaving 4 marks off the CRT edge.

Vertical centering adjustment.

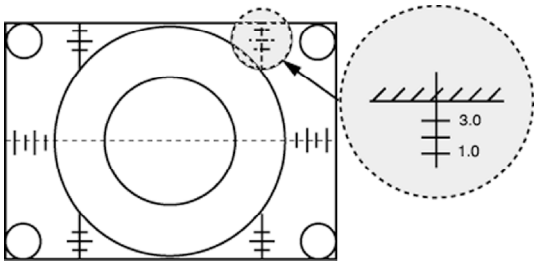

12.5.4. V-S Correction adjustment

PREPARATION

1. Apply a crosshatch pattern
2. Normalize the picture settings.

PROCEDURE

1. Enter to service mode
2. Check a and b sizes, If b-a < -1.5mm (in top & bottom extending case)

    - Increase “V-S” DATA by one step

NOTE

Repeat “a” and “b” until b-a ± 1.5mm

3. Confirm to make outermost circle of monoscope pattern a correct circle

V-Adjustment

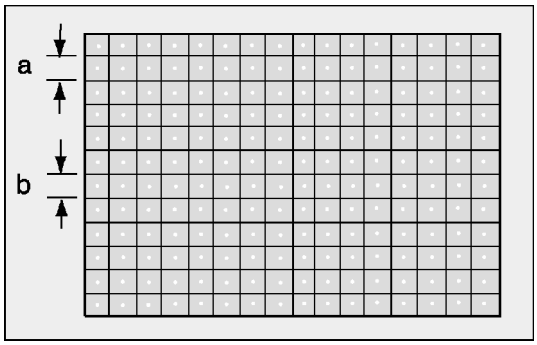

12.5.5. Trapezoid adjustment (TRAP)

PREPARATION

1. Apply a crosshatch pattern.

2. Normalize the picture icon video adjustments.

Procedure:

1. Enter service mode, select “TRAP” and adjust DATA so that lines at right and left are vertical like a solid line.

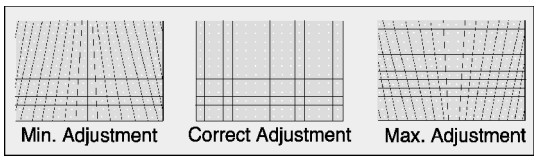

12.5.6. PCC adjustment (PCC)

This adjustment helps to correct left and right curved sides of picture.

PREPARATION

1. Apply a crosshatch pattern.

2. Normalize the picture icon video adjustments.

Procedure:

1. Adjust “PCC” data so that the first and third line make a good balance (see figure below).

PCC Adjustment

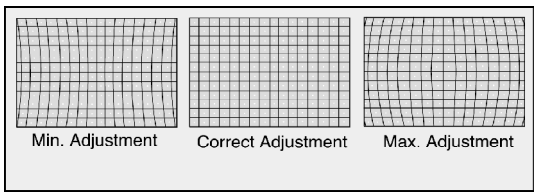

12.5.7. Corner PCC adjustment / (TOPG, TOPSL, BTMG, BTMSL)

This controls help to adjust top and bottom sides of picture.

PREPARATION

1. Apply a crosshatch pattern.
2. Normalize the picture icon video adjustments.

Procedure:

1. Adjust “TOPG” and “TOPSL” data to correct upper side of the image linearity.
2. Adjust “BTMG” and “BTMSL” data to correct lower side of the image (see figure below).

Top and bottom adjustment

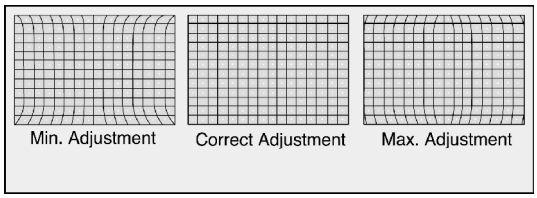

12.6. MTS circuit adjustments

The MTS circuit adjustments require two steps:

1. Input level adjustment.
2. Stereo separation adjustment.

Input level adjustment / Service DAC adjustment (MTSIN)

PREPARATION

1. Connect an RMS meter with filter jig as shown in figure to TPE11.

Filter Jig

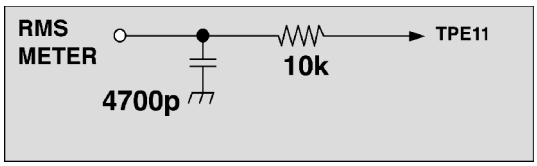

2. Connect an RF signal generator to the RF antenna input.

PROCEDURE

1. Apply the following signal from the RF signal generator:

- **Video: 100 IRE flat field, 30% modulation.**
- **Audio: 300Hz, 100% modulation, monaural (70 ±5dB, 75 Ω OPEN, P/S 10dB). Make sure that the 75 μ s pre-emphasis is OFF.**

2. Adjust the MTS input level adjustment "MTSIN" data until the RMS voltage measured is 120 ± 4.0mVrms.

Stereo separation adjustment (SEPAH)

PREPARATION

1. Connect an R.F. signal generator to the RF antenna input.

2. Connect a scope to TPE10.

PROCEDURE

1. Select stereo mode in audio menu

2. Apply the following signal from the RF signal generator:

- **Video: 100 IRE flat field, 30% modulation.**
- **Audio: 300Hz, 30% modulation, stereo (left only) (70±5dB, 75 Ω OPEN, P/S 10dB).**

NOTE

After setting 30% modulation with P.L. SW and N.R. SW OFF, turn P.L. SW and N.R. SW ON.

3. **In service mode, adjust the MTS Low-Level separation adjustment "SEPAL" data until the amplitude displayed on the scope is minimum.**
4. **Apply the following signal from the RF signal generator:**

   - Video: 100 IRE flat field, 30% modulation
   - Audio: 3KHz, 30% modulation, stereo (left only) (70 ±5dB, 75 Ω OPEN, P/S 10dB).

   NOTE
   After setting 30% modulation with P.L. SW and N.R. SW OFF, turn P.L. SW and N.R. SW ON.

5. **Adjust the MTS High-level separation adjustment "SEPAH" until the amplitude displayed on the scope is minimum.**
6. **Repeat above steps 2 through 5 until the amplitude is at minimum for both signals.**

13. Identification of Components

13.1. Chassis Components

Rear View

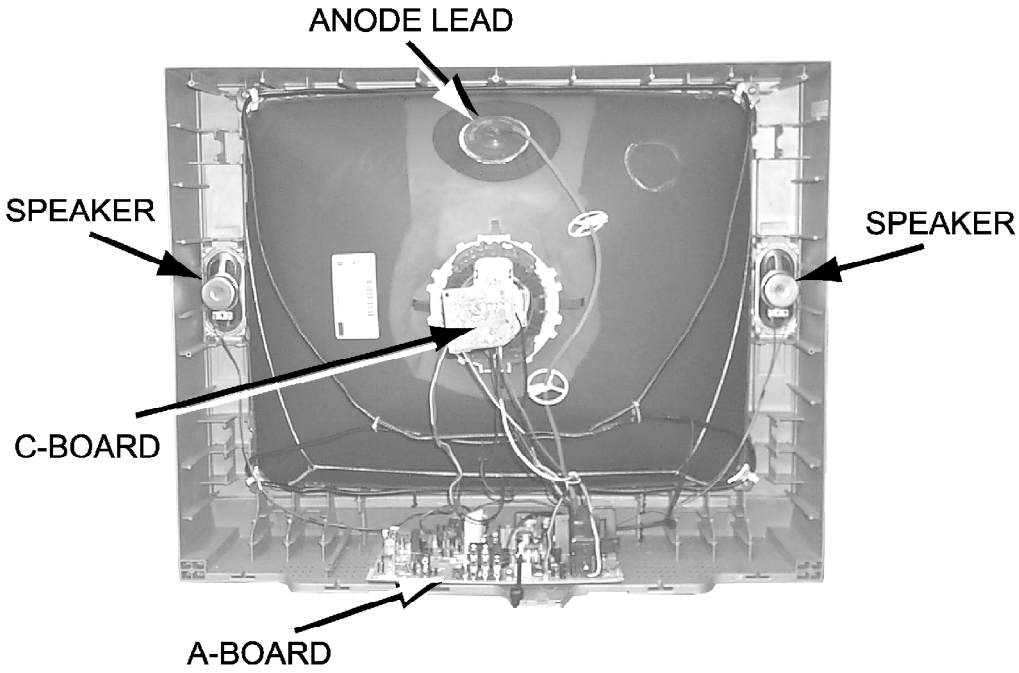

13.1.1. C-Board Chassis

C-Board component location

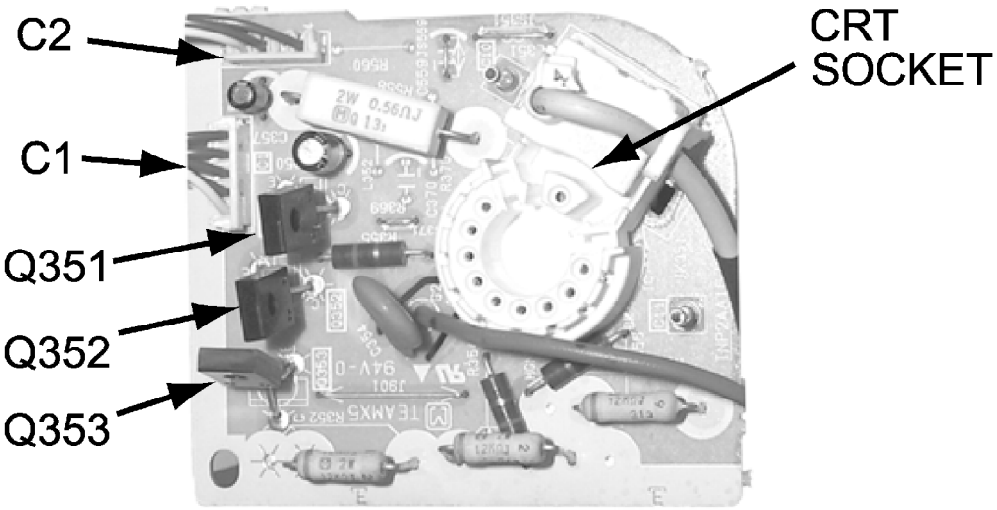

13.1.2. A-Board Chassis

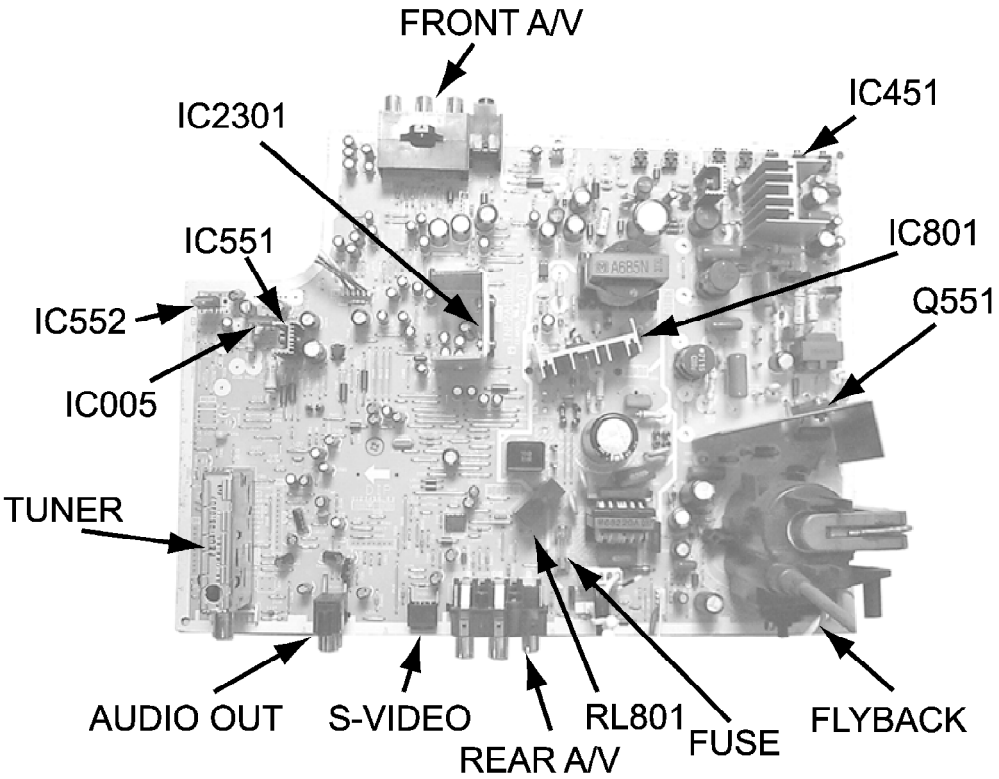

13.1.3. A-Board Surface-mounted components

A-Board (bottom view)

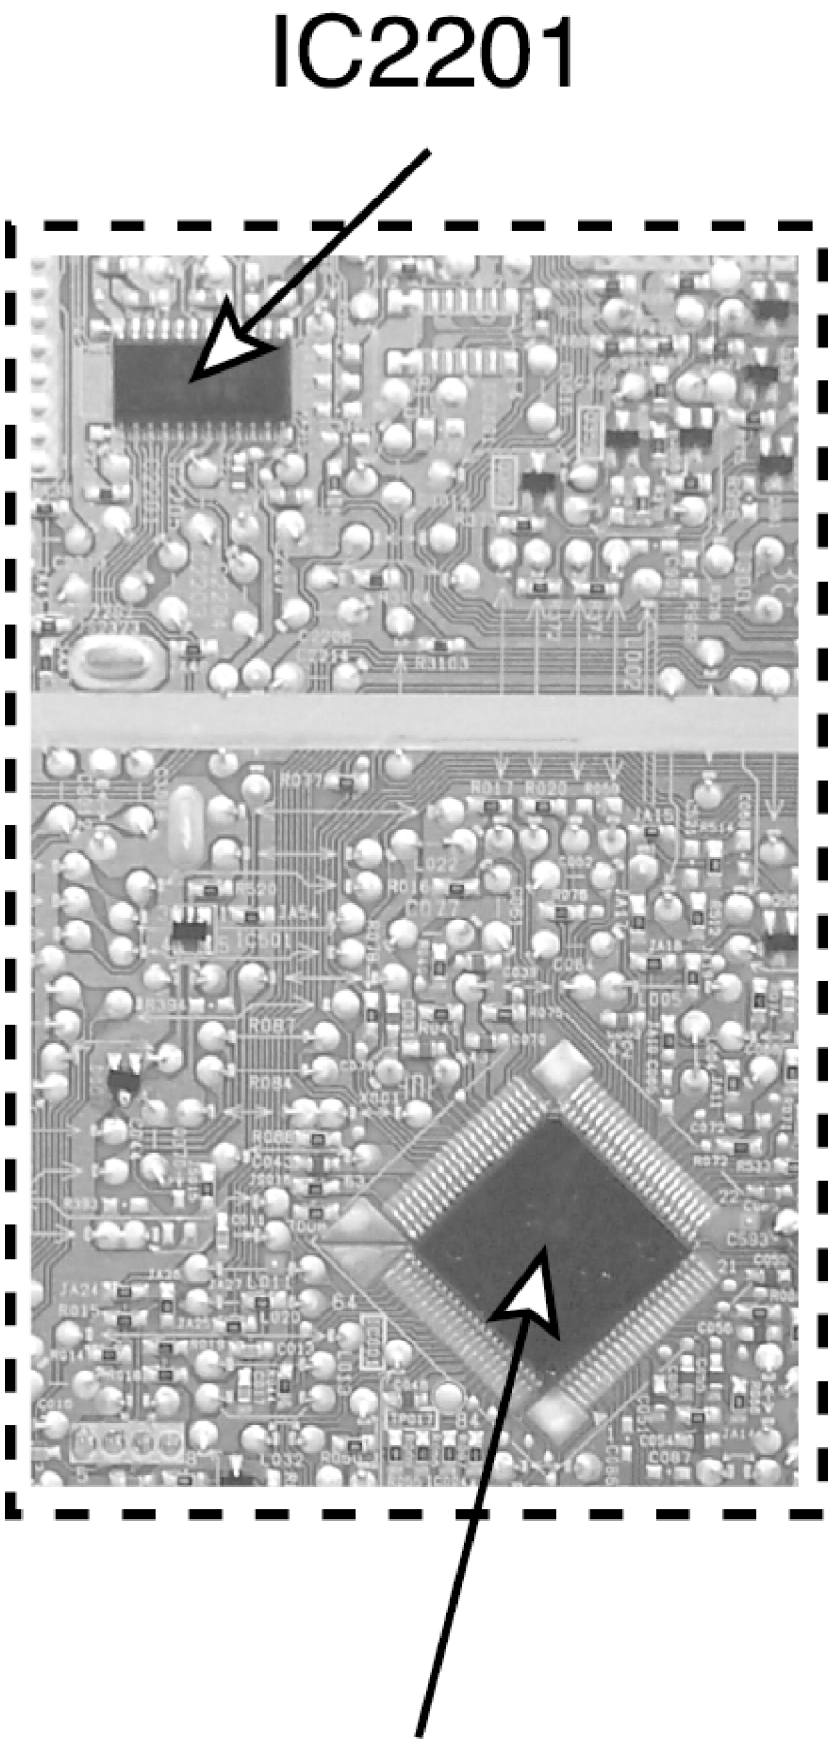
IC2201

IC001

14. Reference for PDF Colors

DESCRIPTION OF PDF LINK COLORS	
TYPE	DESTINATION
SCHEMATIC	
YELLOW ON IC	IC ON PCB
YELLOW ON CONNECTOR	CONNECTOR ON PCB
YELLOW ON SCHEMATIC	PCB
CYAN	WAVEFORM
GREEN ON SIDE	SCHEMATIC CONTINUED
GREEN ON CONNECTOR	CONNECTOR CONNECTION
BLUE ON IC	VOLTAGE
PCB	
BLUE ON IC	IC ON SCHEMATIC
BLUE ON CONNECTOR	CONNECTOR ON SCHEMATIC
BLUE ON PCB	SCHEMATIC
GREEN ON SIDE	PCB CONTINUED
BLOCK DIAGRAMS	
GREEN ON IC	IC ON SCHEMATIC
GREEN ON SIDE	BLOCK DIAGRAM CONTINUED

15. Conductor Views

15.1. A-Board Printed Circuit TNP2AH060 (Left Side)

15.2. A-Board TNP2AH060 (Right Side) & C Board TNP2AA167 Printed Circuit

16. Block Diagrams

16.1. Video Signal Block Diagram

16.2. Audio Signal Block Diagram

17. Schematics

17.1. English Schematic Notes

Notes:

IMPORTANT SAFETY NOTICE

THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES THAT ARE IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS DESIGNATED WITH A ⚠ IN THE SCHEMATIC.

CHIP TRANSISTOR LEAD DESIGNATION



SCHEMATIC NOTES

1. Resistors are carbon 1/4W unless noted otherwise.
2. Capacitors are ceramic 50V unless noted otherwise.
3. Coil value notes is inductance in μH.
4. Test point indicated by ; Test point but no pin .
5. Components indicated with ⚠ are critical parts and replacement should be made with manufacture specified replacement parts only.
6. ▬ (**BOLD LINE**) indicates the route of B+ supply.
7. The schematic diagrams are current at the time of printing and are subject to change without notice.
8. Ground symbol ⏚ indicates **HOT GROUND CONNECTION**; ⏚ indicates COLD GROUND.

NOTE: All other component symbols are used for engineering design purposes.

VOLTAGE MEASUREMENTS

1. Voltage measurement:
   - AC input to the Receiver is 120V. NTSC (HD, 1125i & 525P when applicable) signal generator is connected to the antenna of the Receiver. (Color bar pattern of 100 IRE white and 7.5 IRE black.)
   - All Picture and Audio adjustments are set to Normalize.
     TV ANT/CABLE - (Set-Up Menu) in TV/ANT Mode
     Volume - Min.
     TV/Video SW - TV position
     Audio Mode - Stereo
   - Voltage readings are nominal and may vary ±10% on active devices. Some voltage reading will vary with signal strength and picture content.
   - Supply voltages are nominal.
2. Ground symbol ⏚ indicates ground lead connection of meter.
   Incorrect ground connection will result in erroneous readings.

CAUTION: ***Incorrect ground connection of the test equipment will result in erroneous readings.***

WAVEFORM MEASUREMENTS

1. ③ indicates waveform measurement. (Measurement can be taken at the best accessible location in common to the indicated point.)
2. Taken with an NTSC signal generator connected to the antenna terminal. (NTSC color bar pattern of 8 bars of EIA colors, 100 IRE white and 7.5 IRE black.)
3. Customer Controls (Picture/Audio Menu) are set to Normalize. Volume is set to "MIN".
4. All video and color waveforms are taken with a wideband scope and a probe with low capacitance (10 to 1). Shape and peak altitudes may vary depending on the type of Oscilloscope used and its settings.
5. Ground symbol ⏚ shown on waveform number indicates (Hot) ground lead connection of the Oscilloscope.

CAUTION: Incorrect ground connection of the test equipment will result in erroneous readings.

17.2. Notas de Esquematicos en Espa ñ ol

Notas

NOTA DE SEGURIDAD

LOS DIAGRAMAS ELÉCTRICOS INCLUYEN CARACTERÍSTICAS ESPECIALES MUY IMPORTANTES PARA LA PROTECCIÓN CONTRA RAYOS-X, QUEMADURAS Y DESCARGAS ELÉCTRICAS. CUANDO SE DE SERVICIO ES IMPORTANTE USAR PARA REEMPLAZO DE COMPONENTES CRITICOS, SOLO PARTES ESPECIFICADAS POR EL FABRICANTES. LOS COMPONENTES CRITICOS ESTAN SEÑALADOS EN LOS DIAGRAMAS POR EL SIMBOLO ⚠.

IDENTIFICACIÓN DE TERMINALES PARA TRANSISTORES EN *CHIP*



NOTAS DE LOS DIAGRAMAS

1. Las Resistencias son de Carbón de 1/4W, a menos que se indique otra característica.
2. Los Capacitores son de Cerámica para 50V, a menos que se indique otra característica.
3. El valor indicado de las Bobinas es la inductancia expresada en μH.
4. Los puntos de prueba en la terminal de algún componente son indicados por ● Los puntos de prueba fuera de los componentes se indican con ○.
5. Los componentes señalados con el símbolo ⚠ son considerados componentes críticos y deben ser reemplazados sólo con las partes especificadas por el fabricante.
6. ▬ (**LINEA GRUESA**) indica las líneas de alimentación de los Voltajes B+.
7. Los diagramas eléctricos están sujetos a cambio sin previo aviso.
8. El símbolo ⏚ indica que es una conexión a **Tierra Caliente** y el símbolo ⏚ indica conexión a **Tierra Fría**.

NOTA: Los demas símbolos de componentes incluidos son usados con fines de diseño.

MEDICIÓN DE VOLTAJES

1. Medición de voltaje:
   - El voltaje de entrada al Receptor es de 120V de Corriente Alterna. Un generador de patrones con formato NTSC se conecta a la entrada de la antena. (Patrón de Barras de Colores con 100 IREs para el Blanco y 7.5 IREs para el Negro.)
   - Los ajustes de los Menus Picture y Audio se normalizan.
     En el Menú Set-Up, en la opción ANTENA, se selecciona el modo de CABLE.
     El nivel de Volumen se minimiza.
     De los modos TV y Video, seleccionar el modo TV.
     Seleccionar modo Estereo del Audio.
   - Las mediciones de los voltajes son nominales y pueden variar hasta 10% en componentes en funcionamiento. Las lecturas de los voltajes pueden variar por la potencia de la señal y el contenido de la imagen.
   - Las fuentes de voltajes son nominales.
2. El símbolo ⏚ indica el tipo de tierra que se utiliza en la conexión del medidor.

PRECAUCION: Si no se utiliza la conexión a la tierra adecuada, se obtendrán mediciones equivocadas y podría dañar el equipo de medición.

MEDICIÓN DE FORMAS DE ONDA

1. Un símbolo como ③ indica el punto para medir una señal. (La medición puede hacerse en el punto con mayor accesibilidad, siempre que sea común al indicado.)
2. Se midieron utilizando un generador con formato NTSC conectado a la terminal de la antena. (Patrón de 8 Barras de Colores EAI, formato NTSC de 100 IREs para el Blanco y 7.5 IREs para el Negro.)
3. Los ajustes de usuario de los Menus PICTURE y AUDIO se normalizaron. Posteriormente el nivel de volumen se ajusta al mínimo.
4. Las formas de onda de Video y Color fueron tomadas con un osciloscopio de banda alta y con un punta de prueba de baja capacitancia (10 a 1). La forma y amplitud de las ondas puede variar según el tipo de osciloscopio que se utilice y sus características.
5. El símbolo de tierra ⏚ que aparece junto al número de la forma de onda, indica que se utiliza conexión a **Tierra Caliente** en el extremo negativo de la punta de prueba.

PRECAUCION: Si no se utiliza la conexión a la tierra adecuada, se obtendrán mediciones equivocadas y podría dañar el equipo de medición.

17.3. A-Board Schematic TNP2AH060KC (1 of 5)
17.4. A-Board Schematic TNP2AH060KC (2 of 5)
17.5. A-Board Schematic TNP2AH060KC (3 of 5)
17.6. A-Board Schematic TNP2AH060KC (4 of 5)
17.7. A-Board Schematic TNP2AH060KC (5 of 5)
17.8. C-Board Schematic TNP2AA167KA
17.9. Voltages
17.10. Waveforms

18. Parts Location

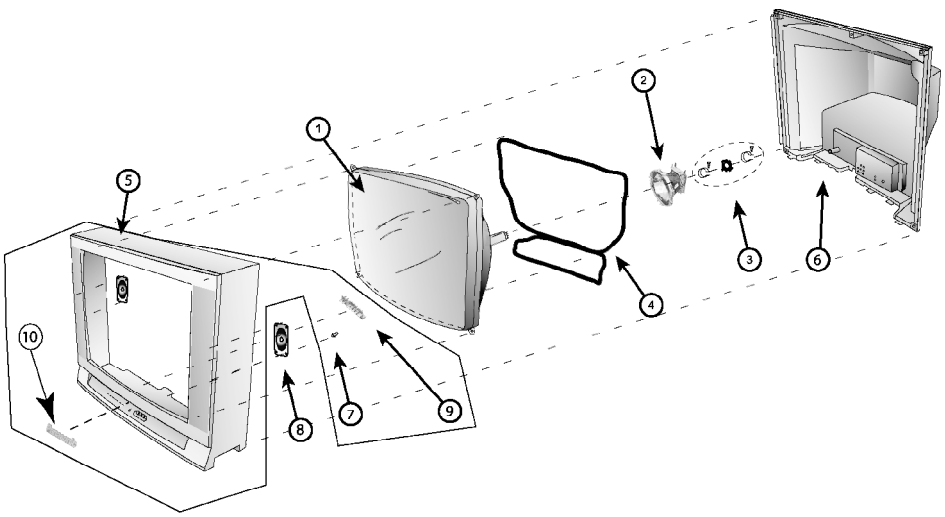

19. Parts List

19.1. Parts List Notes

Important Safety Notice

Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use manufacturer's specified parts.

Abbreviation of part name and description

1. Resistor

Example :

ERD25TJ104 **C** 100KΩ, **J**, 1/4W
Type Allowance

Type	Allowance
C : Carbon	F : ± 1%
F : Fuse	G : ± 2%
M : Metal Oxide Metal Film	J : ± 5% K : ± 10%
S : Solid	M : ± 20%
W : Wire Wound	

2. Capacitor

Example :

ECKF1H103ZF **C** 0.01µF, **Z**, 50V
Type Allowance

Type	Allowance
C : Carbon	C : ± 0.25pF
E : Electrolytic	D : ± 0.5pF
P : Polyester Polypropylene	F : ± 1pF G : ± 3%
T : Tantalum	J : ± 5%
	K : ± 10%
	L : ± 15%
	M : ± 20%
	P : ± 100%, -0%
	Z : ± 80%, -20%

19.2. Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CAPRISTORS	
CRA801	TP00842-51	CAPRISTOR	⚠
		CAPACITORS	
C003	ECA1HM4R7B	CAP,E 4.7UF-50V	
C004	TCJ2VC1H150J	CAP,C 15PF-J-50V	
C005	TCJ2VC1H150J	CAP,C 15PF-J-50V	
C008	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C009	ECJ2VF1H104Z	CAP,C .1UF-Z-50V	
C010	TCJ2VC1H680J	CAP,C 68PF-J-50V	
C011	TCJ2VC1H680J	CAP,C 68PF-J-50V	
C012	ECJ2VB1C104K	CAP,C .1UF-K-16V	
C013	TCJ2VC1H680J	CAP,C 68PF-J-50V	
C016	ECA1AM101B	CAP,E 100UF-10V	
C017	TCJ2VC1H680J	CAP,C 68PF-J-50V	
C018	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C019	ECA0JM102B	CAP,E 1000UF-6.3V	
C020	ECA1CM102B	CAP,E 1000UF-16V	
C021	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C031	TCJ2VC1H220J	CAP,C 22PF-J-50V	
C032	ECA1AM470B	CAP,E 47UF-10V	
C034	TCJ2VC1H390J	CAP,C 39PF-J-50V	
C035	TCJ2VC1H120J	CAP,C 12PF-J-50V	
C038	ECA1CM470B	CAP,E 47UF-16V	
C039	TCJ2VB1H221K	CAP,C 220PF-K-50V	

Ref. No.	Part No.	Part Name & Description	Remarks
C041	ECA1HM2R2B	CAP,E 2.2UF-50V	
C043	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C044	ECA0JM102B	CAP,E 1000UF-6.3V	
C046	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C048	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C051	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C052	ECA1CM101B	CAP,E 100UF-16V	
C053	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C054	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C055	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C056	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C057	ECEA1CN100UB	CAP,E 10UF-16V	
C058	ECEA1CN100UB	CAP,E 10UF-16V	
C059	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C060	ECEA1CN220UB	CAP,E 22UF-16V	
C061	ECA1HM100B	CAP,E 10UF-50V	
C062	ECA1HM100B	CAP,E 10UF-50V	
C063	ECJ2VF1C104Z	CAP,C .1UF-Z-16V	
C064	ECA1CM101B	CAP,E 100UF-16V	
C066	TCJ2VC1H330J	CAP,C 33PF-J-50V	
C067	TCJ2VC1H680J	CAP,C 68PF-J-50V	
C068	ECA1CM100B	CAP,E 10UF-16V	
C070	ECJ2VF1C104Z	CAP,C .1UF-Z-16V	
C071	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C072	TCJ2VB1H221K	CAP,C 220PF-K-50V	
C073	TCJ2VC1H101J	CAP,C 100PF-J-50V	
C077	ECA1HM100B	CAP,E 10UF-50V	
C079	TCJ2VC1H220J	CAP,C 22PF-J-50V	
C083	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C085	ECJ2VB1C104K	CAP,C .1UF-K-16V	
C350	ECA1CM101B	CAP,E 100UF-16V	
C351	TCJ2VC1H331J	CAP,C 330PF-J-50V	
C352	TCJ2VC1H331J	CAP,C 330PF-J-50V	
C353	TCJ2VC1H331J	CAP,C 330PF-J-50V	
C354	ECKW3D102KBR	CAP,C 100PF-K-2KV	
C357	EEANA1E1R0B	CAP,E 1.0UF-25V	
C359	ECA1CM471B	CAP,E 470UF-16V	
C360	ECA1HM4R7B	CAP,E 4.7UF-50V	
C403	ECEA1CN220UB	CAP,E 22UF-16V	
C411	ECQB1H683JF3	CAP,P .068UF-J-50V	
C451	ECA1HM2R2B	CAP,E 2.2UF-50V	
C452	ECA1CM220B	CAP,E 22UF-16V	
C454	ECA1VHG101B	CAP,E 100UF-35V	
C455	ECA1EM102E	CAP,E 1000UF-25V	
C458	ECA1HM010B	CAP,E 1UF-50V	
C459	ECA1VHG471B	CAP,E 470UF-35V	
C460	ECQB1224KF3	CAP,P .22UF-K-100V	
C461	ECQB1104JF3	CAP,P .10UF-J-100V	
C462	ECJ2VF1H103Z	CAP,C .01UF-Z-50V	
C501	ECJ2VB1H221K	CAP,C 220PF-K-50V	
C505	ECQB1H104JF3	CAP,P .10UF-J-50V	
C506	ECKR2H102KB5	CAP,C 1000PF-K-500V	
C510	ECCR2H100D5	CAP,C 10PF-D-500V	
C512	ECA2CM100B	CAP,E 10UF-160V	

Ref. No.	Part No.	Part Name & Description	Remarks
C531	ECA1HM4R7B	CAP,E 4.7UF-50V	⚠
C540	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C551	ECA1VHG471B	CAP,E 470UF-35V	⚠
C551	ECA1VM471B	CAP,E 470UF-35V	
C554	ECKR2H561KB5	CAP,C 560PF-K-500V	
C555	ECA2EM220E	CAP,E 22UF-250V	⚠
C556	ECA1CM471B	CAP,E 470UF-16V	⚠
C557	ECKR2H102KB5	CAP,C 1000PF-K-500V	
C560	ECQB1104JF3	CAP,P .10UF-J-100V	
C561	ECEA1HN010UB	CAP,E 1UF-50V	
C562	ECKR2H561KB5	CAP,C 560PF-K-500V	
C563	ECWH20133JVB	CAP,P 13000PF-J-2KV	⚠
C564	ECWH20332JVB	CAP,P 3300PF-J-250V	⚠
C565	ECKW3D122JBR	CAP,C 1200PF-J-2KV	⚠
C566	ECKW3D181JBP	CAP,C 180PF-J-2KV	⚠
C568	ECQM4473JZW	CAP,P .047UF-J-400V	⚠
C569	ECWF2434JSR	CAP,P .43UF-J-250V	⚠
C570	ECA1CM221B	CAP,E 10UF-16V	
C571	ECA1CM220B	CAP,E 22UF-16V	
C572	ECA0JM221B	CAP,E 220UF-6.3V	
C573	ECA1CM101B	CAP,E 100UF-16V	
C575	ECKR2H471KB5	CAP,C 470PF-K-500V	
C593	ECA1CM470B	CAP,E 47UF-16V	
C605	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C606	ECA0JM221B	CAP,E 220UF-6.3V	
C756	ECKR2H332KB5	CAP,C 3300PF-K-550V	
C759	ECQE1395KNB	CAP,P 3.95UF-K-100V	⚠
C760	ECQM2104KZW	CAP,P .1UF-K-200V	⚠
C763	ECKR3A121KBP	CAP,C 120PF-K-1KV	
C800	ECKR3A221KBP	CAP,C 220PF-K-1KV	
C801	ECKWAE472ZED	CAP,C .0047UF-Z-250V	⚠
C802	ECKWAE472ZED	CAP,C .0047UF-Z-250V	⚠
C803	ECKWAE472ZED	CAP,C .0047UF-Z-250V	⚠
C805	EC0S2DA471BB	CAP,E 470UF-200V	⚠
C806	ECQM4103KZW	CAP,P .01UF-K-400V	
C808	ECA1HM470B	CAP,E 47UF-50V	
C809	TACCW471T50V	CAP,C 470PF-K-50V	
C810	TACCW471T50V	CAP,C 470PF-K-50V	
C812	ECQU2A224MLA	CAP,P .22UF-M-250V	⚠
C813	ECQU2A682MLA	CAP,P .0068UF-M-250V	⚠
C815	ECQU2A224MLA	CAP,P .22UF-M-250V	⚠
C820	ECA1CM101B	CAP,E 100UF-16V	
C821	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C822	ECKR3A221KBP	CAP,C 220PF-K-1KV	
C823	ECA1VM471B	CAP,E 470UF-35V	⚠
C824	ECKR3A102KBP	CAP,C 1000PF-K-1KV	
C825	EEUMG2C221SC	CAP,E 220UF-160V	⚠

Ref. No.	Part No.	Part Name & Description	Remarks
C826	ECKR3A471KBP	CAP,C 470PF-K-1KV	
C827	ECA1CM102B	CAP,E 1000UF-16V	
C828	ECA160V33UE	CAP,E 33UF-160V	⚠
C829	ECA1CM471B	CAP,E 470UF-16V	
C830	ECA1CM471B	CAP,E 470UF-16V	
C2201	ECA1HM4R7B	CAP,E 4.7UF-50V	
C2202	ECA1HM2R2B	CAP,E 2.2UF-50V	
C2203	ECA1HM4R7B	CAP,E 4.7UF-50V	
C2204	AP106K016CAE	CAP,T 1OUF-16V	
C2205	ECA1HMR33B	CAP,E .33UF-50V	
C2206	ECQB1H223JF3	CAP,P .022UF-J-50V	
C2207	AP335K016CAE	CAP,T 3.3UF-16V	
C2208	ECJ2VB1C104K	CAP,C .1UF-K-16V	
C2209	ECJ2VB1C104K	CAP,C .1UF-K-16V	
C2210	ECJ2VB1C104K	CAP,C .1UF-K-16V	
C2212	ECQB1H473JF3	CAP,P .047UF-J-50V	
C2213	ECA1HMR47B	CAP,E .47UF-50V	
C2214	ECA1AM101B	CAP,E 100UF-10V	
C2215	EEANA1E100B	CAP,E 10UF-25V	
C2216	TCJ2VC1H100D	CAP,C 10PF-J-50V	
C2217	ECJ2VB1H102K	CAP,C .001UF-K-50V	
C2218	ECJ2VB1H102K	CAP,C .001UF-K-50V	
C2219	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C2220	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C2301	ECA1EM102E	CAP,E 1000UF-25V	
C2302	ECA1HM010B	CAP,E 1UF-50V	
C2304	ECA1CM101B	CAP,E 100UF-16V	
C2307	ECA1CM102B	CAP,E 1000UF-16V	
C2308	ECJ2VF1H103Z	CAP,C .01UF-Z-50V	
C2309	ECA1HM010B	CAP,E 1UF-50V	
C2312	ECA1HM010B	CAP,E 1UF-50V	
C2313	ECA1EM101B	CAP,E 100UF-25V	
C2317	ECA1CM102B	CAP,E 1000UF-16V	
C2319	ECA1HM010B	CAP,E 1UF-50V	
C2350	ECA1CM101B	CAP,E 100UF-16V	
C2351	ECA0JM221B	CAP,E 220UF-6.3V	
C2505	EEANA1E4R7B	CAP,E 4.7UF-25V	
C2506	EEANA1E4R7B	CAP,E 4.7UF-25V	
C2507	TCJ2VB1H472K	CAP,C 4700PF-K-50V	
C2508	TCJ2VB1H472K	CAP,C 4700PF-K-50V	
C2509	ECJ2VB1C104K	CAP,C .1UF-K-16V	
C2510	ECJ2VB1C104K	CAP,C .1UF-K-16V	
C2511	ECA1HM010B	CAP,E 1UF-50V	
C2512	ECJ2VB1C104K	CAP,C .1UF-K-16V	
C2513	ECA1HM4R7B	CAP,E 4.7UF-50V	
C2514	ECA1HM4R7B	CAP,E 4.7UF-50V	
C2515	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C2516	ECA1HM4R7B	CAP,E 4.7UF-50V	
C2517	ECA1HM4R7B	CAP,E 4.7UF-50V	
C2518	ECA1HM4R7B	CAP,E 4.7UF-50V	
C2519	ECA1CM220B	CAP,E 22UF-16V	
C2520	ECJ2VF1H103Z	CAP,C .01UF-Z-50V	
C2531	ECA1HM4R7B	CAP,E 4.7UF-50V	
C2532	ECA1HM4R7B	CAP,E 4.7UF-50V	

Ref. No.	Part No.	Part Name & Description	Remarks
C3001	ECA1CM220B	CAP,E 22UF-16V	
C3002	ECA1CM220B	CAP,E 22UF-16V	
C3011	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C3012	ECA1HM010B	CAP,E 1UF-50V	
C3013	ECA1CM100B	CAP,E 10UF-16V	
C3014	ECA1CM100B	CAP,E 10UF-16V	
C3015	ECA1HM010B	CAP,E 1UF-50V	
C3016	ECA1HM010B	CAP,E 1UF-50V	
C3017	ECA1HM010B	CAP,E 1UF-50V	
C3018	ECA1HM010B	CAP,E 1UF-50V	
C3019	ECJ2VF1C105Z	CAP,C 1.0UF-Z-16V	
C3020	ECA1HM010B	CAP,E 1UF-50V	
C3025	ECA1HM100B	CAP,E 10UF-50V	
C3121	ECA1CM470B	CAP,E 47UF-16V	
C3122	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C3234	ECA1CM470B	CAP,E 47UF-16V	
C3240	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C4322	ECA1CM100B	CAP,E 10UF-16V	
C4323	ECA1CM470B	CAP,E 47UF-16V	
C4324	TCJ2VF1H103Z	CAP,C .01UF-Z-50V	
C4325	ECA1CM100B	CAP,E 10UF-16V	
		DIODES	
D001	MAZ30680ML	DIODE, ZENER	
D002	MA2C165001VT	DIODE	
D003	MAZ30510HL	DIODE	
D006	MAZ33000HL	DIODE	
D007	MAZ30510HL	DIODE	
D010	MAZ40510MF	DIODE, ZENER	
D055	MAZ40330MF	DIODE, ZENER	
D360	MA2C165001VT	DIODE	
D380	MA2C029WBF	DIODE	
D451	B0EAKL000008	DIODE, RECTIFIER	
D452	MA2C165001VT	DIODE	
D505	D1NL40V70	DIODE	
D531	MA2C165001VT	DIODE	⚠
D551	B0HAMM000072	DIODE, FAST RECOVERY	⚠
D554	AU02V0	DIODE, RECTIFIER	⚠
D556	MA2C165001VT	DIODE	
D557	MAZ40270LF	DIODE, ZENER	
D558	B0HANV000008	DIODE	
D559	EU2V1	DIODE	
D561	AU02V0	DIODE, RECTIFIER	⚠
D606	MA2C165001VT	DIODE	
D753	AU01ZV0	DIODE	
D801	D3SBA60-4103	DIODE	⚠
D803	MAZ41200MF	DIODE, ZENER	
D806	TAP2AA0003	PTC 3-OHM	⚠
D808	SARS01V1	DIODE	
D809	B0HAJP000015	DIODE	
D810	B0HAJP000015	DIODE	
D811	B0HAJP000015	DIODE	
D820	MA2C165001VT	DIODE	

Ref. No.	Part No.	Part Name & Description	Remarks
D821	MAZ40470HF	DIODE, ZENER	
D822	B0HAMM000103	DIODE	
D823	S3L60P154004	DIODE	⚠
D824	B0HAMM000072	DIODE, FAST RECOVERY	
D2302	MAZ43000MF	DIODE, ZENER	
D2305	CVS20B120MTA	DIODE, ZENER	
D2307	CVS20B120MTA	DIODE, ZENER	
D2350	MAZ41000LF	DIODE, ZENER	
D2353	MA2C165001VT	DIODE	
D2354	MA2C165001VT	DIODE	
D2355	MAZ30510HL	DIODE	
D2360	CVS20B120MTA	DIODE, ZENER	
D2361	CVS20B120MTA	DIODE, ZENER	
D2501	MAZ31100ML	DIODE, ZENER	
D3001	MAZ40510MF	DIODE, ZENER	
D3004	CVS20B120MTA	DIODE, ZENER	
D3005	CVS20B120MTA	DIODE, ZENER	
D3007	CVS20B120MTA	DIODE, ZENER	
D3007	MAZ31100ML	DIODE, ZENER	
D3008	MAZ31100ML	DIODE, ZENER	
D3009	CVS20B120MTA	DIODE, ZENER	
D3009	MAZ31100ML	DIODE, ZENER	
D3010	MAZ31100ML	DIODE, ZENER	
D3011	CVS20B120MTA	DIODE, ZENER	
D3011	MAZ31100ML	DIODE, ZENER	
D3012	MAZ31100ML	DIODE, ZENER	
D3017	CVS20B120MTA	DIODE, ZENER	
D3017	MAZ31100ML	DIODE, ZENER	
D3018	MAZ31100ML	DIODE, ZENER	
D3019	CVS20B120MTA	DIODE, ZENER	
D3021	CVS20B120MTA	DIODE, ZENER	
D3023	CVS20B120MTA	DIODE, ZENER	
D3023	MAZ31100ML	DIODE, ZENER	
D3024	MAZ31100ML	DIODE, ZENER	
		FUSES	
F801	XBA2A00101	FUSE 6.3A 125V	⚠
		INTEGRATED CIRCUITS	
IC001	MN101E11GTD1	INT CKT (MPU)	
IC002	TVR2AJ181S	INT CKT	
IC003	GP1UE282GK	DIODE	
IC004	PST9128NR	INT CKT	
IC005	PQ3RD13	INT CKT	
IC451	AN15525A	INT CKT	
IC501	NC7SZU04M5X	INT CKT	
IC551	AN78M09LB	INT CKT	
IC552	AN78M05LB	INT CKT	
IC801	STRW5634	INT CKT	⚠
IC802	PC123X2YFZ	OPTO COUPLER	⚠
IC2201	AN5829S-E1V	INT CKT	
IC2301	AN17807A	INT CKT	
IC2501	NJW1165MTE1	INT CKT	
IC3001	MM1114XFBE	INT CKT	
IC3002	MM1501XNRE	INT CKT	

Ref. No.	Part No.	Part Name & Description	Remarks
IC3101	74HC4066D653	INT CKT	
		COILS	
L002	EXCELSA39V	EMI BEAD CORE	
L005	EXCELSA35T	FERRITE BEAD	
L006	EXCELSA35T	FERRITE BEAD	
L007	ELESN330JA	COIL, 33UH	
L008	G0C470KA0029	COIL, PEAKING 47UH	
L010	G0C2R2KA0029	COIL, PEAKING 2.2UH	
L011	EXCELSA26T	FERRITE BEAD	
L012	G0C2R2KA0029	COIL, PEAKING 2.2UH	
L013	EXCELSA26T	FERRITE BEAD	
L014	ELESN180KA	COIL, PEAKING 18UH	
L015	ELESN3R3JA	COIL PEAKING 3.3UH	
L020	EXCELSA26T	FERRITE BEAD	
L032	EXCELSA26T	FERRITE BEAD	
L045	EXCELSA35T	FERRITE BEAD	
L108	EXCELSA35T	FERRITE BEAD	
L110	G0C101KA0021	COIL, PEAKING 100UH	
L148	EXCELSA24T	FERRITE BEAD	
L245	EXCELSA35T	FERRITE BEAD	
L312	EXCELSA24T	FERRITE BEAD	
L551	ELH5L7115	COIL, HORIZONTAL LINEARITY	⚠
L552	EXCELSA39V	EMI BEAD CORE	
L751	ELC18B301L	COIL, CHOKE	⚠
L752	TALL13N103JB	COIL	
L753	EXCELSA35T	FERRITE BEAD	
L755	EXCELSA39V	EMI BEAD CORE	
L756	EXCELSA39V	EMI BEAD CORE	
L801	ELF21V020A	COIL	⚠
L802	TALL08T470KA	COIL	
L803	TALL08T680KA	COIL	
L804	EXCELDR35V	FERRITE BEAD	
L805	EXCELDR35V	FERRITE BEAD	
L806	EXCELDR35V	FERRITE BEAD	
L807	EXCELSA35T	FERRITE BEAD	
L808	EXCELSA35T	FERRITE BEAD	
L809	EXCELDR35V	FERRITE BEAD	
L810	EXCELDR35V	FERRITE BEAD	
L2301	EXCELSA35T	FERRITE BEAD	
L2303	EXCELSA39V	EMI BEAD CORE	
L2305	EXCELSA35T	FERRITE BEAD	
		TRANSISTORS	
Q001	2SC584500L	TRANSISTOR	
Q057	2SA207700L	TRANSISTOR	
Q058	2SA207700L	TRANSISTOR	
Q070	2SC584500L	TRANSISTOR	
Q092	2SA207700L	TRANSISTOR	
Q351	2SC3063RL	TRANSISTOR	
Q352	2SC3063RL	TRANSISTOR	
Q353	2SC3063RL	TRANSISTOR	
Q354	2SC584500L	TRANSISTOR	
Q355	2SC584500L	TRANSISTOR	
Q356	2SC584500L	TRANSISTOR	

Ref. No.	Part No.	Part Name & Description	Remarks
Q357	2SC584500L	TRANSISTOR	
Q358	2SC584500L	TRANSISTOR	
Q359	2SC584500L	TRANSISTOR	
Q360	2SA207700L	TRANSISTOR	
Q361	2SA207700L	TRANSISTOR	
Q362	2SA207700L	TRANSISTOR	
Q411	2SB0710AQL	TRANSISTOR	
Q412	2SD0602AQL	TRANSISTOR	
Q451	2SA207700L	TRANSISTOR	
Q501	2SC4212HLB	TRANSISTOR	
Q551	2SC5902000LK	TRANSISTOR	⚠
Q560	2SA207700L	TRANSISTOR	
Q605	2SA207700L	TRANSISTOR	
Q606	2SC584500L	TRANSISTOR	
Q751	B1DACM000001	TRANSISTOR	
Q757	2SC1685QRSTA	TRANSISTOR	
Q801	2SC584500L	TRANSISTOR	
Q802	2SC584500L	TRANSISTOR	
Q820	2SA1767QTA	TRANSISTOR	
Q830	2SB1011QRL	TRANSISTOR	
Q831	2SC1473ATA	TRANSISTOR	
Q2350	2SA207700L	TRANSISTOR	
Q2351	2SC584500L	TRANSISTOR	
Q2352	2SA207700L	TRANSISTOR	
Q2361	2SC584500L	TRANSISTOR	
Q2362	2SC584500L	TRANSISTOR	
Q2363	2SA207700L	TRANSISTOR	
Q3001	2SC584500L	TRANSISTOR	
Q3002	2SC584500L	TRANSISTOR	
Q3193	2SC584500L	TRANSISTOR	
Q3194	2SC584500L	TRANSISTOR	
		RELAYS	
RL801	K6B1AGA00042	RELAY	⚠
		RESISTORS	
R001	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R004	ERJ6GEYJ562V	RES,M 5.6K-J-1/10W	
R005	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R007	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R008	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R009	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R014	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R015	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R016	ERJ6GEYJ221V	RES,M 220-J-1/10W	
R017	ERJ6GEYJ221V	RES,M 220-J-1/10W	
R018	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R019	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R020	ERJ6GEYJ221V	RES,M 220-J-1/10W	
R021	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R022	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R023	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R024	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R025	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R026	ERDS1FJ561P	RES,C 560-J-1/2W	

Ref. No.	Part No.	Part Name & Description	Remarks
R027	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R032	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R033	ERJ6GEYJ222V	RES,M 2.2K-J-1/10W	
R034	ERJ6GEYJ222V	RES,M 2.2K-J-1/10W	
R035	ERJ6GEYJ332V	RES,M 3.3K-J-1/10W	
R036	ERJ6GEYJ512V	RES,M 5.1K-J-1/10W	
R037	ERJ6GEYJ912V	RES,M 9.1K-J-1/10W	
R038	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R039	ERDS2TJ102T	RES,C 1K-J-1/4W	
R040	ERJ6GEYJ680V	RES,M 68-J-1/10W	
R041	ERJ6GEYJ222V	RES,M 2.2K-J-1/10W	
R042	ERJ6GEYJ222V	RES,M 2.2K-J-1/10W	
R043	ERJ6GEYJ153V	RES,M 15K-J-1/10W	
R044	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R045	ERDS2TJ101T	RES,C 100-J-1/4W	
R046	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R047	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R048	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R050	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R052	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R053	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R055	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R056	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R057	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R060	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R061	ERJ6GEYJ221V	RES,M 220-J-1/10W	
R062	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R063	ERDS2TJ101T	RES,C 100-J-1/4W	
R064	ERJ6GEYJ473V	RES,M 47K-J-1/10W	
R065	ERDS2TJ101T	RES,C 100-J-1/4W	
R066	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R067	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R068	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R069	ERJ6GEYJ123V	RES,M 12K-J-1/10W	
R070	ERJ6GEYJ561V	RES,M 560-J-1/10W	
R071	ERJ6GEYJ680V	RES,M 68-J-1/10W	
R072	ERJ6GEYJ222V	RES,M 2.2K-J-1/10W	
R073	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R074	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R075	ERJ6ENF3902V	RES,M 39K-F-1/10W	
R076	ERJ6ENF6201V	RES,M 6.2K-F-1/10W	
R077	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R078	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R080	ERJ6GEYJ183V	RES,M 18K-J-1/10W	
R081	ERJ6GEYJ153V	RES,M 15K-J-1/10W	
R082	ERJ6GEYJ183V	RES,M 18K-J-1/10W	
R083	ERJ6GEYJ153V	RES,M 15K-J-1/10W	
R084	ERDS2TJ182T	RES,C 1.8K-J-1/4W	
R087	ERDS2TJ221T	RES,C 220-J-1/4W	
R088	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R092	ERJ6GEYJ473V	RES,M 47K-J-1/10W	
R093	ERJ6GEYJ331V	RES,M 330-J-1/10W	
R202	ERJ6GEYJ222V	RES,M 2.2K-J-1/10W	
R351	ERG2FJ123H	RES,M 12K-J-2W	

Ref. No.	Part No.	Part Name & Description	Remarks
R352	ERG2FJ123H	RES,M 12K-J-2W	
R353	ERG2FJ123H	RES,M 12K-J-2W	
R354	ERC12GK272C	RES,M 2.7K-C-.5W	
R355	ERC12GK272C	RES,M 2.7K-C-.5W	
R356	ERC12GK272C	RES,M 2.7K-C-.5W	
R357	ERJ6ENF2700V	RES,M 270-F-1/10W	
R358	ERJ6ENF2700V	RES,M 270-F-1/10W	
R359	ERJ6ENF2700V	RES,M 270-F-1/10W	
R360	ERJ6ENF6800V	RES,M 680-F-1/10W	
R361	ERJ6ENF6800V	RES,M 680-F-1/10W	
R362	ERJ6ENF6800V	RES,M 680-F-1/10W	
R363	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R364	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R365	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R371	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R372	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R373	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R374	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R375	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R376	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R377	ERJ6ENF3300V	RES,M 330-F-1/10W	
R378	ERJ6ENF3300V	RES,M 330-F-1/10W	
R379	ERJ6ENF3300V	RES,M 330-F-1/10W	
R380	ERJ6ENF1501V	RES,M 1.5K-F-1/10W	
R381	ERJ6ENF1501V	RES,M 1.5K-F-1/10W	
R382	ERJ6ENF1501V	RES,M 1.5K-F-1/10W	
R383	ERJ6ENF3481V	RES,M 3.48K-F-1/10W	
R384	ERJ6ENF7500V	RES,M 750-F-1/10W	
R385	ERDS1FJ150P	RES,C 15-J-1/2W	
R389	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R390	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R391	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R411	ERJ6GEYJ682V	RES,M 6.8K-J-1/10W	
R412	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R413	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R414	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R451	ERDS1FJ1R0P	RES,C 1.0-J-1/2W	
R453	ERJ6GEYJ333V	RES,M 33K-J-1/10W	
R454	ERJ6GEYJ363V	RES,M 36K-J-1/10W	
R455	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R456	ERG3FJ151	RES,M 150-J-3W	
R457	ERDS1FJ1R0P	RES,C 1.0-J-1/2W	
R458	ERJ6GEYJ123V	RES,M 12K-J-1/10W	
R459	ERJ6GEYJ152V	RES,M 1.5K-J-1/10W	
R461	ERJ6GEYJ331V	RES,M 330-J-1/10W	
R462	ERJ6GEYJ272V	RES,M 2.7K-J-1/10W	
R463	ERJ6GEYJ473V	RES,M 47K-J-1/10W	
R464	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R465	ERJ6GEYJ122V	RES,M 1.2K-J-1/10W	
R468	ERJ6ENF1962V	RES,M 19.6K-F-1/10W	
R469	ERJ6ENF5621V	RES,M 5.62K-F-1/10W	
R471	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R504	ERDS2TJ102T	RES,C 1K-J-1/4W	
R505	ERJ6GEYJ562V	RES,M 5.6K-J-1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R506	ERG1SJ562P	RES,M 5.6K-J-1W	
R507	EROS2THF1802	RES,M 18K-F-1/4W	⚠
R509	ERJ6ENF1002V	RES,M 10K-F-1/10W	⚠
R510	ERG3FJ472	RES,M 4.7K-3W	⚠
R511	ERG3FJ472	RES,M 4.7K-3W	⚠
R512	ERJ6GEYJ222V	RES,M 2.2K-J-1/10W	
R514	ERJ6GEYJ392V	RES,M 3.9K-J-1/10W	
R515	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R520	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R530	ERQ2CJPR56S	RES,F .56-J-2W	
R532	ERJ6ENF2202V	RES,M 22K-F-1/10W	⚠
R533	ERJ6ENF1003V	RES,M 100K-F-1/10W	⚠
R539	ERDS2TJ105T	RES,C 1M-J-1/4W	
R541	ERDS2TJ274T	RES,C 27K-J-1/4W	
R542	ERJ6GEYJ124V	RES,M 120K-J-1/10W	
R551	ERX12SJR47P	RES,M .47-J-1/2W	⚠
R552	ERDS1FJ1R0T	RES,C 1.0-J-1/2W	⚠
R557	ERDS2TJ223T	RES,C 22K-J-1/4W	
R558	ERDS2TJ223T	RES,C 22K-J-1/4W	
R558	ERQ2CJPR56S	RES,F .56-J-2W	
R559	ERG2FJ683H	RES,M 68K-J-2W	
R561	ERG2FJ102H	RES,M 1K-J-2W	
R562	ERG2FJ270H	RES,M 27-J-2W	
R563	ERG3FJ150H	RES,M 15-J-3W	
R564	ERDS2TJ563T	RES,C 56K-J-1/4W	
R565	ERDS2TJ683T	RES,C 68K-J-1/4W	
R592	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R605	ERDS2TJ103T	RES,C 10K-J-1/4W	
R606	ERJ6GEYJ562V	RES,M 5.6K-J-1/10W	
R607	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R608	ERJ6GEYJ104V	RES,M 100K-J-1/10W	
R713	ERDS2TJ123T	RES,C 12K-J-1/4W	
R716	ERDS2TJ101T	RES,C 100-J-1/4W	
R756	ERG2FJ820H	RES,M 82-J-2W	
R761	ERDS2TJ102T	RES,C 1K-J-1/4W	
R762	ERDS2TJ472T	RES,C 4.7K-J-1/4W	
R802	ERG2FJ104H	RES,M 100K-J-2W	
R804	ERG1DJ224P	RES,M 220K-J-1W	
R805	ERX2FZJR15H	RES,M .18-J-2W	⚠
R806	ERX12SJ1R5P	RES,M 1.5-J-1/2W	⚠
R807	ERDS2TJ681T	RES,C 680-J-1/4W	
R808	ERX12SJ1R5P	RES,M 1.5-J-1/2W	
R809	ERDS2TJ472T	RES,C 4.7K-J-1/4W	
R810	ERDS2TJ221T	RES,C 220-J-1/4W	
R815	ERC12ZGK825D	RES,C 8.2MEG-K-1/2W	⚠
R821	ERDS1FJ1R0T	RES,C 1.0-J-1/2W	
R822	ERDS1FJ1R0T	RES,C 1.0-J-1/2W	
R823	ERDS1FJ272T	RES,C 2.7K-J-1/2W	
R824	ERDS2TJ223T	RES,C 22K-J-1/4W	
R825	ERDS2TJ272T	RES,C 2.7K-J-1/4W	

Ref. No.	Part No.	Part Name & Description	Remarks
R827	ERJ6GEYJ153V	RES,M 15K-J-1/10W	
R828	ERJ6GEYJ104V	RES,M 100K-J-1/10W	
R829	ERJ6GEYJ104V	RES,M 100K-J-1/10W	
R830	ERG2FJ273H	RES,M 27K-J-2W	
R831	ERDS2TJ682T	RES,C 6.8K-J-1/4W	
R832	ERJ6GEYJ122V	RES,M 1.2K-J-1/10W	
R832	ERJ6GEYJ272V	RES,M 2.7K-J-1/10W	
R833	ERJ6GEYJ473V	RES,M 47K-J-1/10W	
R834	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R837	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R838	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R851	ERQ12HJR56P	RES,F .56-J-1/2W	⚠
R2201	ERJ6GEYJ224V	RES,M 220K-J-1/10W	
R2203	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R2204	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R2205	ERDS2TJ101T	RES,C 100-J-1/4W	
R2206	ERDS2TJ273T	RES,C 27K-J-1/4W	
R2307	ERDS2TJ222T	RES,C 2.2K-J-1/4W	
R2320	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R2351	ERJ6GEYJ751V	RES,M 750-J-1/10W	
R2352	ERJ6GEYJ152V	RES,M 1.5K-J-1/10W	
R2356	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R2357	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R2360	ERJ6GEYJ271V	RES,M 270-J-1/10W	
R2361	ERJ6GEYJ221V	RES,M 220-J-1/10W	
R2362	ERJ6GEYJ221V	RES,M 220-J-1/10W	
R2363	ERJ6GEYJ332V	RES,M 3.3K-J-1/10W	
R2364	ERDS2TJ103T	RES,C 10K-J-1/4W	
R2364	ERJ6ENF1001V	RES,M 1K-F-1/10W	
R2365	ERJ6ENF8200V	RES,M 820-F-1/10W	
R2366	ERJ6GEYJ331V	RES,M 330-J-1/10W	
R2367	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R2368	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R2369	ERJ6GEYJ271V	RES,M 270-J-1/10W	
R2370	ERJ6GEYJ222V	RES,M 2.2K-J-1/10W	
R2371	ERJ6GEYJ104V	RES,M 100K-J-1/10W	
R2372	ERJ6GEYJ102V	RES,M 1K-J-1/10W	
R2373	ERJ6GEYJ562V	RES,M 5.6K-J-1/10W	
R2374	ERDS2TJ103T	RES,C 10K-J-1/4W	
R2417	ERJ6GEYJ103V	RES,M 10K-J-1/10W	
R2504	ERDS2TJ101T	RES,C 100-J-1/4W	
R2505	ERDS2TJ101T	RES,C 100-J-1/4W	
R3001	ERDS2TJ101T	RES,C 100-J-1/4W	
R3002	ERJ6GEYJ221V	RES,M 220-J-1/10W	
R3003	ERJ6GEYJ221V	RES,M 220-J-1/10W	
R3005	ERJ6GEYJ334V	RES,M 330K-J-1/10W	
R3006	ERJ6ENF75R0V	RES,M 75.0-F-1/10W	
R3007	ERJ6ENF75R0V	RES,M 75.0-F-1/10W	
R3008	ERJ6ENF75R0V	RES,M 75.0-F-1/10W	
R3010	ERJ6GEYJ334V	RES,M 330K-J-1/10W	
R3013	ERJ6ENF75R0V	RES,M 75.0-F-1/10W	
R3014	ERJ6ENF75R0V	RES,M 75.0-F-1/10W	
R3015	ERJ6ENF75R0V	RES,M 75.0-F-1/10W	
R3016	ERDS2TJ181T	RES,C 180-J-1/4W	

Ref. No.	Part No.	Part Name & Description	Remarks
R3017	ERDS2TJ181T	RES,C 180-J-1/4W	
R3018	ERDS2TJ101T	RES,C 100-J-1/4W	
R3021	ERDS2TJ101T	RES,C 100-J-1/4W	
R3022	ERDS2TJ101T	RES,C 100-J-1/4W	
R3023	ERDS2TJ101T	RES,C 100-J-1/4W	
R3024	ERDS2TJ101T	RES,C 100-J-1/4W	
R3025	ERDS2TJ101T	RES,C 100-J-1/4W	
R3026	ERDS2TJ101T	RES,C 100-J-1/4W	
R3027	ERDS2TJ101T	RES,C 100-J-1/4W	
R3028	ERJ6ENF75R0V	RES,M 75.0-F-1/10W	
R3029	ERJ6GEYJ101V	RES,M 100-J-1/10W	
R3030	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R3031	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R3032	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R3033	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R3034	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R3035	ERJ6GEYJ562V	RES,M 5.6K-J-1/10W	
R3036	ERJ6GEYJ183V	RES,M 18K-J-1/10W	
R3037	ERJ6GEYJ471V	RES,M 470-J-1/10W	
R3038	ERJ6GEYJ562V	RES,M 5.6K-J-1/10W	
R3039	ERJ6GEYJ183V	RES,M 18K-J-1/10W	
R3041	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R3042	ERJ6GEYJ472V	RES,M 4.7K-J-1/10W	
R3101	ERJ6GEYJ334V	RES,M 330K-J-1/10W	
R3102	ERJ6GEYJ334V	RES,M 330K-J-1/10W	
R3103	ERJ6GEYJ334V	RES,M 330K-J-1/10W	
R3104	ERJ6GEYJ334V	RES,M 330K-J-1/10W	
R3131	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R3132	ERJ6GEYJ223V	RES,M 22K-J-1/10W	
R3133	ERJ6GEYJ153V	RES,M 15K-J-1/10W	
R3134	ERJ6GEYJ333V	RES,M 33K-J-1/10W	
R3135	ERJ6GEYJ154V	RES,M 150K-J-1/10W	
		SWITCHES	
S001	EVQPC105K	SWITCH	
S002	EVQPC105K	SWITCH	
S003	EVQPC105K	SWITCH	
S004	EVQPC105K	SWITCH	
S005	EVQPC105K	SWITCH	
S008	EVQPC105K	SWITCH	
S009	EVQPC105K	SWITCH	
		TRANSFORMERS	
T501	ETH19Y22AY	TRANSFORMER, HORIZ. DRIV.	
T551	TLF2AA007	TRANSFORMER	⚠
T801	ETS35AA6B5NC	TRANSFORMER	⚠
T3001	TF0402B04P03	TRANSFORMER	
T3002	TF0402B04P03	TRANSFORMER	
		CRYSTALS / FILTERS	
X001	A1100005BD	CRYSTAL	
		OTHERS	
TNR001	ENG36A10GF	TUNER	⚠
M001	0FMK014ZZ	MAGNET, PERMALLOY	
1	M80JUA061X	CRT	⚠

Ref. No.	Part No.	Part Name & Description	Remarks
2	TLY2AA008	DEFLECTION YOKE	⚠
3	JH291U-009	YOKE CONVERGENCE	
4	TSP2AA007	COIL, DEGAUSSING	⚠
5	TXFKY01JSER	ASSY CABINET FRONT	
6	TXFKU02GSER	ASSY CABINET BACK	
7	TKX2AA00407	GUIDE, IR	
8	TAS2AA0016	SPEAKER 8-OHM 5W	
9	TBX2AA2601	BUTTON, 7-KEY	
10	TBM2AA0023	BADGE, PANASONIC	
M002	TBM2AX01201	OVERLAY, BACK COVER	
M003	TMM2A30702	WEDGE, YOKE	
M004	TSN63115-4	MAGNET, PURITY	
M005	TSX2AA0361	LINE CORD, AC	⚠
M006	TXF3A01HD3	ASSY., DAG GND	
JK351	TJS2AC00301	SOCKET, CRT	⚠
JK3001	TJB2AA0221	TERMINAL, A/V 8P	
JK3002	TJB2AA0046	TERMINAL, FRONT A/V	
JK3003	TJB2AA0421	TERMINAL, SUPER-VIDEO	
JK3004	TJB2AA0211-1	TERMINAL, A/V 2P	
ACCESORIES			
M007	EUR7613ZB0	TRANSMITTER, REMOTE CTRL	
M008	UR76EC0303E	BATTERY COVER REMOTE CTRL	
M009	TQB2AA0503	OWNERS MANUAL	

MTNC030623C1

B01/B05

Service Manual

Color Television

CT-25L8G / CT-25L8UG / CT-20L8G / CT-20G8G / CT-20G8SG

NA10

Panasonic®

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

1. Safety precautions

General guidelines

An isolation transformer should always be used during the servicing of a receiver whose chassis is not isolated from AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injuryfrom electrical shocks. It will also protect the receiver from being damaged by accidental shorting that may occur during servicing. When servicing, observe the original lead dress, especially in the high voltage circuit. Replace all damaged parts (also parts that show signs of overheating.)
Always replace protective devices, such as fish paper, isolation resistors and capacitors, and shields after servicing the receiver. Use only manufacturer's recommended rating for fuses, circuits breakers, etc.
High potentials are present when this receiver is operating. Operation of the receiver without the rear cover introduces danger for electrical shock. Servicing should not be performed by anyone who is not thoroughly familiar with the necessary precautionswhen servicing high voltage equipment.
Extreme care should be practiced when handling the picture tube. Rough handling may cause it to implode due to atmospheric pressure. (14.7 lbs per sq. in.). Do not nick or scratch the glass or subject it to any undue pressure. When handling, usesafety goggles and heavy gloves for protection. Discharge the picture tube by shorting the anode to chassis ground (not to the cabinet or to other mounting hardware). When discharging connect cold ground (i.e. dag ground lead) to the anode with a wellinsulated wire or use a grounding probe.Avoid prolonged exposure at close range to unshielded areas of the picture tube to prevent exposure to x ray radiation.
The test picture tube used for servicing the chassis at the bench should incorporate safety glass and magnetic shielding. The safety glass provide shielding for the tube viewing area against x ray radiation as well as implosion. The magnetic shieldlimits the x ray radiation around the bell of the picture tube in addition to the restricting magnetic effects. When using a picture tube test jig for service, ensure that the jig is capable of handling 50kV without causing x ray radiation.
Before returning a serviced receiver to the owner, the service technician must thoroughly test the unit to ensure that is completely safe to operate. Do not use a line isolation transformer when testing.

Leakage current cold check

Unplug the A.C. cord and connect a jumper between the two plug prongs.Measure the resistance between the jumpered AC plug and expose metallic parts such as screwheads, antenna terminals, control shafts, etc. If the exposed metallic part has a returnpath to the chassis, the reading should be between 240k Ω and 5.2M Ω . If the exposed metallic part does not have a return path to the chassis, the reading should be infinite.

Leakage current hot check

Plug the AC cord directly into the AC outlet. Do not use an isolation transformer during the check.
Connect a 1.5k Ω 10 watt resistor in parallel with a 0.15 μ F capacitor between an exposed metallic part and ground. Use earth ground, for example a water pipe.
Using a DVM with a 1000 ohms/volt sensitivity or higher, measure the AC potential across the resistor.
Repeat the procedure and measure the voltage present with all other exposed metallic parts. Verify that any potential does not exceed 0.75 volt RMS. A leakage current tester (such a Simpson model 229, Sencore model PR57 or equivalent) may be used in the above procedure, in which case any current measure must not exceed 0.5 milliamp. Ifany measurement is out of the specified limits, there is a possibility of a shock hazard and the receiver must be repaired and

rechecked before it is returned to the customer.

Hot check circuit

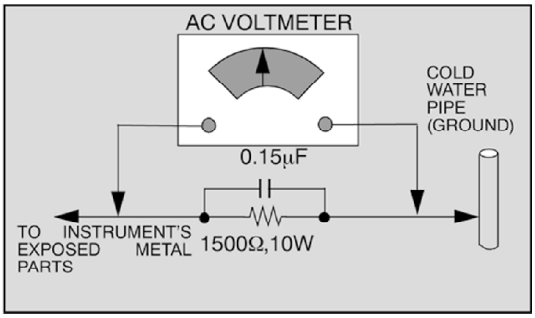

Insulation test

Connect an insulation tester between an exposed metallic part and A.C. line. Apply 1080VAC/ 60Hz for 1 second. Confirm that the current measurement is 0.5mA ~ 2.0mA. Repeat test with other metallic exposed parts.

X ray radiation

WARNING
The potential source of x ray radiation in the TV set is in the high voltage section and the picture tube.

NOTE
It is important to use an accurate, calibrated high voltage meter.

Set the brightness, picture, sharpness and color controls to minimum.
Measure the high voltage. The high voltage should be 27.70 ± 1.25kV for 20" models and 29.25 ± 1.25kV for 25" models . If the upper limit is out of tolerance, immediate serviceand correction is required to insure safe operation and to prevent the possibility of premature component failure.

Horizontal oscillator disable circuit test

This test must be performed as a final check before the receiver is returned to the customer. See horizontal oscillator disable circuit procedure check in this manual.

2. Service notes

NOTE
These components are affixed with glue. Be careful not to break or damage any foil under the component or at the pins of the ICs when removing. Usually applying heat to the component for a short time while twisting with tweezers will break the component loose.

Leadless chip component (surface mount)

Chip components must be replaced with identical chips due to critical foil track spacing. There are no holes in the board to mount standard transistors or diodes. Some chips capacitor or resistor board solder pads may have holes through the board,however the hole diameter limits standard resistor replacement to 1/8 watt. Standard capacitor may also be limited for the same reason. It is recommended that identical components be used.

Chip resistor have a three digit numerical resistance code, 1st and 2nd significant digits and a multiplier. Example: 162 = 1600 or 1.6k Ω resistor, 0 = 0 Ω (jumper).

Chip capacitors generally do not have the value indicated on the capacitor. The color of the component indicates the general range of the capacitance.

Chip transistors are identified by a two letter code. The first letter indicates the type and the second letter, the grade of transistor.

Chip diodes have a two letter identification code as per the code chart and are a dual diode pack with either common anode or common cathode. Check the parts list for correct diode number.

Component removal

1. **Use solder wick to remove solder from component end caps or terminal.**
2. **Without pulling up, carefully twist the component with tweezers to break the adhesive.**
3. **Do not reuse removed leadless or chip components since they are subject to stress fracture during removal.**

Chip component installation

1. **Put a small amount of solder on the board soldering pads.**
2. **Hold the chip component against the soldering pads with tweezers or with a miniature alligator clip and apply heat to the pad area with a 30 watt iron until solder flows. Do not apply heat for more than 3 seconds.**

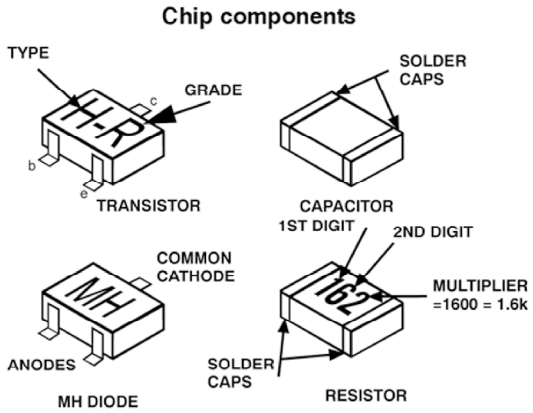

How to replace flat ic (required tools)

1. **Remove the solder from all of the pins of a Flat IC by using a desolder braid**

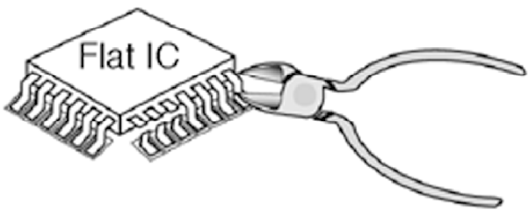

2. **Put the iron wire under the pins of the Flat IC and pull it in the direction indicated while heating the pins using a soldering iron. A small awl can be used instead of the iron wire.**

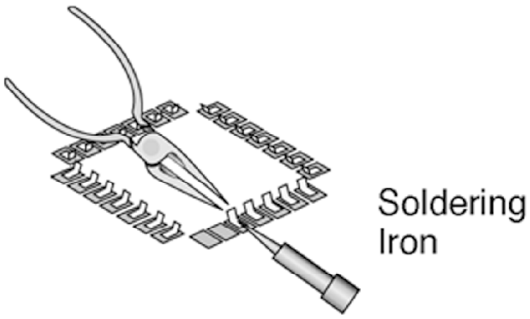

3. **Remove the solder from all the pads of the Flat IC by using a de solder braid**

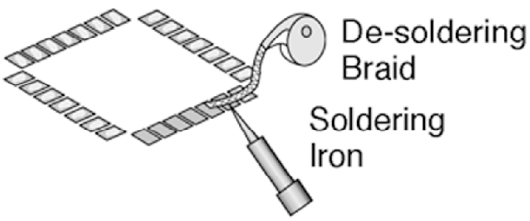

4. **Position the new Flat IC in place (apply the pins of the Flat IC to**

the soldering pads where the pins need to be soldered). Properly determine the positions of the soldering pads and pins by correctly aligning the polarity symbol

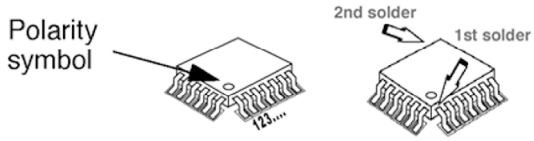

5. Solder all pins to the soldering pads using a fine tipped soldering iron

6. Check with a magnifier for solder bridge between the pins or for dry joint between pins and soldering pads. To remove a solder bridge, use a de solder braid as shown in the figure below

IMPORTANT

To protect against possible damage to the solid state devices due to arching or static discharge, make certain that all ground wires and CRT DAG wire are securely connected.

CAUTION

The power supply circuit is above earth ground and the chassis cannot be polarized. Use an isolation transformer when servicing the receiver to avoid damage to the test equipment or to the chassis. Connect the test equipment to the proper ground(hot) or (cold) when servicing, or incorrect voltages will be measured.

2.1. X-Ray Protection Circuit Check& Adjustments

This test must be performed as final check before the receiver is returned to the customer. If voltages are out of tolerance, immediate service and correction is required to insure safe operation and to prevent the possibility of premature componentfailure.

Equipment:

1. **Isolation transformer.**
2. **High voltage meter.**
3. **D.C. Ammeter**
4. **Short jumper.**
5. **HHS jig (See figure below).**

Diode Connection Jumper.

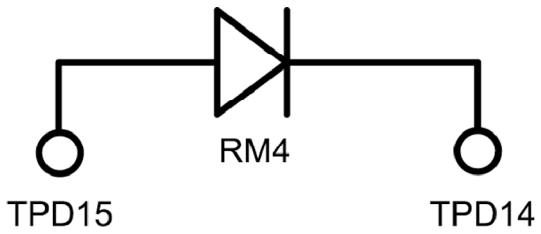

Preparation:

1. **Make sure the receiver is turned off.**
2. **Connect the receiver to an isolation transformer.**
3. **Connect the ammeter serial from the flyback anode lead to the picture tube anode socket.**
4. **Prepare short jumper and HHS jig.**

Procedure:

1. **Connect the short jumper between TPD16 & TPD17.**
2. **Connect the jumper diode between TPD14 and TPD15 (anode connected to TPD15 and cathode to TPD14).**
3. **Apply 75VAC to AC input of isolation transformer.**
4. **Turn the receiver on.**
5. **Apply a monoscope pattern.**
6. **Set customer picture and brightness controls to the minimum.**
7. **tSet current within 50 μ A to 100 μ A by changing the picture and bright controls.**

8. **Slowly increase AC voltage at the input of the isolation transformer and confirm HHS voltage measure 31kV for 20” models and 33kV for 25” models.**
9. **Turn power off and remove jigs.**

3. EEPROM replacement

If a new EEPROM integrated circuit is replaced for servicing, follow the next procedure once that the memory is properly assembled:

1. **Turn the TV set ON.**
2. **Enter to service mode.**
3. **Once inside service mode the first image that appears on-screen is the ID1 register with the respective address value (FF) like the image below.**

   Note:

   All 3 registers (ID1,ID2,ID3) should appear with FF values if a new EEPROM is assembled.

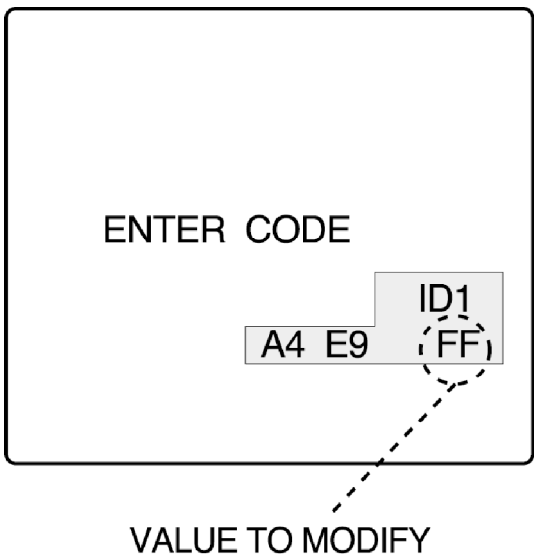

4. **With “VOL” keys adjust the correct value according with the service adjustment table (see “Service Mode” section in page 15).**
5. **Change to the next ID switch register with “CH” keys and repeat the same procedure as step 4.**
6. **When replacing a new EEPROM be sure to set the correct ID switch values for each model.**

7. Once that all 3 registers are set with the correct address value, perform all of the remaining adjustments and servicing.

IMPORTANT:

Correct ID switch configuration should be input when replacing EEPROM for each television model, otherwise if wrong values are configured, the television software will not function accordingly and properly.

4. About lead free solder (PbF)

NOTE

Lead is listed as (Pb) in the periodic table of elements. / In the information below, Pb will refer to lead solder, and PbF will refer to Lead Free Solder. / The lead free solder used in our manufacturing process and discussed below is (Sn+Ag+Cu). / Thatis Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For / service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be / used. / PCBs manufacturedusing lead free solder will have the "PbF" or a leaf symbol stamped on the / back of PCB.

CAUTION

- **Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30 ~ 40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).**
- **Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C). / If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If thisis not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.**
- **After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side.**

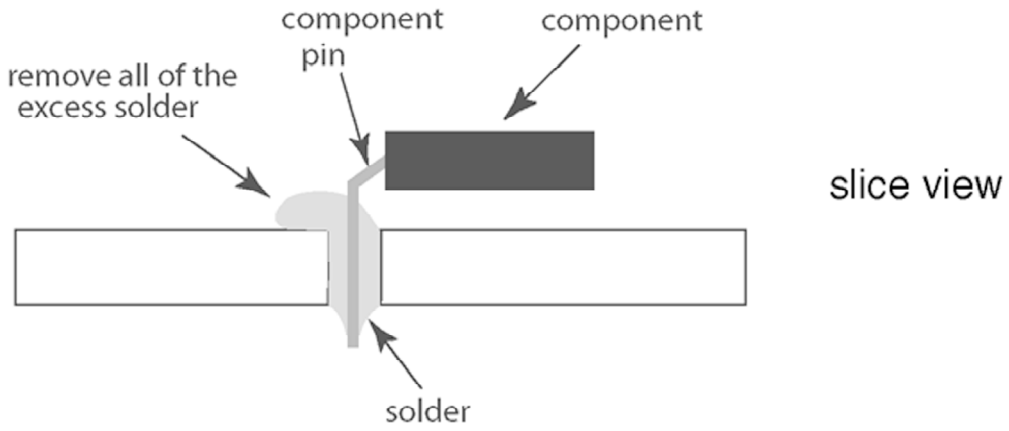

Suggested Pb free solder

There are several kinds of Pb free solder available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper), Sn+Zn+Bi (tin, zinc, bismuth) solder can also beused.

0.3mm X 100g	0.6mm X 100g	1.0mm X 100g
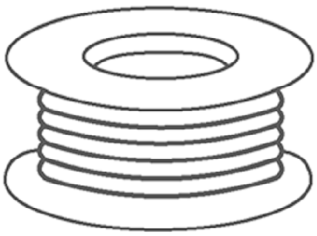	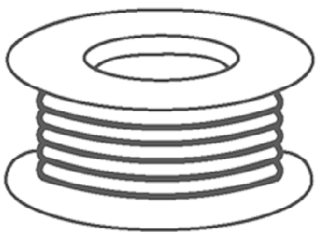	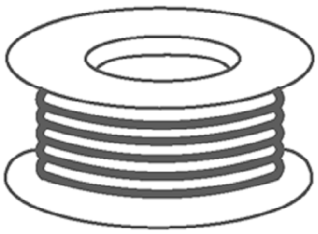

5. Receiver feature table

FEATURE/MODEL	CT-25L8G/UG	CT-20L8G	CT-20G8G/SG
CHASSIS	AP403	BP398	AP398
MICRO	128K		
MENU LANGUAGE	ENG/SPAN/FR		
CLOSED CAPTION	X		
V-CHIP (USA/CANADA)	X		
CHANNEL COUNT	181		
REMOTE CONTROL	EUR7713010		
CRT SUPPLIER	PANABLACK, SAMSUNG		
CHASSIS	NA10		
COMB FILTER	DIGITAL		
V/A NORM (X=BOTH)	V		
MTS/SAP/DBX	X		
BUILT-IN AUDIO POWER	1.5Wx2 (10%)		
No. OF SPEAKERS	2		
AI SOUND	X		
A/V IN (REAR/FRONT)	2(2/1)		1(1/1)
COMPONENT INPUT (Y, Pb, Pr)	1	----	
S-VIDEO INPUT (REAR/FRONT)	2/1	1/0	

Note:
Specifications are subject to change without notice or obligation. Dimensions and weights are approximate.

6. Board description table

CT-20G8/CT-20G8S

BOARD	PART NUMBER	DESCRIPTION
A	TNP2AH047AA	MAIN BOARD
C	TNP2AA122AA	CRT BOARD

CT-20L8G

BOARD	PART NUMBER	DESCRIPTION
A	TNP2AH047AB	MAIN BOARD
C	TNP2AA122AA	CRT BOARD

CT-25L8G/CT-25L8UG

BOARD	PART NUMBER	DESCRIPTION
A	TNP2AH047FA	MAIN BOARD
C	TNP2AA122FA	CRT BOARD

NOTE
When ordering a replacement board assembly, append an “S” to the board number

EXAMPLE
To order the A Board, the replacement board is TNP2AH047AAS.

7. TV Location of controls

Quick reference control operation	
1	**Power -** Press to turn ON or OFF.
2	**Volume** - Press to adjust sound level, or to adjust audio menus, video menus, and select operating features when menus are displayed
3	**Channel** - Press to select programmed channels. Press to highlight desired features when menus are displayed. Also use to select cable converter box channels after programming remote control infra-red codes (the TV/AUX/CABLE switch must be set in CABLE position).
4	**Action -** Press to display main menu and access on screen feature and adjustment menus.
5	**TV/Video -** Press to select TV or one of the video inputs, for the main picture or the PIP frame (when PIP frame is displayed).

8. Location of controls (EUR7713010 remote)

POWER
Press to turn ON and OFF.

VOL
Press to adjust TV sound and navigate in menus.

MUTE
Press to mute sound.

KEYBOARD
Press to select any channel.

R-TUNE
Press to switch to previously viewed channel or video mode.

SAP
Press to acces the secondary audio program broadcast.

CH
Press to select next or previous channel and navigate in menus.

TV/VIDEO
Press to select TV, Video mode.

RECALL
Press to display time, channel sleep timer and other options.

Note:
For additional information about this remote please refer to the owner's manual section remote operation, listed on the parts list section.

9. Dissasembly for service

Back cover
Remove all the screws marked with an arrow (←) from the back of the receiver

NOTE
Screw configuration, type, and number of screws vary depending on the model of the receiver serviced and the application; variou's models are covered in this manual. Use same hardware when reassembling the receiver.

- 3 screws at the top edge of the receiver (for 25" sets).
- 2 screws at the top edge of the receiver (for 20" sets).
- 1 screw by the A/V jacks.
- 1 screw at each lower corner of the receiver.
- 1 screw by the Flyback.

A-Board - Main chassis

1. Slide the chassis completely out of the guide rails.
2. Stand the receiver on its edge. The underside of the board is completely accessible for component replacement.

Note:
Some tie-wraps that secure the wire dressings may need to be unfastened for chassis removal.

C-Board - CRT output

The board plugs onto the socket on the CRT neck. To release the Focus wire, use a dull object to release the tab on the socket (near the wire opening) and carefully pull on the wire. To connect the focus wire, press on the tab to lock it then insertthe wire in the opening and press on it until it is fully inserted and locked in place.

Focus cable release

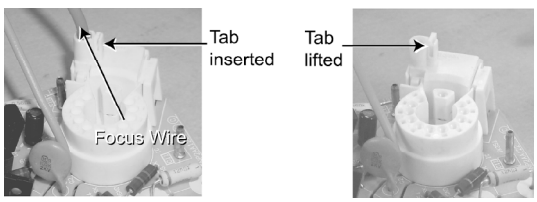

Speakers
Each speaker is secured to the cabinet with 4 screws.

NOTE
When reassembling speakers be sure to connect the speaker wires to the correct speaker lead (+) (-)

9.1. Disassembly for CRT replacement

1. **Discharge the CRT as instructed in the “safety precautions”.**
2. **Disconnect the yoke (DY) plug, degaussing coil (DEG) plug from the main board.**
3. **Unplug the CRT 2nd anode button from the main board.**
4. **Remove the C-Board from the CRT base and unplug the black wires (CRT dag ground) C10 & C11.**
5. **Disconnect the speakers plug from the A-Board.**
6. **Lift the main chassis (A-Board) and all mounted boards completely out with the CRT board attached.**
7. **Perform complete removal of chassis, as instructed in “disassembly for service” section.**

CRT replacement

1. **Perform “disassembly for CRT replacement” procedure.**
2. **Insure that the CRT H.V. Anode button is discharged before handling the CRT. Read the “safety precautions” section on handling the picture tube.**
3. **Remove the components from the CRT neck and place the cabinet face down on a soft pad.**
4. **Note the original order for the CRT mounting hardware as they are remove from the CRT mounting brackets at each corner of the CRT.**
5. **Remove the CRT with the degaussing coil and the dag ground braid attached.**
6. **Note the original locations and mounting of the degaussing coil and the dag ground assembly to insure proper reinstallation on the replacement CRT.**

To remove and remount the degaussing coil:

- **Unhook the coil spring from the bottom corners of the CRT ears.**
- **Release the braid loop from the upper corners of the CRT ears.**

7. **Mount the dag ground braid on the replacement CRT. Position the degaussing coil with new ties.**
   Dress coil as was on the original CRT.
8. **Replace the components on CRT neck and reinstall into cabinet.**
   Verify that all ground wires and circuit board plugs get connected.
   IMPORTANT NOTICE
   When ordering the CRT, please order CRT and CRT kit also.
   Please see parts list section for part numbers

10. Chassis service adjustment procedures

All service adjustments are factory preset and should not require adjustment unless controls and/ or associated components are replaced.

Note:

Connect the (-) lead of the voltmeter to the appropriate ground. Use IC801's heat sink when the HOT ground symbol is used. Otherwise, use COLD ground (Tuner shield, IC451's heat sink or FA2).

Component and Voltage Test Points

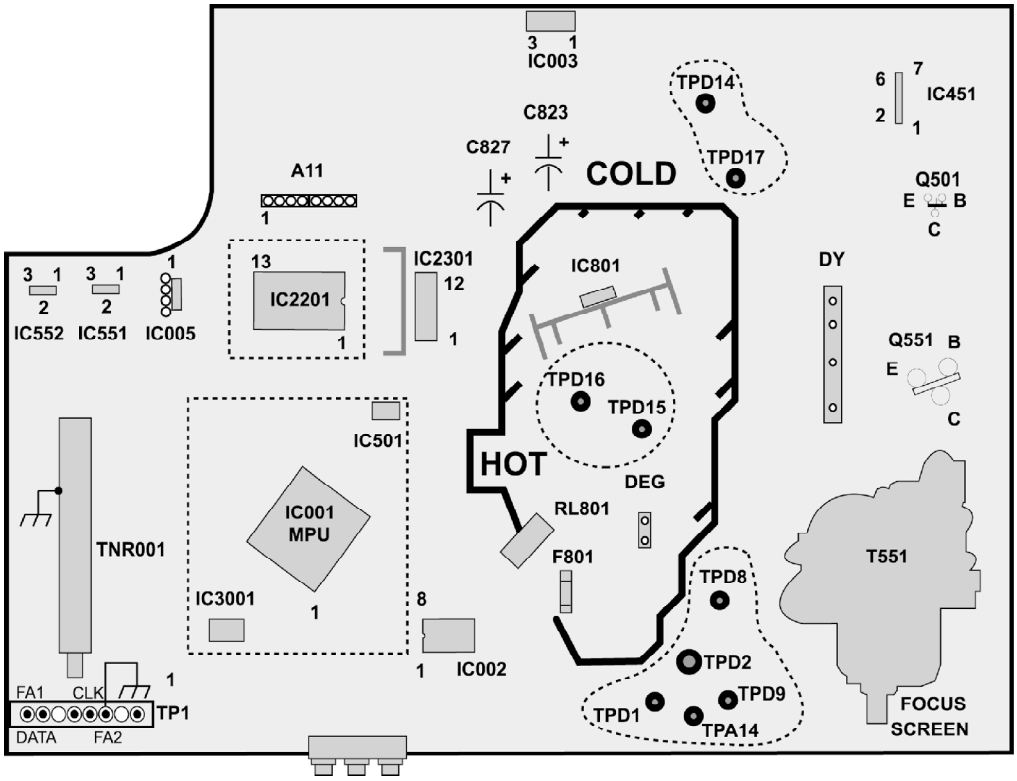

Note:

Components and test points within doted areas are located on trace side.

B+ voltage check

1. **Set the BRIGHT and PICTURE to minimum by using the PICTURE menu.**
2. **Connect the DVM between C825 (+ side) or TPD14 and cold ground.**
3. **Confirm that B+ voltage is 131.0V ± 2.0V. This voltage supplies B+ to the horizontal output and flyback circuits.**

Source voltage chart

120V AC line input. Set the BRIGHT and the PICTURE to minimum by using the PICTURE menu. Use cold or hot ground for the (-) lead of the DVM as needed.

A-BOARD	TEST POINT	VOLTAGE 20”	VOLTAGE 25 “
+B2	TPD14	131.0 ± 2.0V	131.0 ± 2.0V
SOUND	C823 (+)	18.4 ± 1.0V	18.4 ± 1.0V
STB12V	C827 (+)	12.7 ± 1.0 V	12.7 ± 1.0 V
220V	TPA14	217 ± 10 V	221 ± 10 V
VERTICAL	TPD8	23.7 ± 1.5V	27.1 ± 1.5V
9V	IC551 pin 3	9.0 ± 0.5V	9.0 ± 0.5V
5V	IC552 pin 3	5.0 ± 0.5V	5.0 ± 0.5V
3.3V	IC005 pin 2	3.3 ± 0.3V	3.3 ± 0.3V
EHT	CRT anode	27.70 ± 1.25kV	29.25 ± 1.25kV
HEATER	JK351 H-HGND	6.3 ± 0.24V	6.3 ± 0.24V

High voltage check

1. Select an active TV channel and confirm that horizontal is in sync.
2. Adjust BRIGHTNESS and CONTRAST using PICTURE icon menu so video just disappears.
3. Using a high voltage meter confirm that the high voltage is 27.70 ± 1.25kV for 20” models and 29.25 ± 1.25kV for 25” models.

11. Purity and convergence procedure

Adjustment is necessary only if the CRT or the deflection yoke is replaced or if the setting was disturbed. The complete procedure consists of:

1. Vertical raster shift adjustment.
2. Initial static convergence.
3. Setting the purity.
4. Final static convergence.

WHEN THE CRT OR THE YOKE IS REPLACED

For 2 piece assembly:

Position purity/convergence assembly as shown and tighten clamp snugly. Remove the hot-melt glue seal on assembly and position like tabs of purity device together at 12 o’ clock to reduce its magnetic field effect.

2 piece assembly

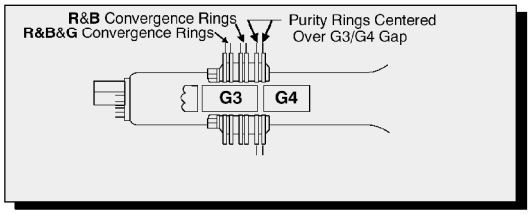

For models using 4 pairs of rings, place the yoke on the CRT neck (do not tighten the clamp). Place the vertical raster shift tabs at 3 o'clock (90° from the purity and convergence tabs.

Description of rings

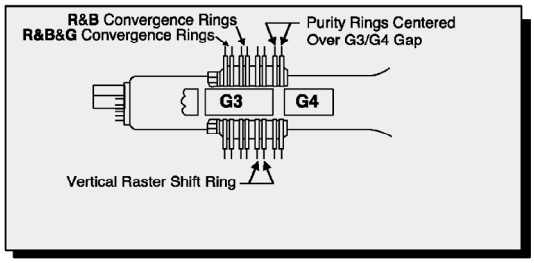

Initial position of rings

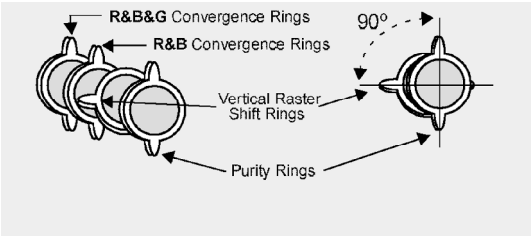

Turn the receiver ON. Operate the receiver for 60 minutes using the first purity check field (white screen) to stabilize the CRT.
Fully degauss the receiver by using an external degaussing coil.
Slide the deflection yoke back and forth on the neck of the CRT until it produces a near white, uniform raster.

VERTICAL RASTER SHIFT ADJUSTMENT

Apply a green pattern with a horizontal line, adjust the Deflection Yoke so that has no tilt, then secure it.
Adjust center line of the pattern with the mechanical center of the CRT, this center is determined by two marks at the side edges of the screen. To adjust the line, once the vertical raster shift tabs are place at 3 o'clock to reduce itsmagnetic field effect open the tabs the same angle from the center, until the center line of the pattern becomes a straight line, centered with the marks of the CRT.

IMPORTANT NOTICE
Rings come along with deflection yoke in one piece.

Vertical raster shift adjustment

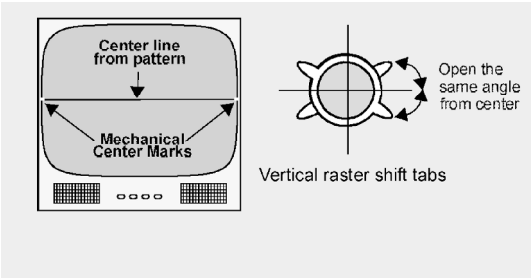

INITIAL CENTER STATIC CONVERGENCE

Connect a dot/cross hatch generator to the receiver and tune in a signal. Observe misconvergence at center of the screen only.
Adjust the R&B pole magnets; by separating tabs and rotating to converge blue with red.
Adjust the R&B and R&B&G pole magnets: by separating tabs and rotating to converge blue and red (magenta) with green.

NOTE
Precise convergence at this point is not important.

PURITY ADJUSTMENT

When the receiver is in the serviceman mode for making electronic adjustments, press the RECALL button on the remote control to enter purity check. (See the service adjustments electronic controls procedure).
Operate the receiver for 60 minutes using the first purity check field (white screen) to stabilize the CRT.
Fully degauss the receiver by using an external degaussing coil.
Press the RECALL button on the remote control again until the purity check (green screen) appears.
Loosen the deflection yoke clamp screw and move the deflection yoke back as close to the purity magnet as possible.
Adjust the purity rings to set the vertical green raster precisely at the center of the screen.

Green raster adjustment

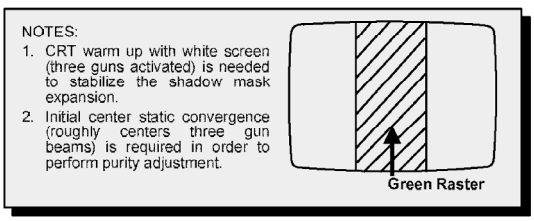
NOTES:
1. CRT warm up with white screen (three guns activated) is needed to stabilize the shadow mask expansion.
2. Initial center static convergence (roughly centers three gun beams) is required in order to perform purity adjustment.
Green Raster

Slowly move the deflection yoke forward until the best overall green screen is displayed.
Tighten the deflection yoke clamp screw.
Press the RECALL button on the remote control again until the purity check blue and red screens appear and observe that good purity is obtained on each respective field.
Press the RECALL button on the remote control again until purity check (white screen) appears.
Observe the screen for uniform white. If purity has not been achieved, repeat the above

procedure.

FINAL CONVERGENCE PROCEDURE

NOTE
Vertical size and focus adjustments must be completed prior to performing the convergence adjustment. Connect a dot pattern generator to the receiver. The brightness level should not be higher than necessary to obtain a clear pattern.

Converge the red and the blue dots at the center of the screen by rotating the R&B pole static convergence magnets.
Align the converged red/blue dots with the green dots at the center of the screen by rotating the R &B&G pole static convergence magnets. Melt wax with soldering iron to reseal the magnets.
Slightly tilt vertically and horizontally (do not rotate) the deflection yoke to obtain a good overall convergence.
If convergence is not reached at the edges, insert permalloy in the DY corners to achieve proper convergence. Recheck for purity and readjust if necessary.
After vertical adjustment of the yoke, insert wedge at 11 o'clock position, then make the horizontal tilt adjustment.
Secure the deflection yoke by inserting four side wedges.
Apply adhesive between tab (thin portion) of wedge and CRT and place tape over the tab to secure to the CRT.

11.1. Permalloy convergence corrector strip (Part No. 0FMK014ZZ)

This strip is used in some sets to match the yoke and CRT for optimum convergence. If the yoke or CRT is replaced, the strip may not be required.
First converge the set without the strip and observe the corners.
First converge the set without the strip and observe the corners.
If correction is needed:

1. **Place strip between CRT and yoke, in quadrant needing correction. Slowly move it around for desired results.**
2. **Press adhesive tightly to the CRT and secure with tape.**

Vertical Yoke Movement

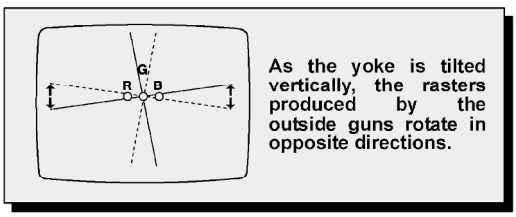

Horizontal Yoke Movement

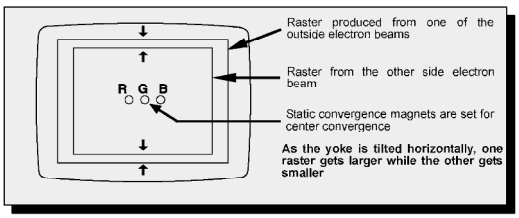
Raster produced from one of the outside electron beams
Raster from the other side electron beam
Static convergence magnets are set for center convergence
As the yoke is tilted horizontally, one raster gets larger while the other gets smaller
R G B

Convergence Magnets and Wedges Location

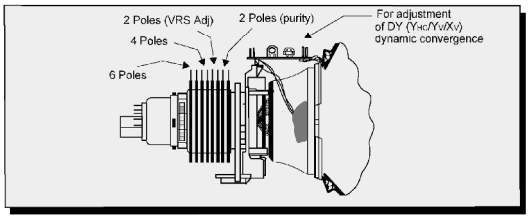

12. Service mode (electronic adjustments)

This receiver has electronic technology using the IC bus concept. It performs as a control function and it replaces many mechanical controls. Instead of adjusting mechanical controls individually, many of the control functions are now performedby using "on screen display menu". (The service adjustment mode).

NOTE

It is suggested that the technician reads all the way through and understand the following procedure for entering/exiting the service adjustment mode; then proceed with the instructions working with the receiver. When becoming familiarwith the procedure, the flow chart for service mode may be used as a quick guide.

Quick entry to service mode

When minor adjustments need to be done to the electronic controls, the method of entering the service mode without removal of the cabinet back is as follows using the remote control:

1. **Select SET-UP icon and select CABLE mode.**
2. **Select TIMER icon and set SLEEP time for 30 Min.**
3. **Press "ACTION" twice to exit menus.**
4. **Tune to the channel 124.**
5. **Adjust VOLUME to minimum (0).**
6. **Press VOL → (decrease) on receiver. Red "CHK" appears in upper corner.**

To toggle between aging and service modes:

While the "CHK" is displayed on the left top corner of the CRT, pressing "ACTION" and "VOL" UP on the TV simultaneously will toggle between the modes. Red "CHK" for serviceand yellow "CHK" for aging.

7. Press POWER on the remote control to display the service adjustment modes menu, select adjustment by pressing the volume right/left buttons and channel up/down buttons on the remote and ACTION to enter the adjustment.

MTS	MTSIN	SEPAL	SEPAH	
CLOCK	CLOCK			HHSTH
VIDEO	COLOR	TINT	BRIGH	CONT
	B-Y_G	CUT_G	CUT_R	CUT_B
	BRT	R-DR	B-DR	
HDEF		H POS		
VDEF	VEAMP	V-C	V-S	VPOS
SETID	ID1	ID2	ID3	

Exiting the service mode:

This TV goes out from service mode when it is unplugged or turned OFF. To exit the service mode, turn the TV OFF from or unplug the TV from A.C.

Other method

Press ACTION and POWER on the receiver simultaneously for at least 2 seconds.
The receiver momentarily shuts off; then comes back on tuned to channel 3 with a preset level of sound.
Any programmed channels, channels caption data and some others user defined settings will be erased when exited by pressing ACTION and POWER on receiver.

IMPORTANT NOTE
Always check that the TV exits the service mode.

To confirm colors

When in service mode (red “CHK” is displayed) press RECALL on the remote control to enter the purity field check mode

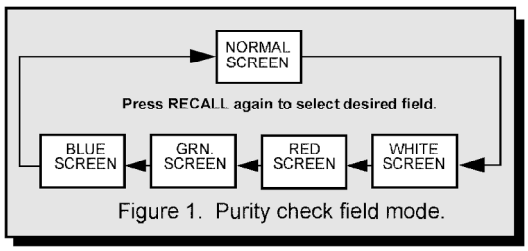

Figure 1. Purity check field mode.

Entering service mode (open-back method)

While the receiver is connected and operating in normal mode, momentarily short test point FA1 (TP1 pin 2) to cold ground (TP1 pin 3).
The receiver enters the aging mode.
Yellow letters “CHK” appear in the upper left corner of the screen. / (The volume right/left and channel up/down will adjust rapidly).

Note:

If service mode is accessed by this method be sure to reset the set after service is performed.

12.1. Service adjustment default values for items

NAME	DESCRIPTION	ADDRESS	REGISTER VALUE		
			CT-20G8G/ SG	CT-20L8G	CT-25L8(UG
MTSIN	MTS INPUT LEVEL	A4 01	25	25	25
SEPAL	MTS LOW LEVEL SEPARATION	A4 02	08	08	08
SEPAH	MTS HIGH LEVEL SEPARATION	A4 03	1D	1D	1D
CLOCK	CLOCK	A4 04	128	128	128
HHSTH	HHS VOLTAGE LEVEL REFERENCE	A4 05	9D	9D	89
COLOR	COLOR	A4 06	01 15	01 15	01 15
TINT	TINT	A4 08	56	56	56
BRIGH	SUB-BRIGHTNESS	A4 09	4E	4E	40
CONT	SUB-CONTRAST	A4 0A	38	38	60
B-Y_G	MAGENTA TINT ADJ	A4 0B	80	80	80
CUT_G	GREEN CUT-OFF	A4 0C	01 C3	01 C3	02 05
CUT_R	RED CUT-OFF	A4 0E	02 0E	02 0E	02 9B
CUT_B	BLUE CUT-OFF	A4 10	01 5B	01 5B	01 F4
BRT	BRIGHT	A4 12	4E	4E	40
R-DR	RED DRIVE	A4 13	09 00	09 00	08 86
B-DR	BLUE DRIVE	A4 15	09 00	09 00	07 ED
H-POS	HORIZONTAL POSITION	A4 18	82	82	73
VEAMP	VERTICAL SIZE	A4 29	9B	9B	9C
V-C	VERTICAL LINEARITY	A4 2A	4C	4C	4C
V-S	VERTICAL SIZE CORRECTION	A4 2B	00	00	00
VPOS	VERTICAL POSITION	A4 FF	7C	7C	77
ID1*	ID SWITCH 1	A4 E9	88	70	70
ID2*	ID SWITCH 2	A4 EA	06	06	06
ID3*	ID SWITCH 3	A4 EB	30	30	30

IMPORTANT:

These table values are approximated and could change due to

variation of electrical characteristics in each set, except for the ID switch values.

***Note:**

The correspondent ID switch (ID1,ID2, ID3) data configuration should not be modified in any way. If EEPROM circuit needs to be replaced, these ID values should be configured according with this table.

12.2. Instructional Flow Chart for Service Mode

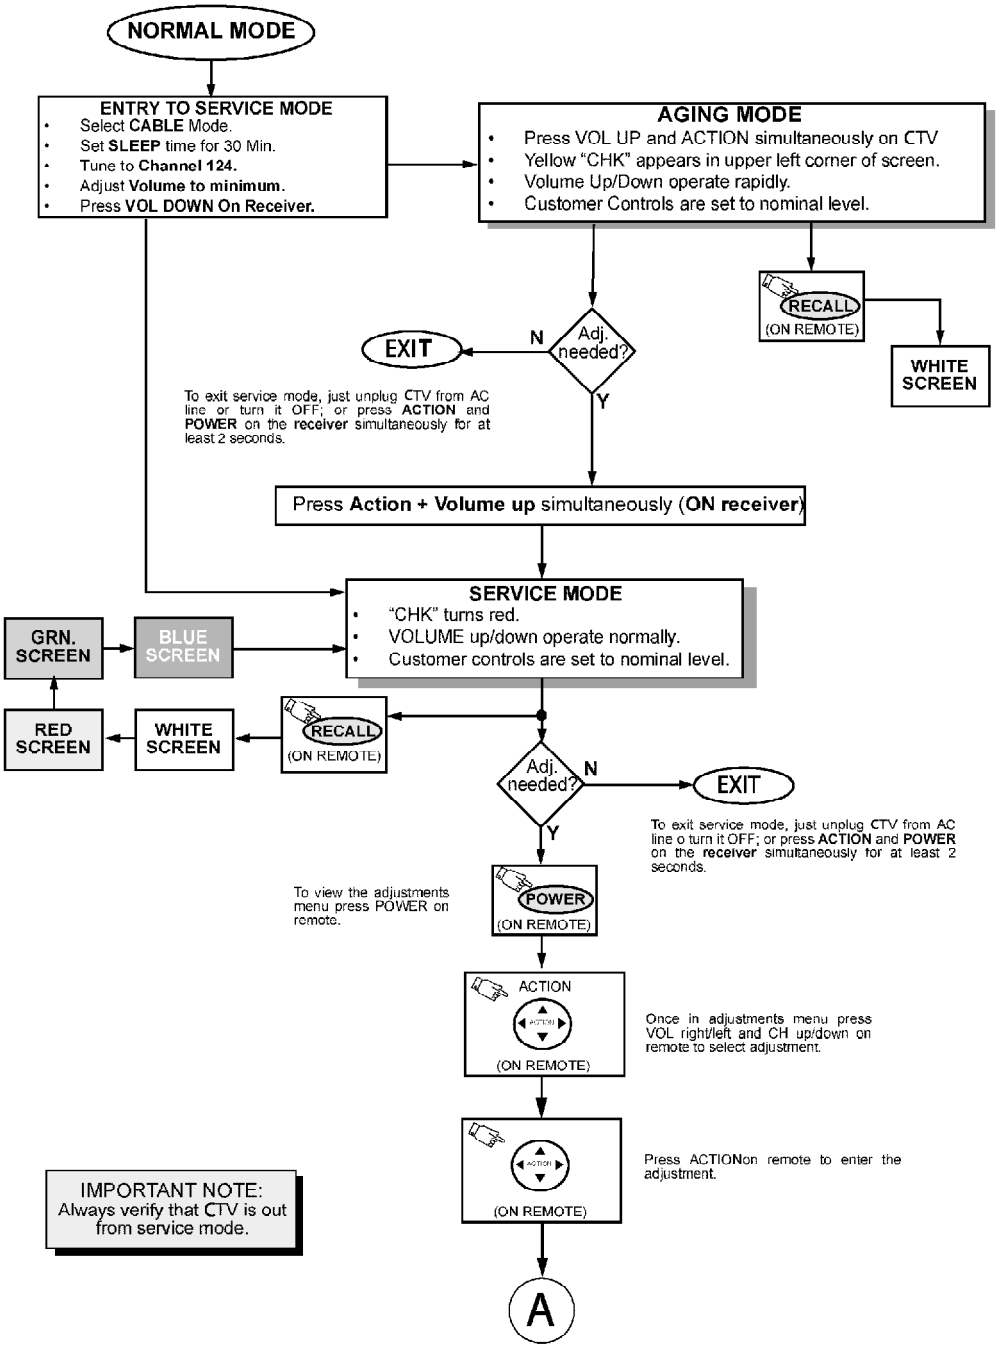
NORMAL MODE
ENTRY TO SERVICE MODE
• Select CABLE Mode.
• Set SLEEP time for 30 Min.
• Tune to Channel 124.
• Adjust Volume to minimum.
• Press VOL DOWN On Receiver.
AGING MODE
• Press VOL UP and ACTION simultaneously on CTV
• Yellow "CHK" appears in upper left corner of screen.
• Volume Up/Down operate rapidly.
• Customer Controls are set to nominal level.
RECALL
(ON REMOTE)
WHITE SCREEN
Adj. needed?
N
EXIT
Y
To exit service mode, just unplug CTV from AC line or turn it OFF; or press ACTION and POWER on the receiver simultaneously for at least 2 seconds.
Press Action + Volume up simultaneously (ON receiver)
SERVICE MODE
• "CHK" turns red.
• VOLUME up/down operate normally.
• Customer controls are set to nominal level.
GRN. SCREEN
BLUE SCREEN
RED SCREEN
WHITE SCREEN
RECALL
(ON REMOTE)
Adj. needed?
N
EXIT
Y
To exit service mode, just unplug CTV from AC line o turn it OFF; or press ACTION and POWER on the receiver simultaneously for at least 2 seconds.
To view the adjustments menu press POWER on remote.
POWER
(ON REMOTE)
ACTION
(ON REMOTE)
Once in adjustments menu press VOL right/left and CH up/down on remote to select adjustment.
(ON REMOTE)
Press ACTIONon remote to enter the adjustment.
IMPORTANT NOTE:
Always verify that CTV is out from service mode.
A

12.3. Instructional flow chart for service mode (continued).

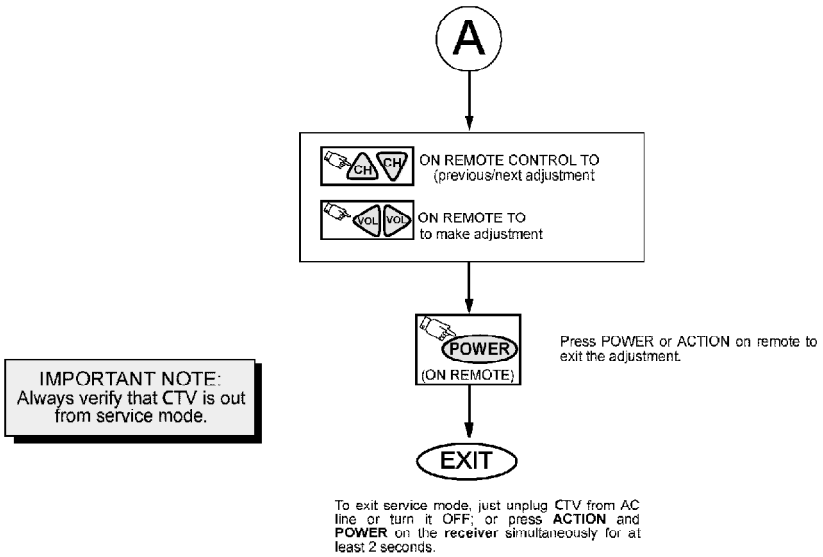
A
CH
CH
ON REMOTE CONTROL TO
(previous/next adjustment
VOL
VOL
ON REMOTE TO
to make adjustment
POWER
(ON REMOTE)
Press POWER or ACTION on remote to exit the adjustment.
IMPORTANT NOTE:
Always verify that CTV is out from service mode.
EXIT
To exit service mode, just unplug CTV from AC line or turn it OFF; or press ACTION and POWER on the receiver simultaneously for at least 2 seconds.

13. Service adjustments (electronic controls)

NOTE
Please correlate with available pattern on all adjustments

13.1. Sub-Brightness and Contrast / Service DAC adjustment (BRIGH, CONT)

Adjustment of this control is important for setting proper operation of customer brightness and picture controls. Do not adjust the SCREEN VR after the sub-brightness is set.
This adjustment is factory set. Do not adjust unless repairs are made to associated circuit, the CRT Board or when the CRT is replaced.

Preparation

1. **Apply a colorbar pattern.**
2. **Set the PICTURE control to the maximum.**
3. **Set COLOR control to minimum (no color on picture).**
4. **Set the BRIGHTNESS control to the center.**
5. **Set the SHARPNESS control to the center.**
6. **Connect the oscilloscope to TP35.**

Procedure

1. **In the service mode, select DAC for brightness adjustment**

“BRIGH”, and adjust data to obtain 3.8±0.1V (for 20” CRT) or 3.4± 0.1V (for 25” CRT) between 7.5IRE and GND level at TP35. (See waveformdetail).

2. **In service mode, select DAC for contrast adjustment “CONT”, and adjust data to obtain 2.2±0.1V (for 20” CRT) or 2.7±0.1V (for 25” CRT) between 7.5IRE and 100IRE level at TP35. (See waveform detail)**

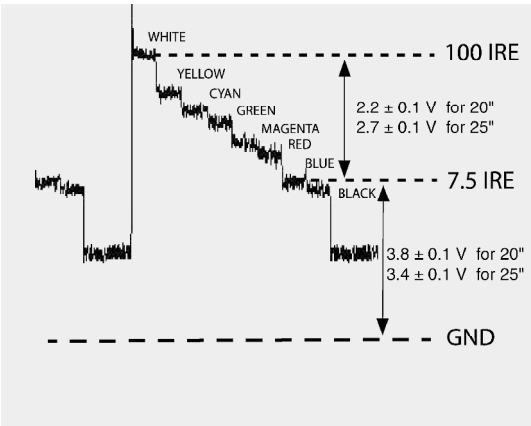

13.2. Color output adjustment / Service DAC adjustment (COLOR, TINT)

NOTE

if a rainbow pattern generator is available perform the following procedure; the next section describes the procedure with no rainbow pattern.

Make sure that sub-contrast adjustment was finished prior to perform this adjustment.

PREPARATION

1. **Normalize the picture settings.**
2. **Set the BRIGHTNESS control to minimum.**
3. **Set the COLOR control to the center.**
4. **Set the TINT control to the center.**
5. **Set the PICTURE control to the maximum.**
6. **Set the SHARPNESS control to the minimum.**

PROCEDURE

1. **Apply a rainbow color bar pattern.**
2. **Connect the oscilloscope to TP37.**
3. **In service mode adjust “TINT” register until the waveform measured is as the one shown. Tint level from A and B peaks must be almost in the same level (0.3 Vp for 20” models and 0.35 Vp for 25” models).**

TP37 Waveform.

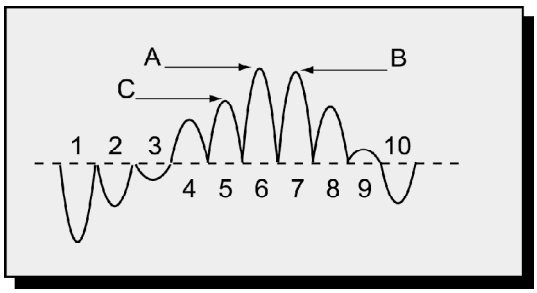

4. **Connect the oscilloscope to TP35 and GND.**
5. **Adjust “COLOR” register so that the amplitude “a” is 0.8±0.05Vp-p for 20” models and amplitude “b” 0.9±0.05Vp-p for 25” models.**

TP35 Waveform.

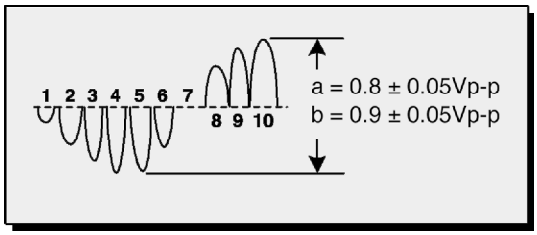

13.3. Color output adjustment / Service DAC adjustment / (COLOR, TINT, B-Y_G)

NOTE
Color and tint adjustment sets the reference settings for the user controls; It is important to read the procedures.

(NO RAINBOW PATTERN)
Make sure that sub-contrast adjustment was finished prior to perform this adjustment

PREPARATION
Normalize the picture settings.

PROCEDURE

1. **Apply a color bar pattern.**
2. **In service mode adjust “R DR” and “B DR” data to “80”.**
3. **In service mode adjust “TINT” data so that the color does not become greenish or redish.**
4. **In service mode adjust “COLOR” data so that the color level is not too high (saturated) or too low (tending to black and white).**
5. **In service mode adjust “B-Y G” data so that blue and green seem natural.**
6. **Confirm that saturation and picture are normal (normal image).**
7. **If image is not satisfactory, repeat adjustment until the image is normal and natural.**

NOTE

The image can be compared against other set to see the image quality.

13.4. Color temperature adjustment / (B/W Tracking) / Service DAC Adjust. / (CUT R) (CUT G) (CUT B) (R DR) (B DR)

Minor Touch-Up Method

OBSERVE low and high brightness areas of a B/W picture for proper tracking. Adjust only as required for “good gray scale and warm highlights”.

1. **LOW LIGHT areas - In service mode for making electronic adjustments, select CUT R, CUT G, CUT B and adjust the picture for gray.**
2. **HIGH LIGHT areas - In service mode for making electronic adjustments, select drive R DR, B DR and adjust the picture for warm whites.**

Complete adjustment

PREPARATION

1. **Turn the receiver “ON” and allow 30 minutes warm up at WHITE**

PATTERN.

2. **Apply a color bar pattern (with no color).**
3. **Turn the SCREEN control (part of FBT T551) fully counterclockwise.**
4. **Preset the following service DACs for best results:**

- **BRIGH_____1 D0**
- **CUT R_____02 00**
- **CUT G_____02 00**
- **CUT B_____02 00**
- **R DR_____07 FF**
- **B DR_____07 FF**

PROCEDURE

1. **Connect the oscilloscope to KG (CRT-Board).**
2. **In service mode for making electronic adjustment, select “BRIGH” DAC.**
3. **Press RECALL button on the remote control to collapse the raster. (service SW).**
4. **Connect oscilloscope to KG on C-Board and adjust service mode “CUT-G” DAC until 170±2V above DC ground is measured**
5. **Remove the probe from KG.**
6. **Turn screen clockwise slowly until color is slightly appeared.**
7. **Then adjust “CUT R” and “CUT B” until line becomes white.**
8. **Press RECALL button on the remote to restore the raster.**
9. **Adjust “R DR” and “B DR” so the white seems like white and black like black.**
10. **Apply a normal signal and confirm that the image is normal and a good gray scale**
11. **If correction is needed perform minor touch-up method.**

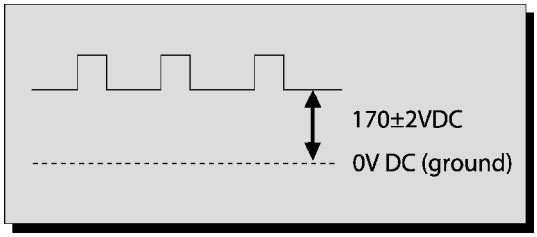

13.5. Deflection adjustments

To reset deflection adjustments

To reset deflection adjustments to factory adjusted default, enter to service mode (with red CHK displayed), press POWER button on remote to display the service menu, then press and hold RECALL button for at least three seconds, a reset messagewill appear in the image.
Use this feature when deflection adjustment gets off adjustment to the point that it cannot be adjusted back easily.

13.5.1. H-Center adjustment

PREPARATION

1. **Apply a crosshatch pattern.**
2. **Normalize the picture settings.**

PROCEDURE

1. **Apply a monoscope pattern to center the picture.**

Horizontal Center Adjustment

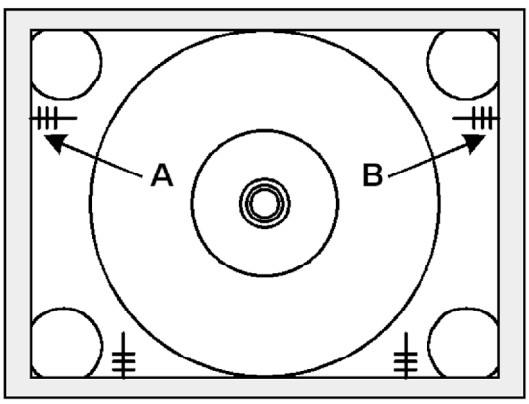

2. **If the horizontal center is not aligned, in service mode adjust “H POS” DATA to adjust the horizontal center of the monoscope pattern to the CRT center.**

3. **Verify that horizontal width (A & B mark) is within 4.5 ± 0.7 for 20" models and 5.0 ± 0.7 for 25" models.**

13.5.2. Vertical linearity(V-C), V-Size and V-Position adjustment

PREPARATION

1. **Apply a crosshatch pattern**
2. **Normalize the picture settings.**

PROCEDURE

1. **Enter service mode, select DAC adjustment / "V-POS" and adjust monoscope pattern to the center vertical position of the CRT center mark.**
2. **Adjust linearity data "V-C" so that interval of "a" is same as "b" (a= b).**

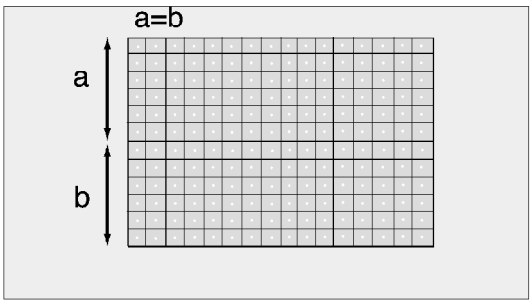

3. **If the v-position is not at the CRT center, adjust / V position "V POS" DATA again.**
4. **Apply a monoscope pattern.**
5. **Confirm that center horizontal line is in center mark on CRT.**
6. **Adjust "VEAMP" register for correct vertical size by making monoscope round circle leaving 4 marks off the CRT edge.**

Vertical centering adjustment.

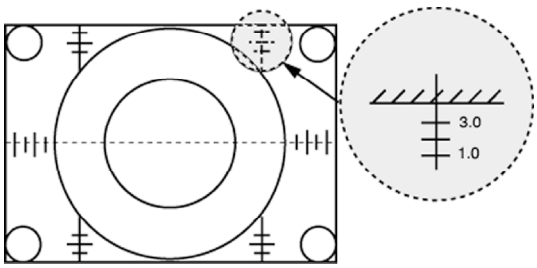

13.5.3. V-S Correction adjustment

PREPARATION

1. **Apply a crosshatch pattern**
2. **Normalize the picture settings.**

PROCEDURE

1. **Enter to service mode**
2. **Check a and b sizes, If b-a < -1.5mm (in top & bottom extending case)**

    - Increase “V-S” DATA by one step

NOTE
Repeat “a” and “b” until b-a ± 1.5mm

3. **Confirm to make outermost circle of monoscope pattern a correct circle**

V-Adjustment

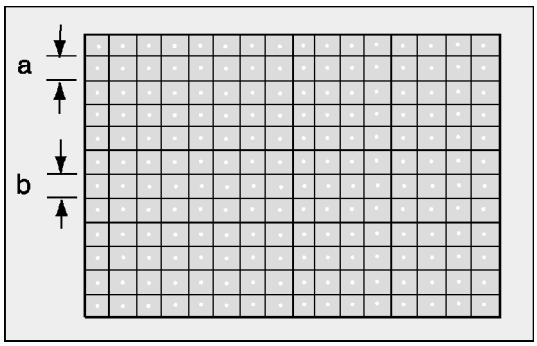

13.6. MTS circuit adjustments

The MTS circuit adjustments require two steps:

1. **Input level adjustment.**
2. **Stereo separation adjustment.**

Input level adjustment / Service DAC adjustment (MTSIN)

PREPARATION

1. Connect an RMS meter with filter jig as shown in figure to TPE11.

Filter Jig

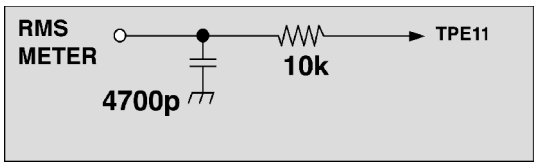

2. Connect an RF signal generator to the RF antenna input.

PROCEDURE

1. Apply the following signal from the RF signal generator:

- **Video: 100 IRE flat field, 30% modulation.**
- **Audio: 300Hz, 100% modulation, monaural (70 ±5dB, 75 Ω OPEN, P/S 10dB). Make sure that the 75 μ s pre-emphasis is OFF.**

2. Adjust the MTS input level adjustment "MTSIN" data until the RMS voltage measured is 106 ± 6.0mVrms.

Stereo separation adjustment (SEPAH)

PREPARATION

1. Connect an R.F. signal generator to the RF antenna input.

2. Connect a scope to TPA20.

PROCEDURE

1. Select stereo mode in audio menu

2. Apply the following signal from the RF signal generator:

- **Video: 100 IRE flat field, 30% modulation.**
- **Audio: 300Hz, 30% modulation, stereo (left only) (70±5dB, 75 Ω**

OPEN, P/S 10dB).

NOTE
After setting 30% modulation with P.L. SW and N.R. SW OFF, turn P.L. SW and N.R. SW ON.

3. In service mode, adjust the MTS Low-Level separation adjustment “SEPAL” data until the amplitude displayed on the scope is minimum.
4. Apply the following signal from the RF signal generator:

   - Video: 100 IRE flat field, 30% modulation
   - Audio: 3KHz, 30% modulation, stereo (left only) (70 ±5dB, 75 Ω OPEN, P/S 10dB).

   NOTE
   After setting 30% modulation with P.L. SW and N.R. SW OFF, turn P.L. SW and N.R. SW ON.

5. Adjust the MTS High-level separation adjustment “SEPAH” until the amplitude displayed on the scope is minimum.
6. Repeat above steps 2 through 5 until the amplitude is at minimum for both signals.

13.7. Clock adjustment (CLOCK)

PREPARATION
Connect the frequency counter from TP017 / (IC001 pin 79) to cold ground

PROCEDURE

1. Turn the receiver “OFF” with the A.C. power applied.
2. Measure TP017 (IC001 pin 79) for the frequency of the waveform and record the reading.

NOTE

3. TP017 (IC001 pin 79) measurement must have at least four digits

of resolution following the decimal point. Example: 000.0000

4. Place the receiver into service mode for making electronic adjustment, select the clock adjustment DAC “CLOCK”.
5. Calculate and set “CLOCK” based on the following formula:

$$CLOCK = 128 - \left[\frac{(TP017_{freq} - 610.35)}{610.35} \times 450000\right]$$

NOTE
TP017 (IC001 pin 79) measurement will not change regardless of the value stored in CLOCK.

13.8. Service Adjustments Mechanical Controls

WIDTH CORRECTION ADJUSTMENT

Note
Perform this adjustment only when FBT is changed.

FOCUS (PART OF T551)

Preparation
Apply a crosshatch pattern with dots.

Procedure

1. Adjust the FOCUS VR to obtain the sharpest and clearest dot pattern.

    - Adjust for best center.
    - Adjust for best area between the center and top right corner.

14. Identification of Components

14.1. Back Cover Removal

Back Cover Removal (CT-20G8G/CT-20G8SG/CT-20L8G).

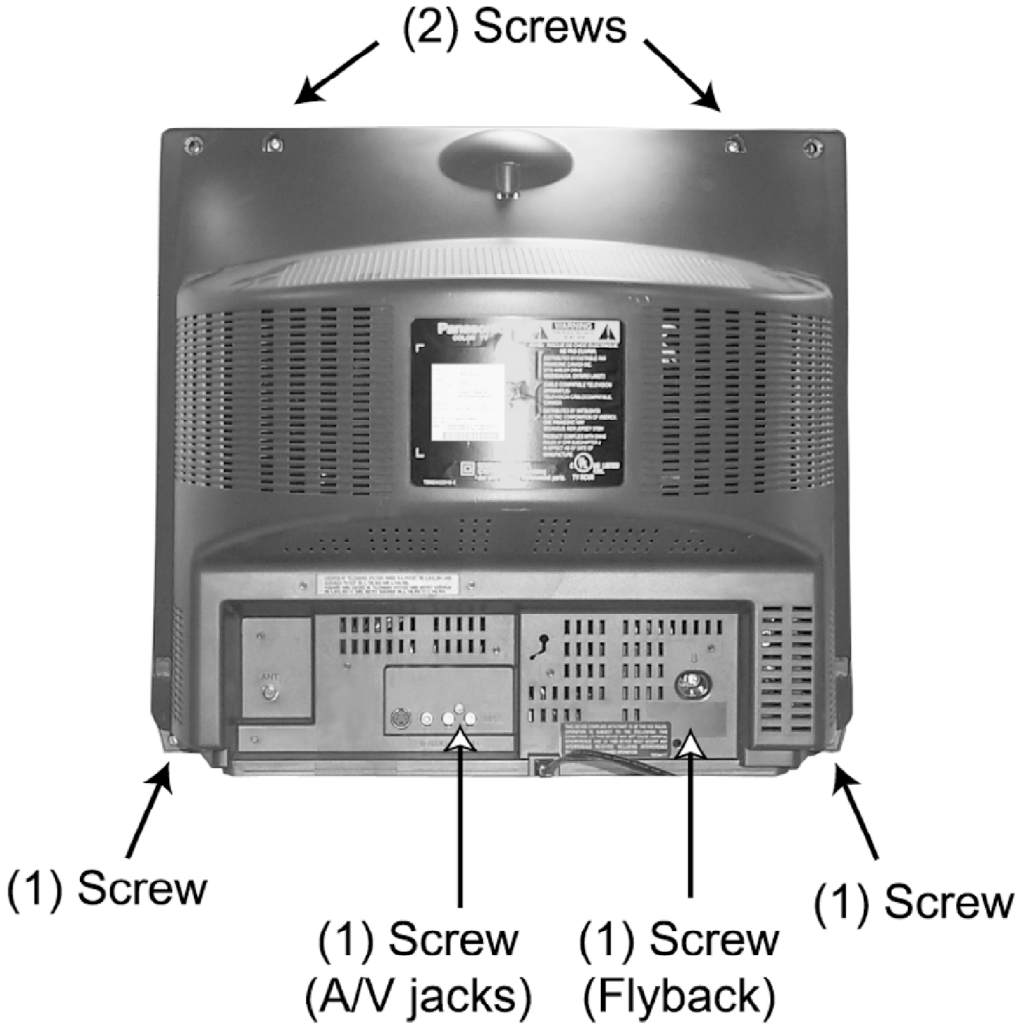

Back Cover Removal (CT-25L8G/CT-25L8UG).

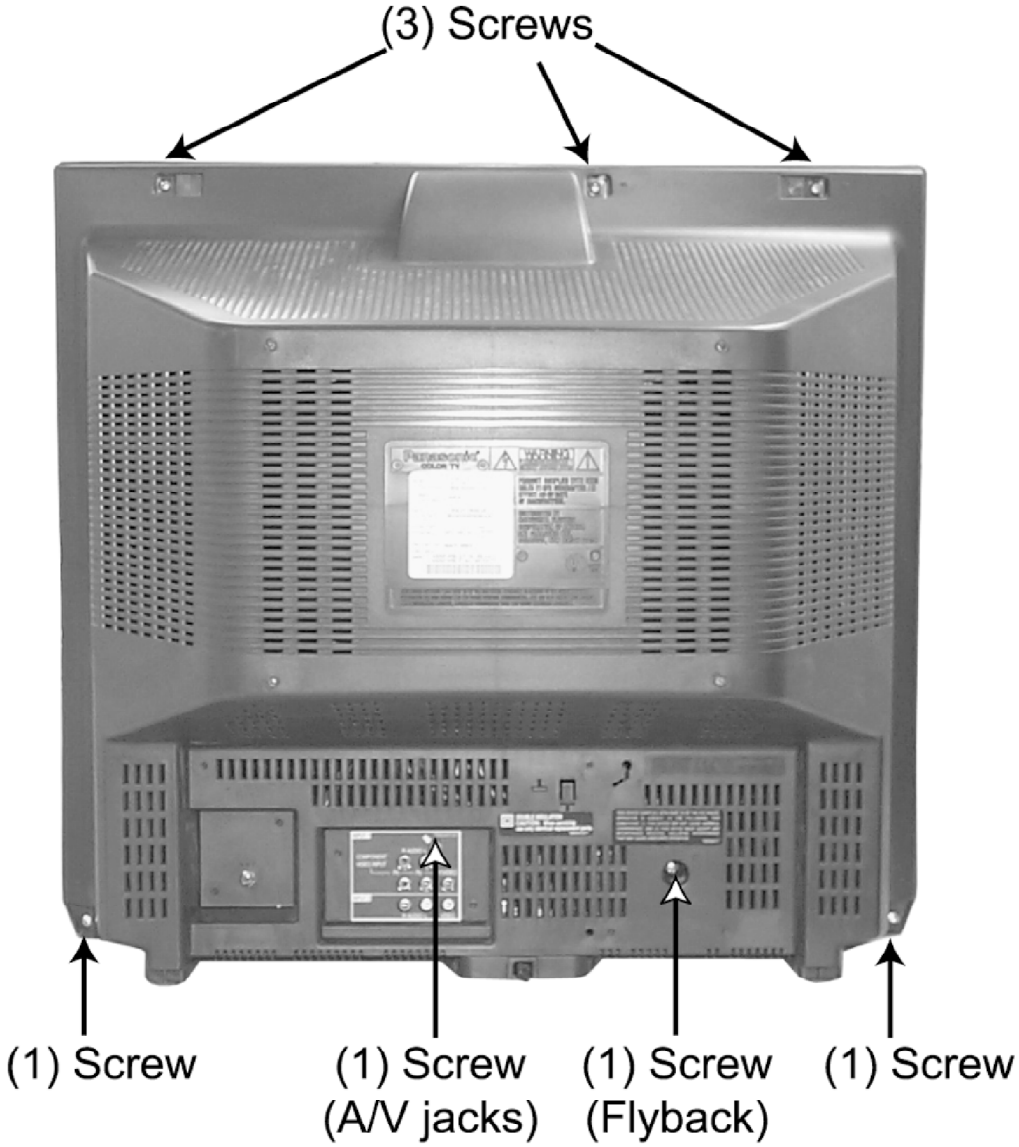

14.2. Chassis Components

Rear view (inside cabinet).

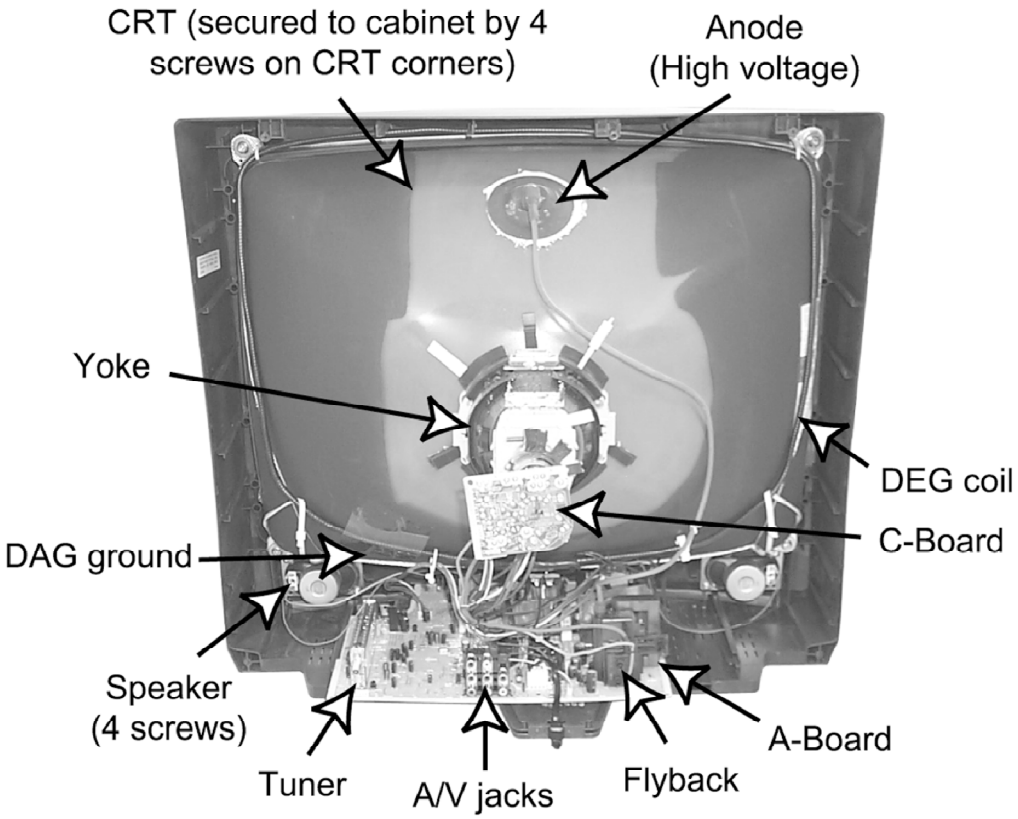

14.2.1. C-Board Chassis

C-Board component locations

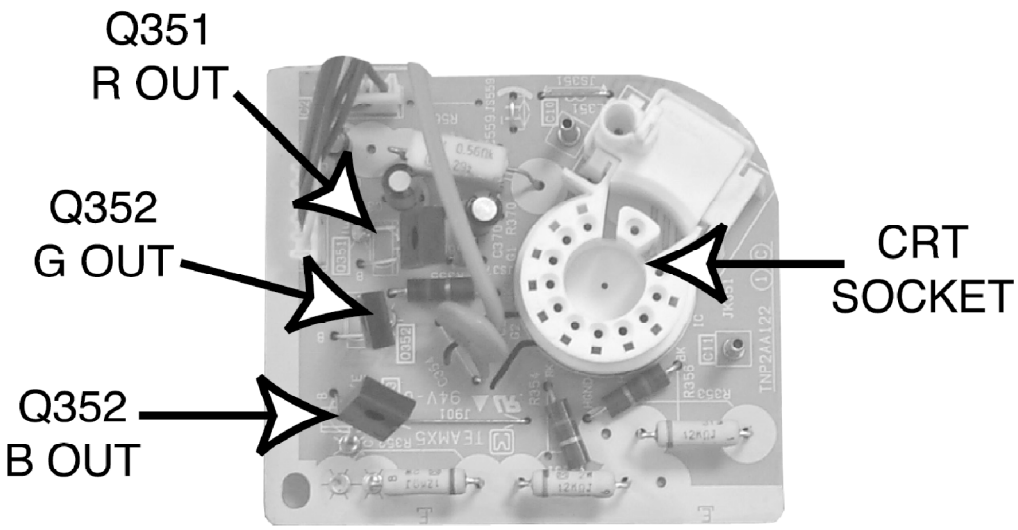

14.2.2. CT-20G8G/CT-20G8SG A-Board Chassis

A-Board Top view (CT-20G8G/CT-20G8SG).

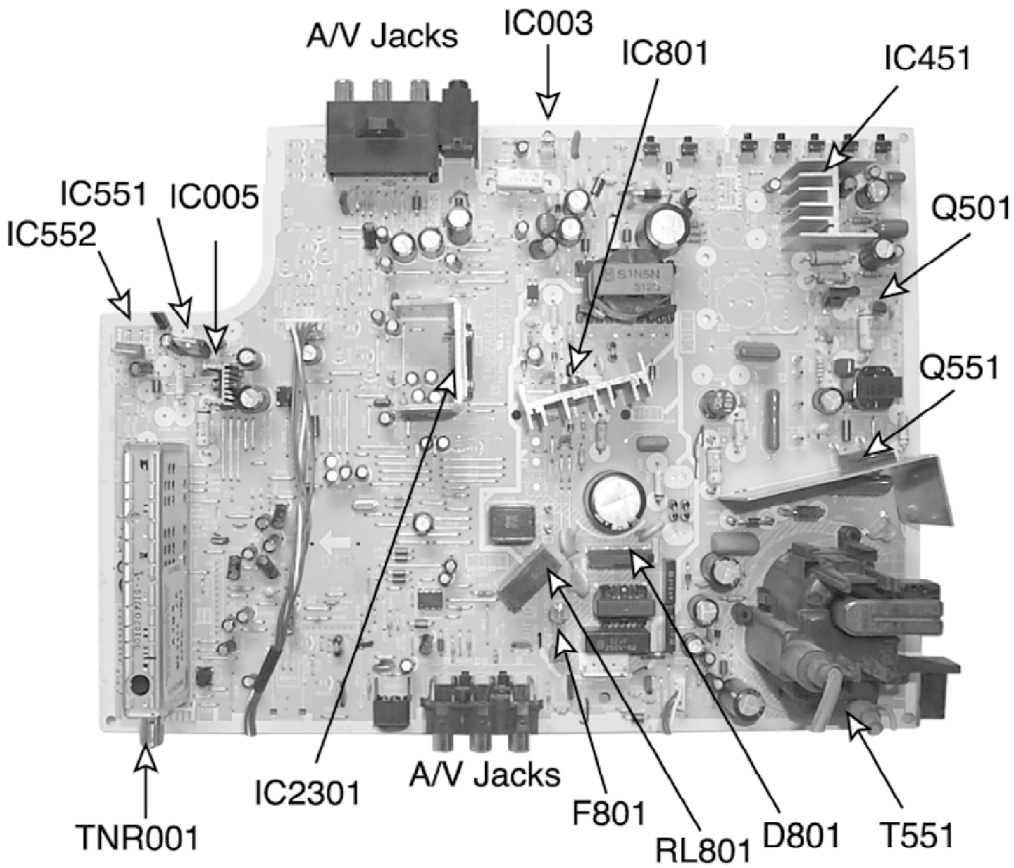

14.2.3. CT-20L8 A-Board Chassis

A-Board Top view (CT-20L8G)

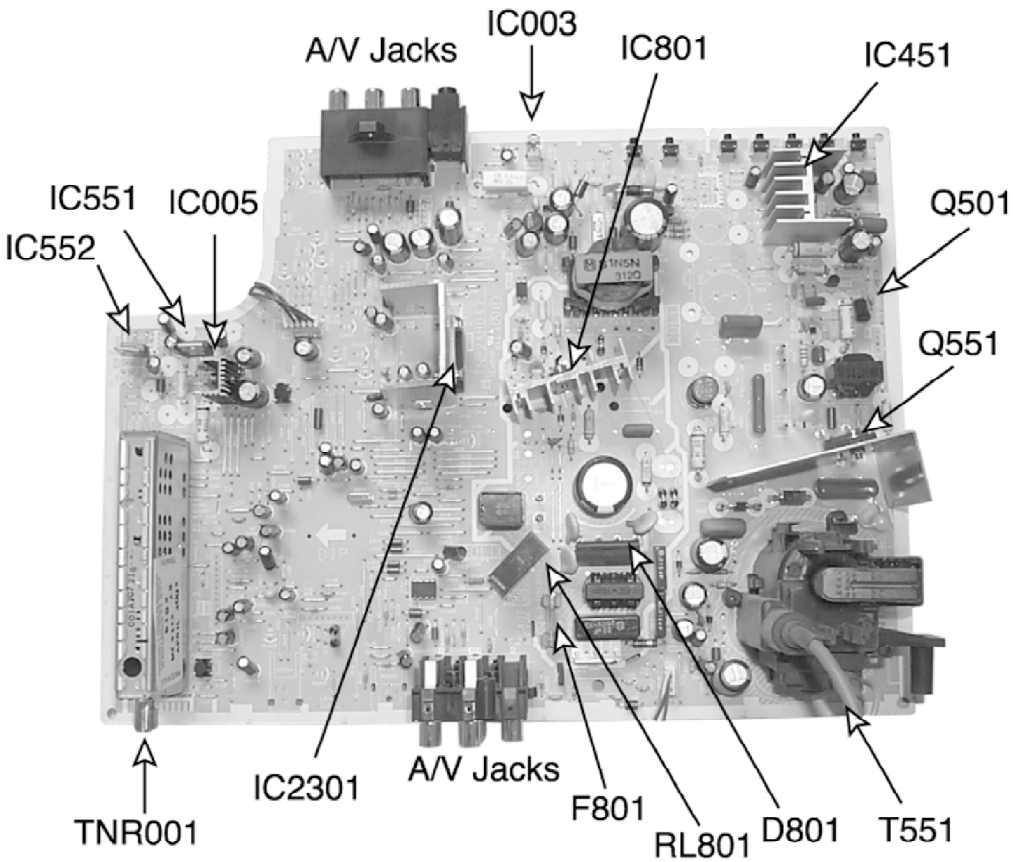

14.2.4. CT-25L8/CT-25L8U A-Board Chassis

A-Board Top view (CT-25L8G/CT-25L8UG).

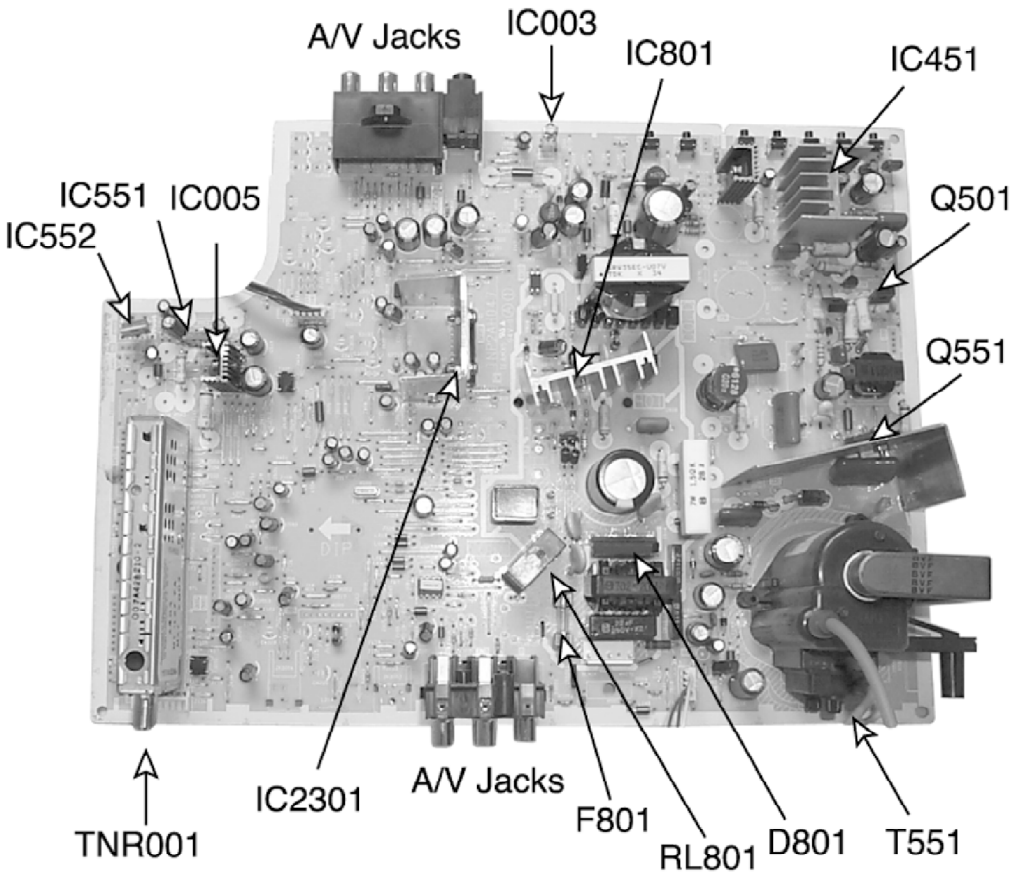

14.2.5. A-Board Surface-mounted components

A-Board (bottom view)

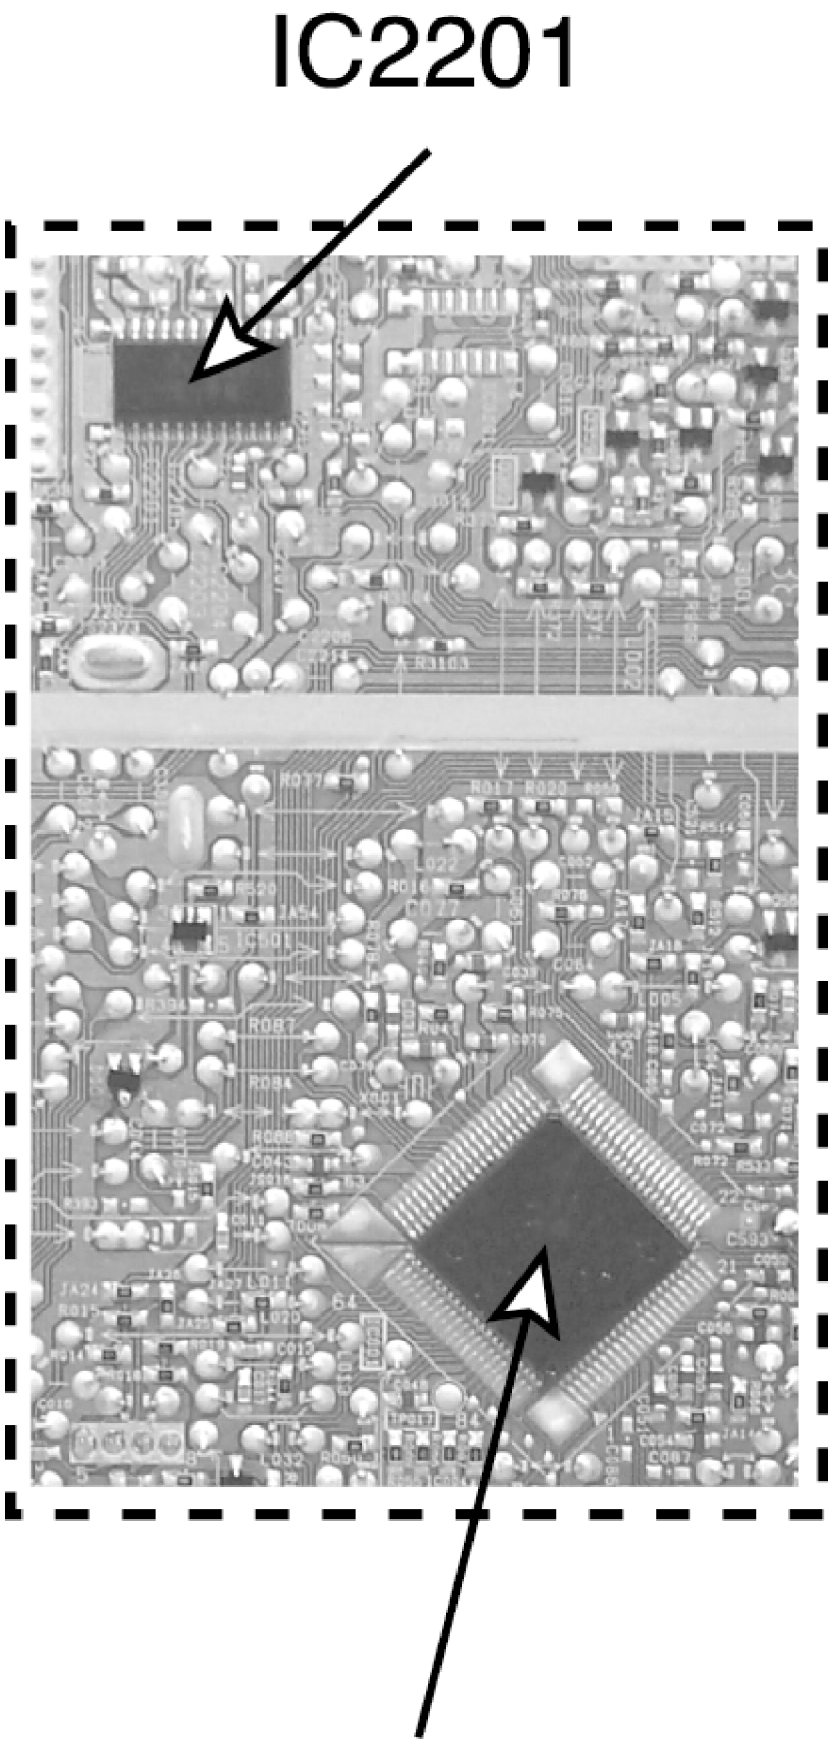
IC2201

IC001

15. Reference for PDF Colors

DESCRIPTION OF PDF LINK COLORS	
TYPE	DESTINATION
SCHEMATIC	
YELLOW ON IC	IC ON PCB
YELLOW ON CONNECTOR	CONNECTOR ON PCB
YELLOW ON SCHEMATIC	PCB
CYAN	WAVEFORM
GREEN ON SIDE	SCHEMATIC CONTINUED
GREEN ON CONNECTOR	CONNECTOR CONNECTION
BLUE ON IC	VOLTAGE
PCB	
BLUE ON IC	IC ON SCHEMATIC
BLUE ON CONNECTOR	CONNECTOR ON SCHEMATIC
BLUE ON PCB	SCHEMATIC
GREEN ON SIDE	PCB CONTINUED
BLOCK DIAGRAMS	
GREEN ON IC	IC ON SCHEMATIC
GREEN ON SIDE	BLOCK DIAGRAM CONTINUED

16. Conductor Views

16.1. A-Board Printed Circuit (Left Side)

16.2. A-Board& C Board Printed Circuit (Right Side)

17. Block Diagrams

17.1. Video Signal Block Diagram

17.2. Audio Signal Block Diagram

18. Schematics

18.1. English Schematic Notes

Notes:

IMPORTANT SAFETY NOTICE

THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES THAT ARE IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS DESIGNATED WITH A ⚠ IN THE SCHEMATIC.

CHIP TRANSISTOR LEAD DESIGNATION



SCHEMATIC NOTES

1. Resistors are carbon 1/4W unless noted otherwise.
2. Capacitors are ceramic 50V unless noted otherwise.
3. Coil value notes is inductance in μH.
4. Test point indicated by ; Test point but no pin .
5. Components indicated with ⚠ are critical parts and replacement should be made with manufacture specified replacement parts only.
6. ▬ (**BOLD LINE**) indicates the route of B+ supply.
7. The schematic diagrams are current at the time of printing and are subject to change without notice.
8. Ground symbol ⏚ indicates **HOT GROUND CONNECTION**; ⏚ indicates COLD GROUND.

NOTE: All other component symbols are used for engineering design purposes.

VOLTAGE MEASUREMENTS

1. Voltage measurement:
   - AC input to the Receiver is 120V. NTSC (HD, 1125i & 525P when applicable) signal generator is connected to the antenna of the Receiver. (Color bar pattern of 100 IRE white and 7.5 IRE black.)
   - All Picture and Audio adjustments are set to Normalize.
     TV ANT/CABLE - (Set-Up Menu) in TV/ANT Mode
     Volume - Min.
     TV/Video SW - TV position
     Audio Mode - Stereo
   - Voltage readings are nominal and may vary ±10% on active devices. Some voltage reading will vary with signal strength and picture content.
   - Supply voltages are nominal.
2. Ground symbol ⏚ indicates ground lead connection of meter.
   Incorrect ground connection will result in erroneous readings.

CAUTION: ***Incorrect ground connection of the test equipment will result in erroneous readings.***

WAVEFORM MEASUREMENTS

1. ③ indicates waveform measurement. (Measurement can be taken at the best accessible location in common to the indicated point.)
2. Taken with an NTSC signal generator connected to the antenna terminal. (NTSC color bar pattern of 8 bars of EIA colors, 100 IRE white and 7.5 IRE black.)
3. Customer Controls (Picture/Audio Menu) are set to Normalize. Volume is set to "MIN".
4. All video and color waveforms are taken with a wideband scope and a probe with low capacitance (10 to 1). Shape and peak altitudes may vary depending on the type of Oscilloscope used and its settings.
5. Ground symbol ⏚ shown on waveform number indicates (Hot) ground lead connection of the Oscilloscope.

CAUTION: Incorrect ground connection of the test equipment will result in erroneous readings.

18.2. Notas de Esquemáticos en Español

Notas

NOTA DE SEGURIDAD

LOS DIAGRAMAS ELÉCTRICOS INCLUYEN CARACTERÍSTICAS ESPECIALES MUY IMPORTANTES PARA LA PROTECCIÓN CONTRA RAYOS-X, QUEMADURAS Y DESCARGAS ELÉCTRICAS. CUANDO SE DE SERVICIO ES IMPORTANTE USAR PARA REEMPLAZO DE COMPONENTES CRITICOS, SOLO PARTES ESPECIFICADAS POR EL FABRICANTES. LOS COMPONENTES CRITICOS ESTAN SEÑALADOS EN LOS DIAGRAMAS POR EL SIMBOLO ⚠.

IDENTIFICACIÓN DE TERMINALES PARA TRANSISTORES EN *CHIP*



NOTAS DE LOS DIAGRAMAS

1. Las Resistencias son de Carbón de 1/4W, a menos que se indique otra característica.
2. Los Capacitores son de Cerámica para 50V, a menos que se indique otra característica.
3. El valor indicado de las Bobinas es la inductancia expresada en μH.
4. Los puntos de prueba en la terminal de algún componente son indicados por ● Los puntos de prueba fuera de los componentes se indican con ○.
5. Los componentes señalados con el símbolo ⚠ son considerados componentes críticos y deben ser reemplazados sólo con las partes especificadas por el fabricante.
6. ▬ (**LINEA GRUESA**) indica las líneas de alimentación de los Voltajes B+.
7. Los diagramas eléctricos están sujetos a cambio sin previo aviso.
8. El símbolo ⏚ indica que es una conexión a **Tierra Caliente** y el símbolo ⏚ indica conexión a **Tierra Fría**.

NOTA: Los demas símbolos de componentes incluidos son usados con fines de diseño.

MEDICIÓN DE VOLTAJES

1. Medición de voltaje:
   - El voltaje de entrada al Receptor es de 120V de Corriente Alterna. Un generador de patrones con formato NTSC se conecta a la entrada de la antena. (Patrón de Barras de Colores con 100 IREs para el Blanco y 7.5 IREs para el Negro.)
   - Los ajustes de los Menus Picture y Audio se normalizan.
     En el Menú Set-Up, en la opción ANTENA, se selecciona el modo de CABLE.
     El nivel de Volumen se minimiza.
     De los modos TV y Video, seleccionar el modo TV.
     Seleccionar modo Estereo del Audio.
   - Las mediciones de los voltajes son nominales y pueden variar hasta 10% en componentes en funcionamiento. Las lecturas de los voltajes pueden variar por la potencia de la señal y el contenido de la imagen.
   - Las fuentes de voltajes son nominales.
2. El símbolo ⏚ indica el tipo de tierra que se utiliza en la conexión del medidor.

PRECAUCION: Si no se utiliza la conexión a la tierra adecuada, se obtendrán mediciones equivocadas y podría dañar el equipo de medición.

MEDICIÓN DE FORMAS DE ONDA

1. Un símbolo como ③ indica el punto para medir una señal. (La medición puede hacerse en el punto con mayor accesibilidad, siempre que sea común al indicado.)
2. Se midieron utilizando un generador con formato NTSC conectado a la terminal de la antena. (Patrón de 8 Barras de Colores EAI, formato NTSC de 100 IREs para el Blanco y 7.5 IREs para el Negro.)
3. Los ajustes de usuario de los Menus PICTURE y AUDIO se normalizaron. Posteriormente el nivel de volumen se ajusta al mínimo.
4. Las formas de onda de Video y Color fueron tomadas con un osciloscopio de banda alta y con un punta de prueba de baja capacitancia (10 a 1). La forma y amplitud de las ondas puede variar según el tipo de osciloscopio que se utilice y sus características.
5. El símbolo de tierra ⏚ que aparece junto al número de la forma de onda, indica que se utiliza conexión a **Tierra Caliente** en el extremo negativo de la punta de prueba.

PRECAUCION: Si no se utiliza la conexión a la tierra adecuada, se obtendrán mediciones equivocadas y podría dañar el equipo de medición.

18.3. A-Board Schematic TNP2AH047AA/AB (page 1 of 4)
18.4. A-Board Schematic TNP2AH047AA/AB (page 2 of 4)
18.5. A-Board Schematic TNP2AH047AA/AB (page 3 of 4)
18.6. A-Board Schematic TNP2AH047AA/AB (page 4 of 4)
18.7. A-Board Schematic TNP2AH047FA (page 1 of 4)
18.8. A-Board Schematic TNP2AH047FA(page 2 of 4)
18.9. A-Board Schematic TNP2AH047FA (page 3 of 4)
18.10. A-Board Schematic TNP2AH047FA (page 4 of 4)
18.11. C-Board Schematic TNP2AA122AA/FA
18.12. Voltages
18.13. Waveforms

19. Parts Location

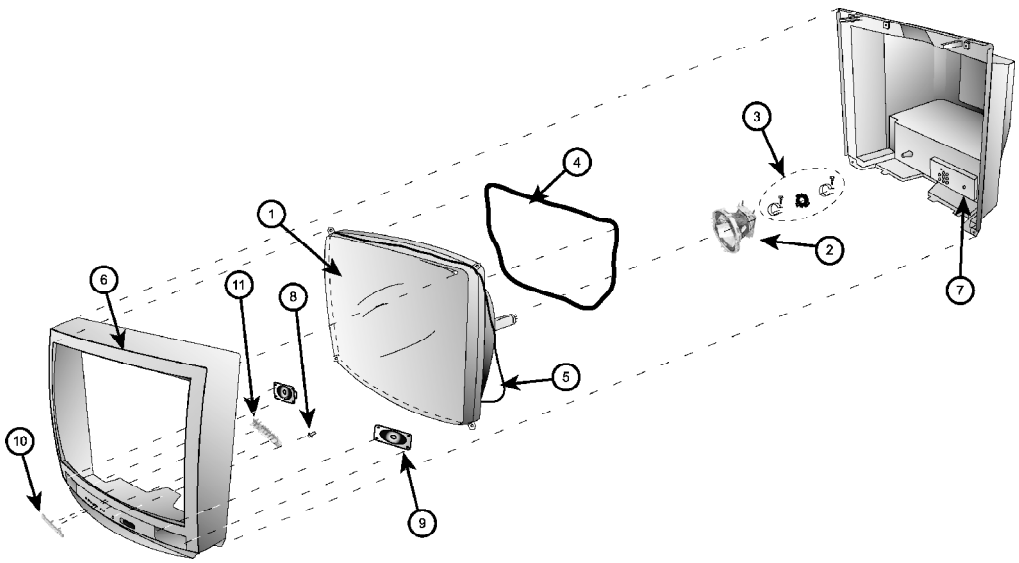

20. Parts List

20.1. Parts List Notes

Important Safety Notice

Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use manufacturer's specified parts.

Abbreviation of part name and description

1. Resistor

Example :

ERD25TJ104 **C** 100KΩ, **J**, 1/4W
Type Allowance

Type	Allowance
C : Carbon	F : ± 1%
F : Fuse	G : ± 2%
M : Metal Oxide Metal Film	J : ± 5% K : ± 10%
S : Solid	M : ± 20%
W : Wire Wound	

2. Capacitor

Example :

ECKF1H103ZF **C** 0.01µF, **Z**, 50V
Type Allowance

Type	Allowance
C : Carbon	C : ± 0.25pF
E : Electrolytic	D : ± 0.5pF
P : Polyester Polypropylene	F : ± 1pF G : ± 3%
T : Tantalum	J : ± 5%
	K : ± 10%
	L : ± 15%
	M : ± 20%
	P : ± 100%, -0%
	Z : ± 80%, -20%

20.2. Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CAPRISTORS	
CRA801	TP00842-51	TAPING GAP TERMINAL	⚠
		CAPACITORS	
C003	ECA1HM4R7B	CAP E 4.7UF-50V	
C004	TCJ2VC1H150J	CAP C 15PF-J-50V	
C005	TCJ2VC1H150J	CAP C 15PF-J-50V	
C008	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C009	ECJ2VF1H104Z	CAP C .1UF-Z-50V	
C010	TCJ2VC1H680J	CAP C 68PF-J-50V	
C011	TCJ2VC1H680J	CAP C 68PF-J-50V	
C012	ECA1HM0R1B	CAP E 0.1UF/50V	
C013	TCJ2VC1H680J	CAP C 68PF-J-50V	
C016	ECA1AM101B	CAP E 100UF-10V	
C017	TCJ2VC1H680J	CAP C 68PF-J-50V	
C018	ECJ2VF1H103Z	CAP C .01UF-Z-50V / CT-20G8G CT-20G8SG CT-20L8G	
C018	TCJ2VF1H103Z	CAP C .01UF-Z-50V / CT-25L8G CT-25L8UG	
C019	ECA0JM102B	CAP E 1000UF-6.3V	
C020	ECA1CM102B	CAP E 1000UF/16V	
C021	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C031	TCJ2VC1H220J	CAP C 22PF-J-50V	
C032	ECA1AM470B	CAP E 47UF-10V	
C034	TCJ2VC1H390J	CAP C 39PF-J-50V	
C035	TCJ2VC1H120J	CAP C 12PF-J-50V	
C038	ECA1CM470B	CAP E 47UF/16V	

Ref. No.	Part No.	Part Name & Description	Remarks
C039	TCJ2VB1H221K	CAP C 220PF-K-50V	
C041	ECA1HM2R2B	CAP E 2.2UF-50V	
C043	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C044	ECA0JM102B	CAP E 1000UF-6.3V	
C046	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C048	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C051	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C052	ECA1CM101B	CAP E 100UF/16V	
C053	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C054	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C055	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C056	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C057	ECEA1CN100UB	CAP E 10UF-16V	
C058	ECEA1CN100UB	CAP E 10UF-16V	
C059	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C060	ECEA1CN220UB	CAP E 22UF-16V	
C061	ECA1HM100B	CAP E 10UF/50V	
C062	ECA1HM100B	CAP E 10UF/50V	
C063	ECJ2VF1C104Z	CAP C .1UF-Z-16V	
C064	ECA1CM101B	CAP E 100UF/16V	
C066	TCJ2VC1H330J	CAP C 33PF-J-50V	
C067	TCJ2VC1H680J	CAP C 68PF-J-50V	
C068	ECA1CM100B	CAP E 10UF-16V	
C070	ECJ2VF1C104Z	CAP C .1UF-Z-16V	
C071	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C072	TCJ2VB1H221K	CAP C 220PF-K-50V	
C073	TCJ2VC1H101J	CAP C 100PF-J-50V	
C077	ECA1HM100B	CAP E 10UF/50V	
C079	TCJ2VC1H220J	CAP C 22PF-J-50V	
C083	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C085	ECJ2VB1C104K	CAP C .1UF-K-16V	
C350	ECA1CM101B	CAP E 100UF/16V	
C351	TCJ2VC1H101J	CAP C 100PF-J-50V / CT-20G8G CT-20G8SG CT-20L8G	
C351	TCJ2VC1H331J	CAP C 330PF-J-50V / CT-25L8G CT-25L8UG	
C352	TCJ2VC1H101J	CAP C 100PF-J-50V / CT-20G8G CT-20G8SG CT-20L8G	
C352	TCJ2VC1H331J	CAP C 330PF-J-50V / CT-25L8G CT-25L8UG	
C353	TCJ2VC1H151J	CAP C 150PF-J-50V / CT-20G8G CT-20G8SG CT-20L8G	
C353	TCJ2VC1H331J	CAP C 330PF-J-50V / CT-25L8G CT-25L8UG	
C354	ECKW3D102KBN	CAP C .001UF-K-2KVDC	
C357	EEANA1E1R0B	CAP E 1.0UF-25V	
C359	ECA1CM471B	CAP E 470UF-16V	
C360	ECA1HM4R7B	CAP E 4.7UF-50V	
C370	ECA1HM100B	CAP E 10UF/50V / CT-25L8G CT-25L8UG	
C403	ECEA1CN220UB	CAP E 22UF-16V	
C411	ECQB1H683JF3	CAP P .068UF-J-50V	
C451	ECA1HM2R2B	CAP E 2.2UF-50V	
C452	ECA1CM220B	CAP E 22UF-16V	
C454	ECA1VHG101B	CAP E 100UF-35V	
C455	ECA1EM102E	CAP E 1000UF-25V	
C458	ECA1HM010B	CAP E 1UF-50V	
C459	ECA1VHG471E	CAP E 470UF-35V	
C460	ECQB1224KF3	CAP P .22UF-K-100V	
C461	ECQB1104JF3	CAP P .10UF-J-100V / CT-25L8G CT-25L8UG	
C462	ECJ2VF1H103Z	CAP C .01UF-Z-50V	

Ref. No.	Part No.	Part Name & Description	Remarks
C501	ECCR1H221JC5	CAP C 220PF-J-50V	
C505	ECQB1H104JF3	CAP P .10UF-J-50V	
C506	ECKR2H102KB5	CAP C 1000PF-K-500V	
C510	ECCR2H100D5	CAP C 10PF-D-500V	
C512	ECA2CM100B	CAP E 10UF-160V	
C531	ECA1HM4R7B	CAP E 4.7UF-50V	⚠
C540	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C551	ECA1VHG471B	CAP E 470UF-35V	⚠
C554	ECKR2H561KB5	CAP C 560PF-K-500V	
C555	ECA2EM220E	CAP E 22UF-250V / CT-25L8G CT-25L8UG	⚠
C555	ECA2EM470E	CAP E 47UF-250V / CT-20G8G CT-20G8SG CT-20L8G	⚠
C556	ECA1CM471B	CAP E 470UF-16V	⚠
C557	ECKR2H102KB5	CAP C 1000PF-K-500V / CT-25L8G CT-25L8UG	
C557	ECKR2H222KB5	CAP C 2200PF-K-500V / CT-20G8G CT-20G8SG CT-20L8G	
C560	ECQB1104JFW	OR ECQB1104JF3	⚠
C561	ECEA1HN010UB	CAP E 1UF/50V	
C562	ECKR2H561KB5	CAP C 560PF-K-500V	
C563	ECWH12H362JS	CAP P 3600PF-J-1.2KV / CT-20G8G CT-20G8SG CT-20L8G	⚠
C563	ECWH16622JVB	CAP P 6200PF-J-1.5KV / CT-25L8G CT-25L8UG	⚠
C564	ECWH12H822JS	CAP P .0082UF-J-1.2KV / CT-25L8G CT-25L8UG	⚠
C564	ECWH12H472JS	CAP P .0047UF-J-1.2KV / CT-20G8G CT-20G8SG CT-20L8G	⚠
C565	ECKW3D561JBR	CAP P 560PF-J-2KV / CT-25L8G CT-25L8UG	⚠
C565	ECKW3D821JBP	CAP C 820PF-J-2KV / CT-20G8G CT-20G8SG CT-20L8G	⚠
C566	ECKW3D181JBP	CAP C 180PF-J-2KV	⚠
C568	ECQM4473JZW	CAP P .047UF-J-400V / CT-20G8G CT-20G8SG CT-20L8G	⚠
C568	ECWF2224JBB	CAP P .22UF-J-200V / CT-25L8G CT-25L8UG	⚠
C569	ECWF2394JSR	CAP M .39UF-J-200V / CT-20G8G CT-20G8SG CT-20L8G	⚠
C569	ECWF2474JSR	CAP P .47UF-J-200V / CT-25L8G CT-25L8UG	⚠
C570	ECA1CM221B	CAP E 10UF-16V	
C571	ECA1CM220B	CAP E 22UF-16V	
C572	ECA0JM221B	CAP E 220UF-6.3V	
C573	ECA1CM101B	CAP E 100UF/16V	
C575	ECKR2H471KB5	CAP C 470PF-K-500V	
C593	ECA1CM470B	CAP E 47UF/16V	
C605	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C606	ECA0JM221B	CAP E 220UF-6.3V	
C800	ECKR3A152KBP	CAP C 1500PF-K-1KVDC	
C801	ECKWAE472ZED	CAP C 4700PF-Z-500V	⚠
C802	ECKWAE472ZED	CAP C 4700PF-Z-500V	⚠
C803	ECKWAE472ZED	CAP C 4700PF-Z-500V	⚠
C805	EC0S2DA221BB	CAP E 220UF/200V / CT-20G8G CT-20G8SG CT-20L8G	⚠
C805	EC0S2DA331BB	CAP E 330UF/200V / CT-25L8G CT-25L8UG	⚠
C806	ECQM4103KZW	CAP P .01UF-K-400V	
C808	ECA1HM470B	CAP E 47UF-50V	
C809	ECKR1H102KB5	CAP C .001UF-K-50V / CT-25L8G CT-25L8UG	
C809	ECKR1H152KB5	CAP C 1500PF-K-50V / CT-20G8G CT-20G8SG CT-20L8G	
C810	ECKR1H471KB5	CAP C 470PF-K-50V	

Ref. No.	Part No.	Part Name & Description	Remarks
C812	ECQU2A224MVA	CAP P .22UF-M-250VAC	⚠
C813	ECQU2A153MVA	CAP P .015UF-M-250VAC	⚠
C814	ECQU2A153MVA	CAP P .015UF-M-250VAC	⚠
C820	ECA1CM101B	CAP E 100UF/16V	
C821	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C822	ECKR3A221KBP	CAP C 220PF-K-1KV	
C823	ECA1VM471B	CAP E 470UF-35V	⚠
C824	ECKR3A102KBP	CAP C 1000PF-K-1KV	
C825	EEUMG2C221S	CAP E 220UF-160V	⚠
C826	ECKR3A471KBP	CAP C 470PF-K-1KV	
C827	ECA1CM102B	CAP E 1000UF/16V	
C828	ECA160V33UE	CAP E 33UF/160V	⚠
C829	ECA1CM471B	CAP E 470UF-16V	
C830	ECA1CM471B	CAP E 470UF-16V	
C2201	ECA1HM4R7B	CAP E 4.7UF-50V	
C2202	ECA1HM2R2B	CAP E 2.2UF-50V	
C2203	ECA1HM4R7B	CAP E 4.7UF-50V	
C2204	AP106K016CAE	CAP T 10UF/16V	
C2205	ECA1HMR33B	CAP E .33UF-50V	
C2206	ECQB1H223JF3	CAP P .022UF-J-50V	
C2207	AP335K016CAE	CAP T 3.3UF/16V	
C2208	ECJ2VB1C104K	CAP C .1UF-K-16V	
C2209	ECJ2VB1C104K	CAP C .1UF-K-16V	
C2210	ECJ2VB1C104K	CAP C .1UF-K-16V	
C2212	ECQB1H473JF3	CAP P .047UF-J-50V	
C2213	ECA1HMR47B	CAP E .47UF-50V	
C2214	ECA1AM101B	CAP E 100UF-10V	
C2215	EEANA1E100B	CAP E 10UF-25V	
C2216	TCJ2VC1H100D	CAP C 10PF-J-50V	
C2217	ECJ2VB1H102K	CAP C .001UF-K-50V	
C2218	ECJ2VB1H102K	CAP C .001UF-K-50V	
C2219	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C2220	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C2301	ECA1EM102E	CAP E 1000UF-25V	
C2302	ECA1HM010B	CAP E 1UF-50V	
C2304	ECA1CM101B	CAP E 100UF/16V	
C2307	ECA1CM102B	CAP E 1000UF/16V	
C2308	ECKR1H103ZF3	CAP C .01UF-Z-50V	
C2312	ECA1HM010B	CAP E 1UF-50V	
C2313	ECA1EM220B	CAP E 22UF-25V	
C2317	ECA1CM102B	CAP E 1000UF/16V	
C2350	ECA1CM101B	CAP E 100UF/16V	
C3001	ECA1CM220B	CAP E 22UF-16V	
C3002	ECA1CM220B	CAP E 22UF-16V	
C3011	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C3012	ECA1HM010B	CAP E 1UF-50V	
C3013	ECA1CM100B	CAP E 10UF-16V	
C3014	ECA1CM100B	CAP E 10UF-16V	
C3018	ECA1HM010B	CAP E 1UF-50V	
C3019	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C3025	ECA1HM100B	CAP E 10UF/50V	
C3234	ECA1CM470B	CAP E 47UF/16V	

Ref. No.	Part No.	Part Name & Description	Remarks
C3240	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
		DIODES	
D001	MAZ30680ML	DIODE	
D002	MA2C165001VT	DIODE	
D003	MAZ30510HL	DIODE	
D006	MAZ33000HL	DIODE	
D007	MAZ30510HL	DIODE	
D010	MAZ40510MF	DIODE ZENER	
D055	MAZ40330MF	DIODE ZENER	
D360	MA2C165001VT	DIODE	
D380	MA2C029WBF	DIODE	
D451	B0EAKL000008	DIODE RECTIFIER	
D452	MA2C165001VT	DIODE	
D505	D1NL40V70	DIODE	
D531	MA2C165001VT	DIODE	⚠
D551	B0HAMM000072	DIODE FAST RECOVERY	⚠
D554	AU02V0	DIODE	⚠
D556	MA2C165001VT	DIODE	
D557	MAZ40270LF	DIODE ZENER	
D558	B0HANV000008	DIODE	
D559	EU2	DIODE	
D561	AU02V0	DIODE	⚠
D606	MA2C165001VT	DIODE	
D801	D3SBA60-4103	DIODE	⚠
D803	MAZ41200MF	DIODE ZENER	
D806	TAP2AA0003	PTC 3-OHM	⚠
D808	SARS01V1	DIODE	
D809	B0HAJP000015	DIODE	
D810	B0HAJP000015	DIODE	
D811	B0HAJP000015	DIODE	
D820	MA2C165001VT	DIODE	
D821	MAZ40470HF	DIODE ZENER	
D822	B0HAMM000103	DIODE	
D823	S3L60P154004	DIODE	⚠
D824	B0HAMM000072	DIODE FAST RECOVERY	
D2302	MAZ43000MF	DIODE ZENER	
D2305	CVS20A120MTA	DIODE	
D2307	CVS20A120MTA	DIODE	
D2350	MAZ40910LF	DIODE	
D2355	MAZ30510HL	DIODE	
D3001	MAZ40510MF	DIODE ZENER	
D3004	CVS20A120MTA	DIODE	
D3005	CVS20A120MTA	DIODE	
D3007	MAZ31100ML	DIODE ZENER	
D3008	MAZ31100ML	DIODE ZENER	
D3009	MAZ31100ML	DIODE ZENER	
D3010	MAZ31100ML	DIODE ZENER	
D3011	MAZ31100ML	DIODE ZENER	
D3012	MAZ31100ML	DIODE ZENER	
D3017	MAZ31100ML	DIODE ZENER	
D3018	MAZ31100ML	DIODE ZENER	
D3019	CVS20A120MTA	DIODE	

Ref. No.	Part No.	Part Name & Description	Remarks
D3021	CVS20A120MTA	DIODE	
D3023	MAZ31100ML	DIODE ZENER	
D3024	MAZ31100ML	DIODE ZENER	
		FUSES	
F801	XBA2A00101	FUSE 6.3A 125V	⚠
		INTEGRATED CIRCUITS	
IC001	MN101E03GTB3	MPU	
IC002	TVR2AJ165S	EEPROM / CT-20G8G CT-20G8SG	
IC002	TVR2AJ166S	EEPROM / CT-20L8G CT-25L8G CT-25L8UG	
IC003	GP1UE282GK	IR SENSOR	
IC004	PST9128NR	RESET	
IC005	PQ3RD13	3.3V STBY REGULATOR	
IC451	AN5522	VERTICAL OUT AMP	
IC501	NC7SZU04M5X	H-DRIVE INVERTER	
IC551	AN78M09LB	9V VOLTAGE REGULATOR	
IC552	AN78M05LB	5V VOLTAGE REGULATOR	
IC801	STRW5634	MAIN POWER SUPPLY	⚠
IC802	0N3171RLF	OPTO-COUPLER	⚠
IC2201	AN5829S-E1V	MTS	
IC2301	AN17807A	AUDIO AMP	
IC3001	MM1114XFBE	VIDEO SWITCH	
		COILS	
L002	EXCELSA39V	FERRITE BEAD	
L003	EXCELDR35V	FERRITE BEAD	
L005	EXCELSA35V	FERRITE BEAD	
L006	EXCELSA35T	FERRITE BEAD	
L007	ELESN330JA	COIL PEAKING 33UH	
L008	G0C470KA0029	COIL PEAKING 47UH	
L010	G0C2R2KA0029	COIL PEAKING 2.2UH	
L011	EXCELSA26T	FERRITE BEAD	
L012	G0C2R2KA0029	COIL PEAKING 2.2UH	
L013	EXCELSA26T	FERRITE BEAD	
L014	ELESN180KA	COIL PEAKING 18UH	
L015	ELESN3R3JA	COIL PEAKING 3.3UH	
L020	EXCELSA26T	FERRITE BEAD	
L023	EXCELSA26T	FERRITE BEAD / CT-25L8G CT-25L8UG	
L032	EXCELSA26T	FERRITE BEAD	
L108	EXCELSA35V	FERRITE BEAD	
L110	G0C101KA0021	COIL PEAKING 100UH	
L245	EXCELSA35V	FERRITE BEAD	
L312	EXCELSA24T	FERRITE BEAD	
L351	G0C101KA0021	COIL PEAKING 100UH / CT-25L8G CT-25L8UG	
L551	ELH5L4101	COIL / CT-20G8G CT-20G8SG CT-20L8G	⚠
L551	ELH5L6128	COIL HORIZ. LINEARITY / CT-25L8G CT-25L8UG	⚠
L552	EXCELSA39V	FERRITE BEAD	
L801	ELF15N011A	COIL / CT-20G8G CT-20G8SG CT-20L8G	⚠
L801	ELF21V018A	COIL / CT-25L8G CT-25L8UG	⚠
L802	ELEIN680KA	COIL PEAKING 68UH / CT-20G8G CT-20G8SG CT-20L8G	
L802	TALL08T470KA	COIL / CT-25L8G CT-25L8UG	
L803	TALL08T680KA	COIL	
L804	EXCELDR35V	FERRITE BEAD / CT-20G8G CT-20G8SG CT-20L8G	
L805	EXCELDR35V	FERRITE BEAD / CT-20G8G CT-20G8SG CT-20L8G	

Ref. No.	Part No.	Part Name & Description	Remarks
L806	EXCELDR35V	FERRITE BEAD	
L807	EXCELSA35V	FERRITE BEAD	
L808	EXCELSA35V	FERRITE BEAD	
L809	EXCELDR35V	FERRITE BEAD / CT-25L8G CT-25L8UG	
L810	EXCELDR35V	FERRITE BEAD / CT-25L8G CT-25L8UG	
L2301	EXCELDR35V	FERRITE BEAD / CT-20L8G CT-25L8G CT-25L8UG	
L2303	EXCELSA39T	FERRITE BEAD / CT-25L8G CT-25L8UG	
L2305	EXCELSA35V	FERRITE BEAD	
		TRANSISTORS	
Q001	2SD601ARTX	TRANSISTOR	
Q057	2SB709ARTX	TRANSISTOR	
Q058	2SB709ARTX	TRANSISTOR	
Q070	2SD601ARTX	TRANSISTOR	
Q092	2SB709ARTX	TRANSISTOR	
Q351	2SC3063RL	TRANSISTOR	
Q352	2SC3063RL	TRANSISTOR	
Q353	2SC3063RL	TRANSISTOR	
Q354	2SD601ARTX	TRANSISTOR	
Q355	2SD601ARTX	TRANSISTOR	
Q356	2SD601ARTX	TRANSISTOR	
Q357	2SD601ARTX	TRANSISTOR	
Q358	2SD601ARTX	TRANSISTOR	
Q359	2SD601ARTX	TRANSISTOR	
Q360	2SB709ARTX	TRANSISTOR	
Q361	2SB709ARTX	TRANSISTOR	
Q362	2SB709ARTX	TRANSISTOR	
Q411	2SB0710AQL	TRANSISTOR	
Q412	2SD0602AQL	TRANSISTOR	
Q451	2SB709ARTX	TRANSISTOR	
Q501	2SC1573AH	TRANSISTOR	
Q501	2SC4212HLB	TRANSISTOR / CT-25L8G CT-25L8UG	
Q551	2SC562200VLK	TRANSISTOR / CT-20G8G CT-20G8SG CT-20L8G	⚠
Q551	2SC5902000LK	TRANSISTOR / CT-25L8G CT-25L8UG	⚠
Q560	2SB709ARTX	TRANSISTOR	
Q605	2SB709ARTX	TRANSISTOR	
Q606	2SD601ARTX	TRANSISTOR	
Q801	2SD601ARTX	TRANSISTOR	
Q802	2SD601ARTX	TRANSISTOR	
Q820	2SA1767QTA	TRANSISTOR	
Q830	2SB1011QRL	TRANSISTOR	
Q831	2SC1473ATA	TRANSISTOR	
Q2350	2SB709ARTX	TRANSISTOR	
Q3001	2SD601ARTX	TRANSISTOR	
Q3002	2SD601ARTX	TRANSISTOR	
		RELAYS	
RL801	K6B1AGA00042	RELAY	⚠
		RESISTORS	
J327	ERDS2TJ471T	RES C 470-J-1/2W	
R001	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R004	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R005	ERJ6GEYJ471V	RES M 470-J-1/10W	
R007	ERJ6GEYJ471V	RES M 470-J-1/10W	
R008	ERJ6GEYJ223V	RES M 22K-J-1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R009	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R014	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R015	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R016	ERJ6GEYJ221V	RES M 220-J-1/10W	
R017	ERJ6GEYJ221V	RES M 220-J-1/10W	
R018	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R019	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R020	ERJ6GEYJ221V	RES M 220-J-1/10W	
R021	ERJ6GEYJ101V	RES M 100-J-1/10W	
R022	ERJ6GEYJ101V	RES M 100-J-1/10W	
R023	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R024	ERJ6GEYJ101V	RES M 100-J-1/10W	
R025	ERJ6GEYJ101V	RES M 100-J-1/10W	
R026	ERDS1FJ561P	RES C 560-J-1/2W	
R032	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R033	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R034	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R035	ERJ6GEYJ332V	RES M 3.3K-J-1/10W	
R036	ERJ6GEYJ512V	RES M 5.1K-J-1/10W	
R037	ERJ6GEYJ912V	RES M 9.1K-J-1/10W	
R038	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R039	ERDS2TJ102T	RES C 1K-J-1/4W	
R040	ERJ6GEYJ680V	RES M 68-J-1/10W	
R041	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R042	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R043	ERJ6GEYJ153V	RES M 15K-J-1/10W	
R044	ERJ6GEYJ101V	RES M 100-J-1/10W	
R045	ERDS2TJ101T	RES C 100-J-1/4W	
R046	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R047	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R048	ERJ6GEYJ101V	RES M 100-J-1/10W	
R050	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R052	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R053	ERJ6GEYJ101V	RES M 100-J-1/10W	
R055	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R056	ERJ6GEYJ471V	RES M 470-J-1/10W	
R057	ERJ6GEYJ101V	RES M 100-J-1/10W	
R060	ERJ6GEYJ101V	RES M 100-J-1/10W	
R061	ERJ6GEYJ221V	RES M 220-J-1/10W	
R062	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R063	ERDS2TJ101T	RES C 100-J-1/4W	
R064	ERJ6GEYJ473V	RES M 47K-J-1/10W	
R065	ERDS2TJ101T	RES C 100-J-1/4W	
R066	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R067	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R068	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R069	ERJ6GEYJ123V	RES M 12K-J-1/10W	
R070	ERJ6GEYJ561V	RES M 560-J-1/10W	
R071	ERJ6GEYJ680V	RES M 68-J-1/10W	
R072	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R073	ERJ6GEYJ471V	RES M 470-J-1/10W	
R074	ERJ6GEYJ471V	RES M 470-J-1/10W	
R075	ERJ6ENF3902V	RES M 39K-F-1/10W	
R076	ERJ6ENF6201V	RES M 6.2K-F-1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R077	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R078	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R080	ERJ6GEYJ183V	RES M 18K-J-1/10W	
R081	ERJ6GEYJ153	RES M 15K-J-1/10	
R082	ERJ6GEYJ183V	RES M 18K-J-1/10W	
R083	ERJ6GEYJ153V	RES M 15K-J-1/10W	
R084	ERDS2TJ182T	RES C 1.8K-J-1/4W	
R087	ERDS2TJ221T	RES C 220-J-1/4W	
R088	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R092	ERJ6GEYJ473V	RES M 47K-J-1/10W	
R093	ERJ6GEYJ331V	RES M 330-J-1/10W	
R351	ERG2FJ123H	RES M 12K-J-2W	
R352	ERG2FJ123H	RES M 12K-J-2W	
R353	ERG2FJ123H	RES M 12K-J-2W	
R354	ERC12GK272C	RES C 2.7K-K-1/2W	
R355	ERC12GK272C	RES C 2.7K-K-1/2W	
R356	ERC12GK272C	RES C 2.7K-K-1/2W	
R357	ERJ6ENF3300V	RES M 330-F-1/10W	
R358	ERJ6ENF3300V	RES M 330-F-1/10W	
R359	ERJ6ENF3300V	RES M 330-F-1/10W	
R360	ERJ6ENF1101V	RES M 1.1K-F-1/10W / CT-20G8G CT-20G8SG CT-20L8G	
R360	ERJ6ENF9100V	RES M 910-F-1/10W / CT-25L8G CT-25L8UG	
R361	ERJ6ENF1101V	RES M 1.1K-F-1/10W / CT-20G8G CT-20G8SG CT-20L8G	
R361	ERJ6ENF9100V	RES M 910-F-1/10W / CT-25L8G CT-25L8UG	
R362	ERJ6ENF1101V	RES M 1.1K-F-1/10W / CT-20G8G CT-20G8SG CT-20L8G	
R362	ERJ6ENF9100V	RES M 910-F-1/10W / CT-25L8G CT-25L8UG	
R363	ERJ6GEYJ101V	RES M 100-J-1/10W	
R364	ERJ6GEYJ101V	RES M 100-J-1/10W	
R365	ERJ6GEYJ101V	RES M 100-J-1/10W	
R369	ERDS2TJ393T	RES C 39K-J-1/4W / CT-25L8G CT-25L8UG	
R370	ERDS2TJ224T	RES C 220K-J-1/4W / CT-25L8G CT-25L8UG	
R371	ERJ6GEYJ101V	RES M 100-J-1/10W	
R372	ERJ6GEYJ101V	RES M 100-J-1/10W	
R373	ERJ6GEYJ101V	RES M 100-J-1/10W	
R374	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R375	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R376	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R377	ERJ6ENF3300V	RES M 330-F-1/10W	
R378	ERJ6ENF3300V	RES M 330-F-1/10W	
R379	ERJ6ENF3300V	RES M 330-F-1/10W	
R380	ERJ6ENF1501V	RES M 1.5K-F-1/10W	
R381	ERJ6ENF1501V	RES M 1.5K-F-1/10W	
R382	ERJ6ENF1501V	RES M 1.5K-F-1/10W	
R383	ERJ6ENF3481V	RES M 3.48K-F-1/10W	
R384	ERJ6ENF7500V	RES M 750-F-1/10W	
R385	ERDS1FJ150P	RES C 15-J-1/2W	
R389	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R390	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R391	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R411	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R412	ERJ6GEYJ471V	RES M 470-J-1/10W	
R413	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R414	ERJ6GEYJ471V	RES M 470-J-1/10W	
R451	ERDS1FJ1R0P	RES C 1.0-J-1/2W / CT-25L8G CT-25L8UG	

Ref. No.	Part No.	Part Name & Description	Remarks
R451	ERDS1FJ1R2P	RES C 1.2-J-1/2W / CT-20G8G CT-20G8SG CT-20L8G	
R453	ERJ6GEYJ333V	RES M 33K-J-1/10W	
R454	ERJ6GEYJ243V	RES M 24K-J-1/10W / CT-20G8G CT-20G8SG CT-20L8G	
R454	ERJ6GEYJ363V	RES M 36K-J-1/10W / CT-25L8G CT-25L8UG	
R455	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R456	ERG3FJ151	RES M 150-J-3W	
R457	ERDS1FJ1R0P	RES C 1.0-J-1/2W	
R458	ERJ6GEYJ123V	RES M 12K-J-1/10W	
R459	ERJ6GEYJ122V	RES M 1.2K-J-1/10W / CT-20G8G CT-20G8SG CT-20L8G	
R459	ERJ6GEYJ152V	RES M 1.5K-J-1/10W / CT-25L8G CT-25L8UG	
R462	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R463	ERJ6GEYJ473V	RES M 47K-J-1/10W	
R464	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R468	ERJ6ENF1962V	RES M 19.6K-F-1/10W	
R469	ERJ6ENF5621V	RES M 5.62K-F-1/10W	
R471	ERJ6GEYJ223V	RES M 22K-J-1/10W / CT-25L8G CT-25L8UG	
R471	ERJ6GEYJ333V	RES M 33K-J-1/10W / CT-20G8G CT-20G8SG CT-20L8G	
R504	ERDS2TJ102T	RES C 1K-J-1/4W	
R505	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R506	ERG1SJ562P	RES M 5.6K-J-1W	
R507	ER0S2THF1802	RES M 18K-F-1/4W	⚠
R509	ERJ6ENF1002V	RES M 10K-F-1/10W	⚠
R510	ERG3FJ472	RES M 4.7K-J-3W / CT-20G8G CT-20G8SG CT-20L8G	⚠
R510	ERG3FJ622	RES M 6.2K-J-3W / CT-25L8G CT-25L8UG	⚠
R511	ERG3FJ622	RES M 6.2K-J-3W / CT-25L8G CT-25L8UG	⚠
R512	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R514	ERJ6GEYJ392V	RES M 3.9K-J-1/10W	
R515	ERDS2TJ101T	RES C 100-J-1/4W	
R532	ERJ6ENF2202V	RES M 22K-F-1/10W	⚠
R533	ERJ6ENF1003V	RES M 100K-F-1/10W	⚠
R540	ERJ6GEYJ105V	RES M 1M-J-1/10W	
R541	ERDS2TJ274T	RES C 27K-J-1/4W	
R542	ERJ6GEYJ124V	RES M 120K-J-1/10W	
R551	ERX12SJR47P	RES M .47-J-1/2W	⚠
R552	ERDS1FJ1R0T	RES C 1.0-J-1/2W	⚠
R557	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R558	ERQ1CKPR56S	RES F .56-K-1W / CT-25L8G CT-25L8UG	⚠
R558	ERQ2CJP1R5S	RES F 1.5-J-2W / CT-20G8G CT-20G8SG CT-20L8G	⚠
R559	ERG2FJ683H	RES M 12K-J-2W	
R561	ERG2FJ102H	RES M 1K-J-2W	
R562	ERG2FJ270H	RES M 27-J-2W	
R563	ERG3FJ150H	RES M 15-J-3W	
R564	ERDS2TJ104T	RES C 100K-J-1/4W	
R565	ERDS2TJ393T	RES C 39K-J-1/4W / CT-25L8G CT-25L8UG	
R565	ER0S2TKF9762	RES M 97.6K-F-1/4W / CT-20G8G CT-20G8SG CT-20L8G	
R592	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R605	ERDS2TJ103T	RES C 10K-J-1/4W	
R606	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R607	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R608	ERJ6GEYJ104V	RES M 100K-J-1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R801	ERF7ZK1R5	RES W 1.5-K-7 / CT-25L8G CT-25L8UG	
R802	ERG2FJ104H	RES M 100K-J-2W	
R804	ERG1DJ224P	RES M220K-J-1W	
R805	ERX2FZJR15H	RES M .18-J-2W	⚠
R806	ERX12SJ1R5P	RES M 1.5-J-1/2W	⚠
R807	ERDS2TJ681T	RES C 680-J-1/4W	
R808	ERX12SJ1R5P	RES M 1.5-J-1/2W	
R809	ERDS2TJ472T	RES C 4.7K-J-1/4	
R810	ERDS2TJ221T	RES C 220-J-1/4W	
R815	ERC12ZGK825D	RES C 8.2MEG-K-1/2W	⚠
R817	ERX3FJ6R8	RES M 6.8-J-3W / CT-20G8G CT-20G8SG CT-20L8G	⚠
R821	ERDS1FJ1R0T	RES C 1.0-J-1/2W / CT-25L8G CT-25L8UG	
R821	ERDS1FJ1R5T	RES C 1.5-J-1/2W / CT-20G8G CT-20G8SG CT-20L8G	
R822	ERDS1FJ1R0T	RES C 1.0-J-1/2W / CT-25L8G CT-25L8UG	
R822	ERDS1FJ1R5T	RES C 1.5-J-1/2W / CT-20G8G CT-20G8SG CT-20L8G	
R823	ERDS1FJ272T	RES C 2.7K-J-1/2W	
R824	ERDS2TJ223T	RES C 22K-J-1/4W	
R825	ERDS2TJ272T	RES C 2.7K-J-1/4W	
R827	ERJ6GEYJ153V	RES M 15K-J-1/10W	
R828	ERJ6GEYJ104V	RES M 100K-J-1/10W	
R829	ERJ6GEYJ104V	RES M 100K-J-1/10W	
R830	ERG2FJ273H	RES M 27K-J-2W	
R831	ERDS2TJ682T	RES C 6.8K-J-1/4W	
R832	ERJ6GEYJ122V	RES M 1.2K-J-1/10W / CT-25L8G CT-25L8UG	
R832	ERJ6GEYJ512V	RES M 5.1K-J-1/10W / CT-20G8G CT-20G8SG CT-20L8G	
R833	ERJ6GEYJ473V	RES M 47K-J-1/10W	
R834	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R837	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R838	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R850	ERQ12HJR22P	RES F .22-J-1/2W / CT-25L8G CT-25L8UG	⚠
R850	ERQ12HJR56P	RES F .56-J-1/2W / CT-20G8G CT-20G8SG CT-20L8G	⚠
R202	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R2201	ERJ6GEYJ224V	RES M 220K-J-1/10W	
R2203	ERJ6GEYJ272V	RES M 2.7K-J-1/10W	
R2204	ERJ6GEYJ272V	RES M 2.7K-J-1/10W	
R2205	ERDS2TJ101T	RES C 100-J-1/4W	
R2206	ERDS2TJ273T	RES C 27K-J-1/4W	
R2207	ERJ6GEYJ152V	RES M 1.5K-J-1/10W	
R2208	ERJ6GEYJ152V	RES M 1.5K-J-1/10W	
R2301	ERQ2CJP5R6S	RES F 5.6-J-2W / CT-20G8G CT-20G8SG CT-20L8G	
R2351	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R2352	ERJ6GEYJ152V	RES M 1.5K-J-1/10W	
R2357	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R2370	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R3002	ERJ6GEYJ221V	RES M 220-J-1/10W	
R3003	ERJ6GEYJ221V	RES M 220-J-1/10W	
R3004	ERDS2TJ101T	RES C 100-J-1/4W	
R3005	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3006	ERJ6GEYJ151V	RES M 150-J-1/10W	
R3007	ERJ6GEYJ151V	RES M 150-J-1/10W	
R3008	ERJ6ENF75R0V	RES M 75.0-F-1/10W	
R3009	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R3010	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3011	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R3012	ERDS2TJ101T	RES C 100-J-1/4W	
R3013	ERJ6ENF75R0V	RES M 75.0-F-1/10W	
R3014	ERJ6ENF75R0V	RES M 75.0-F-1/10W	
R3015	ERJ6ENF75R0V	RES M 75.0-F-1/10W	
R3016	ERDS2TJ181T	RES C 180-J-1/4W	
R3017	ERDS2TJ181T	RES C 180-J-1/4W	
R3018	ERDS2TJ101T	RES C 100-J-1/4W	
R3019	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R3020	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R3021	ERDS2TJ101T	RES C 100-J-1/4W	
R3022	ERDS2TJ101T	RES C 100-J-1/4W	
R3023	ERDS2TJ101T	RES C 100-J-1/4W	
R3024	ERDS2TJ101T	RES C 100-J-1/4W	
R3026	ERDS2TJ101T	RES C 100-J-1/4W	
R3027	ERDS2TJ101T	RES C 100-J-1/4W	
R3034	ERJ6GEYJ471V	RES M 470-J-1/10W	
R3035	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R3036	ERJ6GEYJ183V	RES M 18K-J-1/10W	
R3037	ERJ6GEYJ471V	RES M 470-J-1/10W	
R3038	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R3039	ERJ6GEYJ183V	RES M 18K-J-1/10W	
R3041	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R3042	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R3101	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3102	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3103	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3104	ERJ6GEYJ334V	RES M 330K-J-1/10W	
		SWITCHES	
S001	EVQPF106K	SWITCH	
S002	EVQPF106K	SWITCH	
S003	EVQPF106K	SWITCH	
S004	EVQPF106K	SWITCH	
S005	EVQPF106K	SWITCH	
S008	EVQPF106K	SWITCH	
S009	EVQPF106K	SWITCH	
		TRANSFORMERS	
T501	ETH19Y211AZ	TRASMFORMER	
T551	TLF2AA004	TRANSFORMER FLYBACK / CT-25L8G CT-25L8UG	⚠
T551	ZTFN32501A	TRANSFORMER FLYBACK / CT-20G8G CT-20G8SG CT-20L8G	⚠
T801	ETS29AS1N5NC	TRANSFORMER / CT-20G8G CT-20G8SG CT-20L8G	⚠
T801	SRW35EC-U07V	TRANSFORMER SWITCHING / CT-25L8G CT-25L8UG	⚠
T3001	TF0402B04P03	TRANSFORMER	
T3002	TF0402B04P03	TRANSFORMER	
		CRYSTALS / FILTERS	
X001	A1100005BD	CRYSTAL	
		OTHERS	
TNR001	ENG36621G	TUNER	⚠
M001	TSX2AA0361	LINE CORD AC	
M002	TJSC00300	CRT SOCKET	

Ref. No.	Part No.	Part Name & Description	Remarks
1	A51KQK99X01	CRT 20 INCH, DEFLECTION YOKE, PURITY AND CONVERGENCE RINGS / CT-20G8G CT-20G8SG CT-20L8G	⚠
	A63QDB891X	CRT 25 INCH / CT-25L8G CT-25L8UG	⚠
2	TLY2AA027	DEFLECTION YOKE / CT-25L8G CT-25L8UG	⚠
3	JH291U-009	PURITY AND CONVERGENCE RINGS / CT-25L8G CT-25L8UG	
4	TSP2AA008	COIL DEGAUSSING / CT-20G8G CT-20G8SG CT-20L8G	⚠
	TSP2AA028	COIL DEGAUSSING / CT-25L8G CT-25L8UG	⚠
5	TXF3A01BA3	ASSY. DAG GND / CT-20G8G CT-20G8SG CT-20L8G	
	TXF3A01DF3	ASSY. DAG GND / CT-25L8G CT-25L8UG	
M003	TMM2A30702	WEDGE YOKE	
M004	0FMK014ZZ	CONVERGENCE CORRECTOR STRIP	
M005	TSN40007	MAGNET PURITY / CT-25L8G CT-25L8UG	
M006	TSN63115-4	MAGNET PURITY / CT-20G8G CT-20G8SG CT-20L8G	
6	TXFKY13GSER	ASSY CABINET FRONT / CT-20G8G	
	TXFKY14GSER	ASSY CABINET FRONT / CT-20L8G	
	TXFKY15GSER	ASSY CABINET FRONT / CT-20G8SG	
	TXFKY16GSER	ASSY CABINET FRONT / CT-25L8G CT-25L8UG	
7	TXFKU11GSER	ASSY CABINET BACK / CT-20G8G CT-20G8SG CT-20L8G	
	TXFKU12FSER	ASSY CABINET BACK / CT-25L8G CT-25L8UG	
8	TKX2AA00401	IR GUIDE / CT-20G8G CT-20G8SG CT-20L8G	
	TKX2AA00403	IR GUIDE / CT-25L8G CT-25L8UG	
9	TAS2AA0012	SPEAKER 16-OHM 1.5W	
10	TBM2A10141	BADGE PANASONIC / CT-20G8G	
	TBM2A10143	BADGE PANASONIC / CT-20G8SG CT-20L8G CT-25L8G CT-25L8UG	
11	TBX2AA1303G	BUTTON 7-KEY / CT-25L8G CT-25L8UG	
	TBX2AA1701GS	BUTTON 7-KEY / CT-20G8G	
	TBX2AA1702G	BUTTON 7-KEY / CT-20L8G	
	TBX2AA1702GS	BUTTON 7-KEY / CT-20G8SG	
JK3001	TJB2AA0221	TERMINAL A/V 8P / CT-20L8G CT-25L8G CT-25L8UG	
JK3001	TJB2A9064B	ASSY. JACK A/V / CT-20G8G CT-20G8SG	
JK3002	TJB2AA0046	TERMINAL FRONT A/V	
JK3003	TJB2AA0171	TERMINAL S-VIDEO / CT-20G8G CT-20G8SG	
		OTHER ACCESSORIES	
M007	TQB2AA0452-1	OWNERS MANUAL / CT-20G8G CT-20G8SG CT-20L8G	
M008	TQB2AA0461	OWNERS MANUAL / CT-25L8G CT-25L8UG	
M009	EUR7713010	REMOTE CONTROL	
M010	UR77EC1303A	BATTERY COVER REMOTE CONTROL	

A-Board

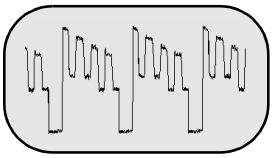

① **4 Vp-p**
A11 PIN 3 (BLUE OUT)

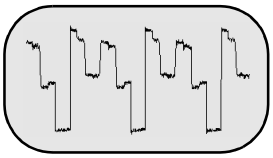

② **4 Vp-p**
A11 PIN 1 (RED OUT)

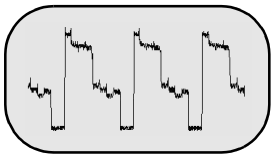

③ **4.32 V-p**
A11 PIN 2 (GREEN OUT)

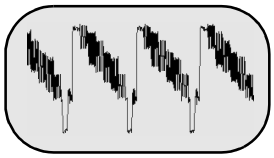

④ **1.3 Vp-p**
TPA5 (VIDEO)

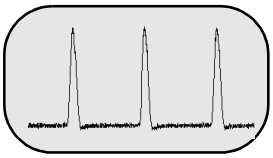

⑤ **3.28 Vp-p**
IC001 PIN 36 (FBP IN)

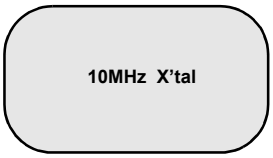

⑥
IC001 PIN 50 (OSC)

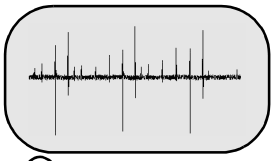

⑦ **600mv Vp-p**
IC451 PIN 1 (VERT IN)

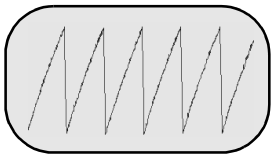

⑧ **3.88 Vp-p**
Q4111 B (V DRIVE)

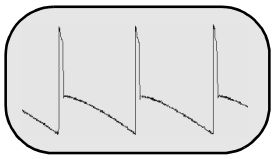

⑨ **56.8 Vp-p**
IC451 PIN 5(V OUT)

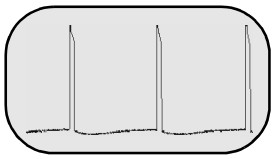

⑩ **28 Vp-p**
IC451 PIN 3 (PUMP UP)

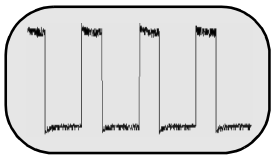

⑪ **3.20 Vp-p**
IC501 PIN 4 (H-DRIVE)

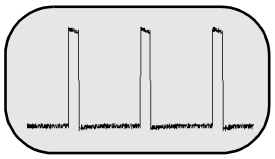

⑫ **114 Vp-p**
A12 PIN 2 (HEATER)

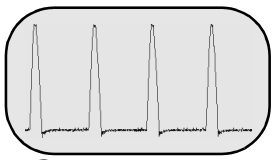

⑬ **1.18 kVp-p**
Q551 Collector (H OUT)

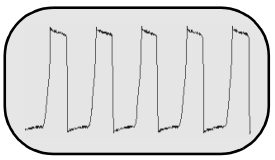

⑭ **356 Vp-p**
IC801 PIN 1

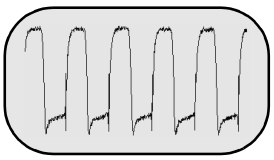

⑮ **2.88 Vp-p**
IC801 PIN 7

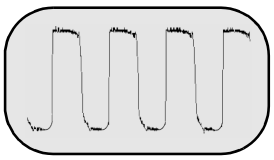

⑯ **114 Vp-p**
Q501 Collector

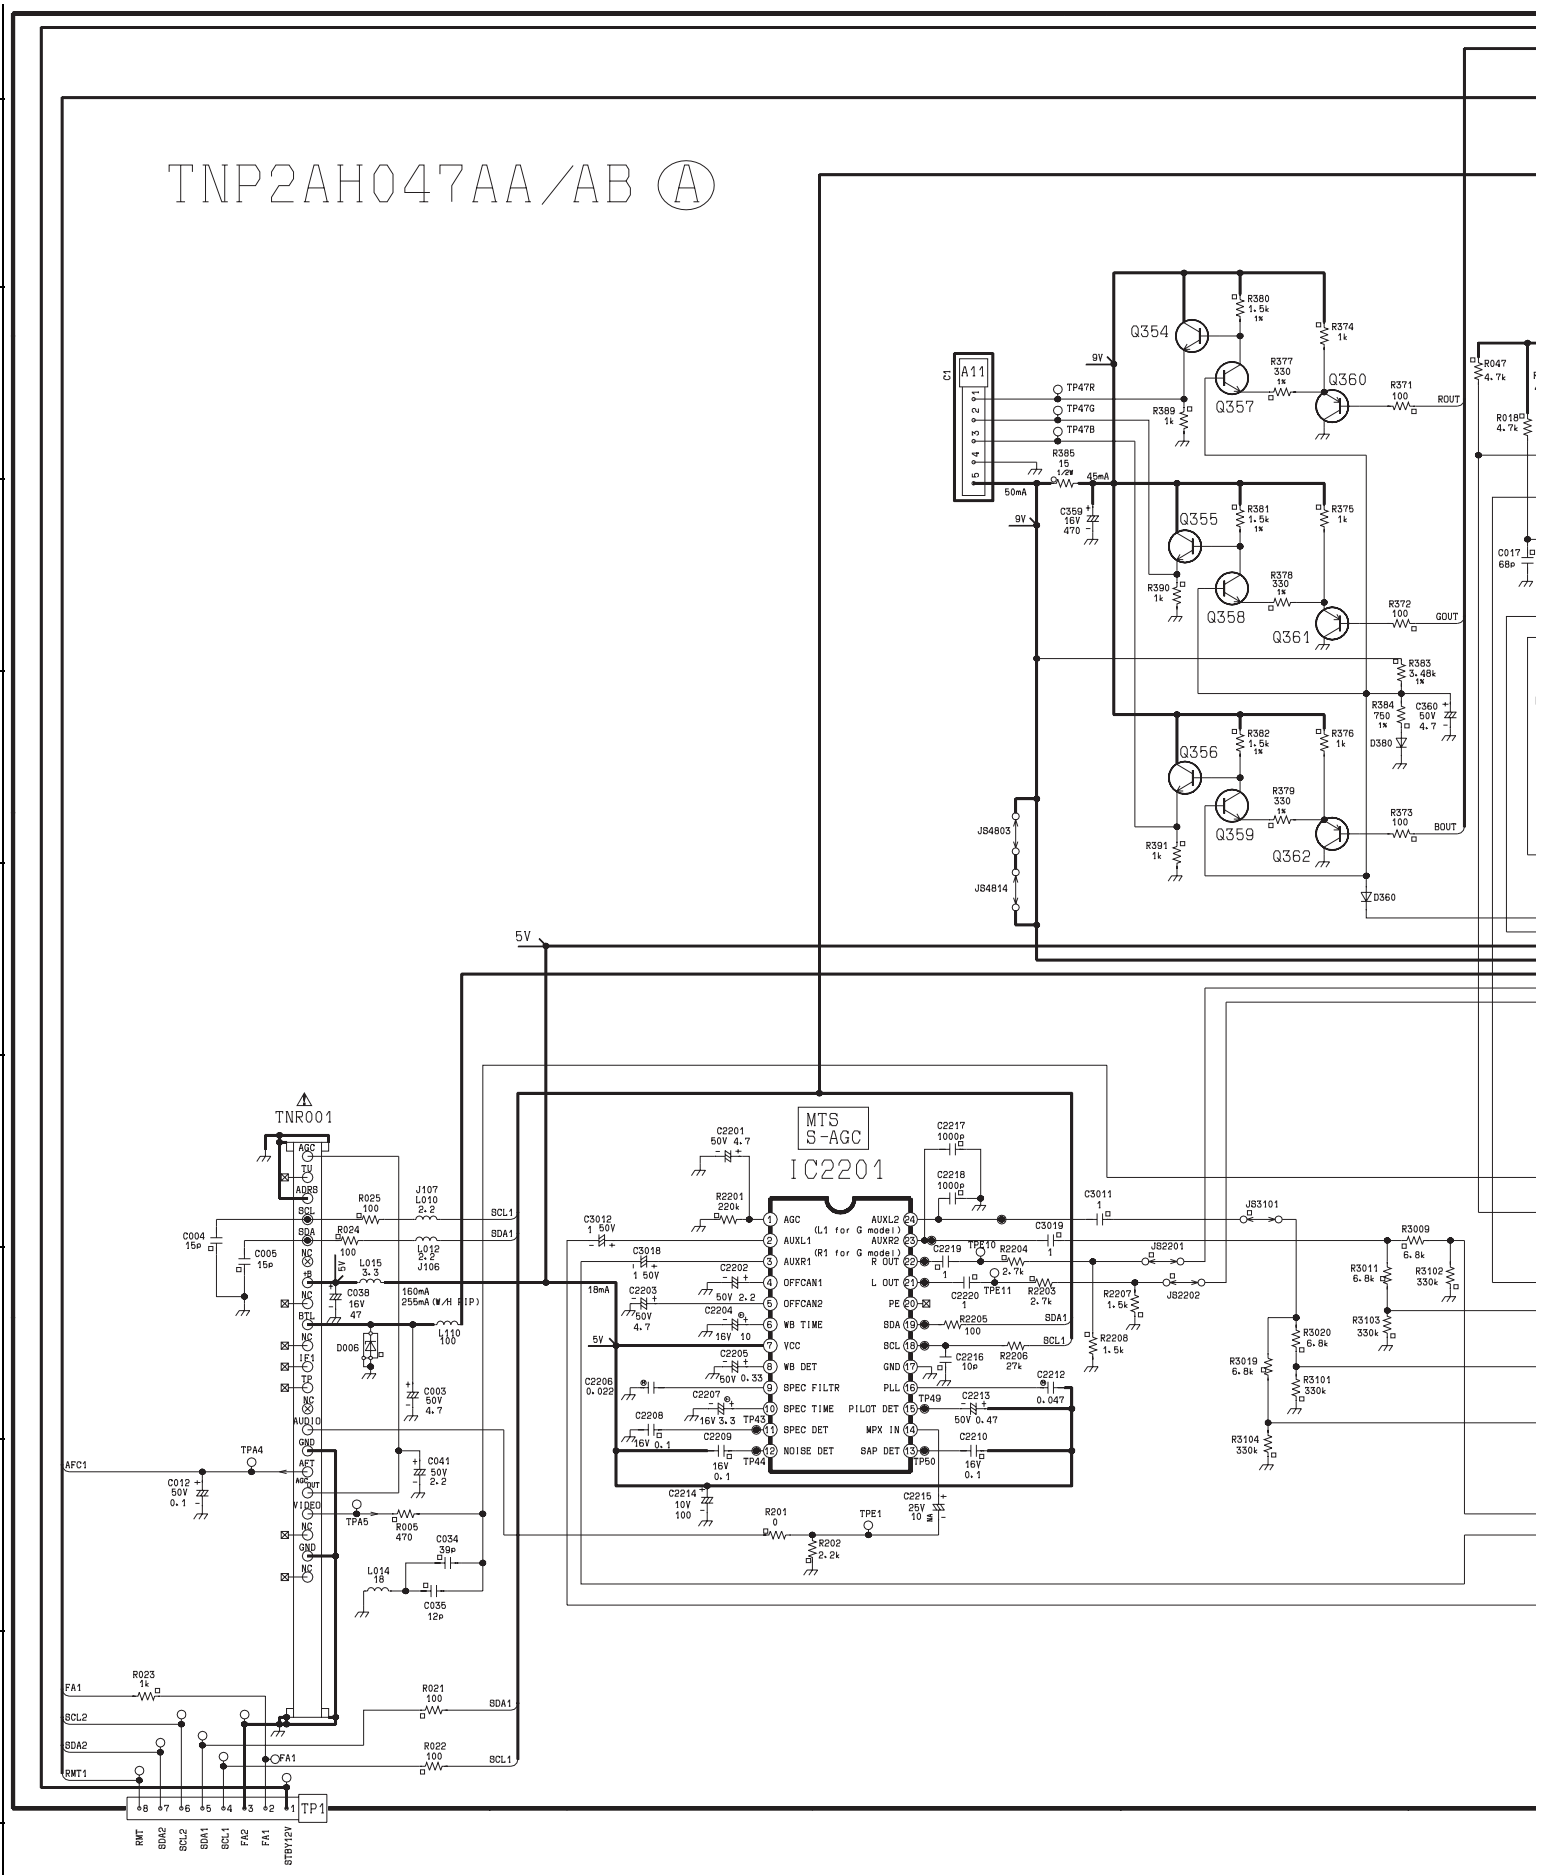
TNP2AH047AA/AB Ⓐ
IC2201
MTS
S-AGC
TNR001
Q354
Q355
Q356
Q357
Q358
Q359
Q360
Q361
Q362
A11
TP1
5V
9V
SCL1
SDA1
SCL2
SDA2
FA1
RMT1
ROUT
GOUT
BOUT
AGC
AUXL1
AUXR1
OFFCAN1
OFFCAN2
WB TIME
VCC
WB DET
SPEC FILTR
SPEC TIME
SPEC DET
NOISE DET
AUXL2
AUXR2
L OUT
R OUT
PE
SDA
SCL
GND
PLL
PILOT DET
MPX IN
SAP DET
(L1 for G model)
(R1 for G model)
AUDIO
VIDEO
AFC1
RMT
SDA2
SCL2
SDA1
SCL1
FA2
FA1
STBY12V

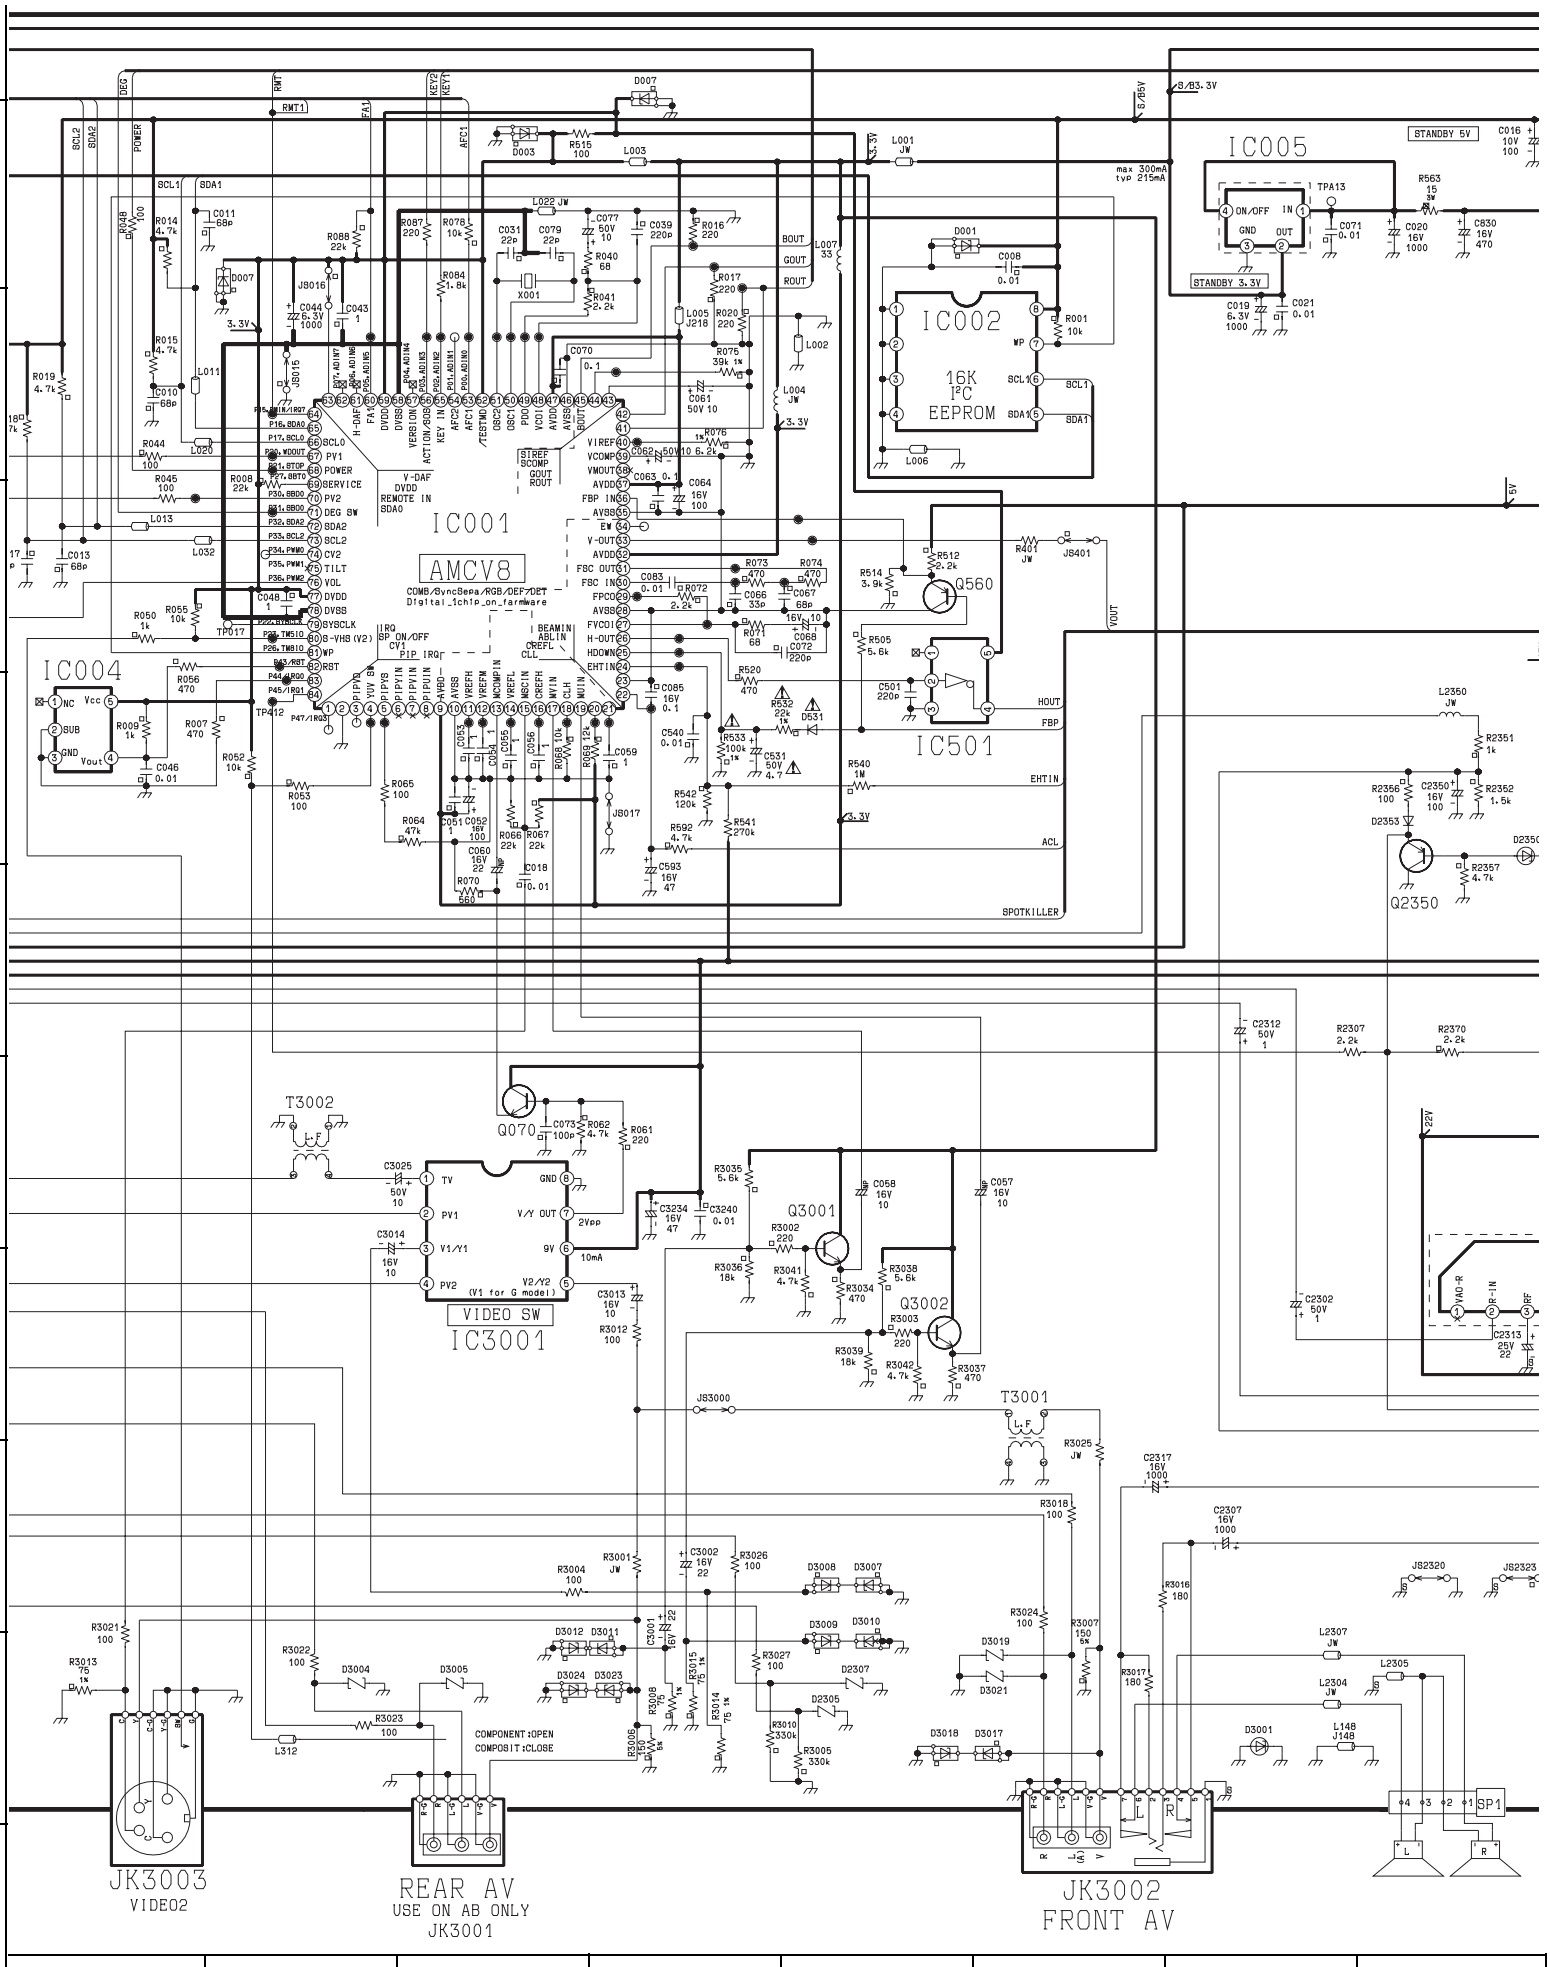
IC001
AMCV8
IC002
16K I²C EEPROM
IC004
IC005
IC501
IC3001
VIDEO SW
Q560
Q2350
Q070
Q3001
Q3002
T3002
T3001
JK3003
VIDEO2
REAR AV
USE ON AB ONLY
JK3001
JK3002
FRONT AV
COMPONENT:OPEN
COMPOSIT:CLOSE
STANDBY 5V
STANDBY 3.3V
SP1

1	2	3	4	5	6	7	8

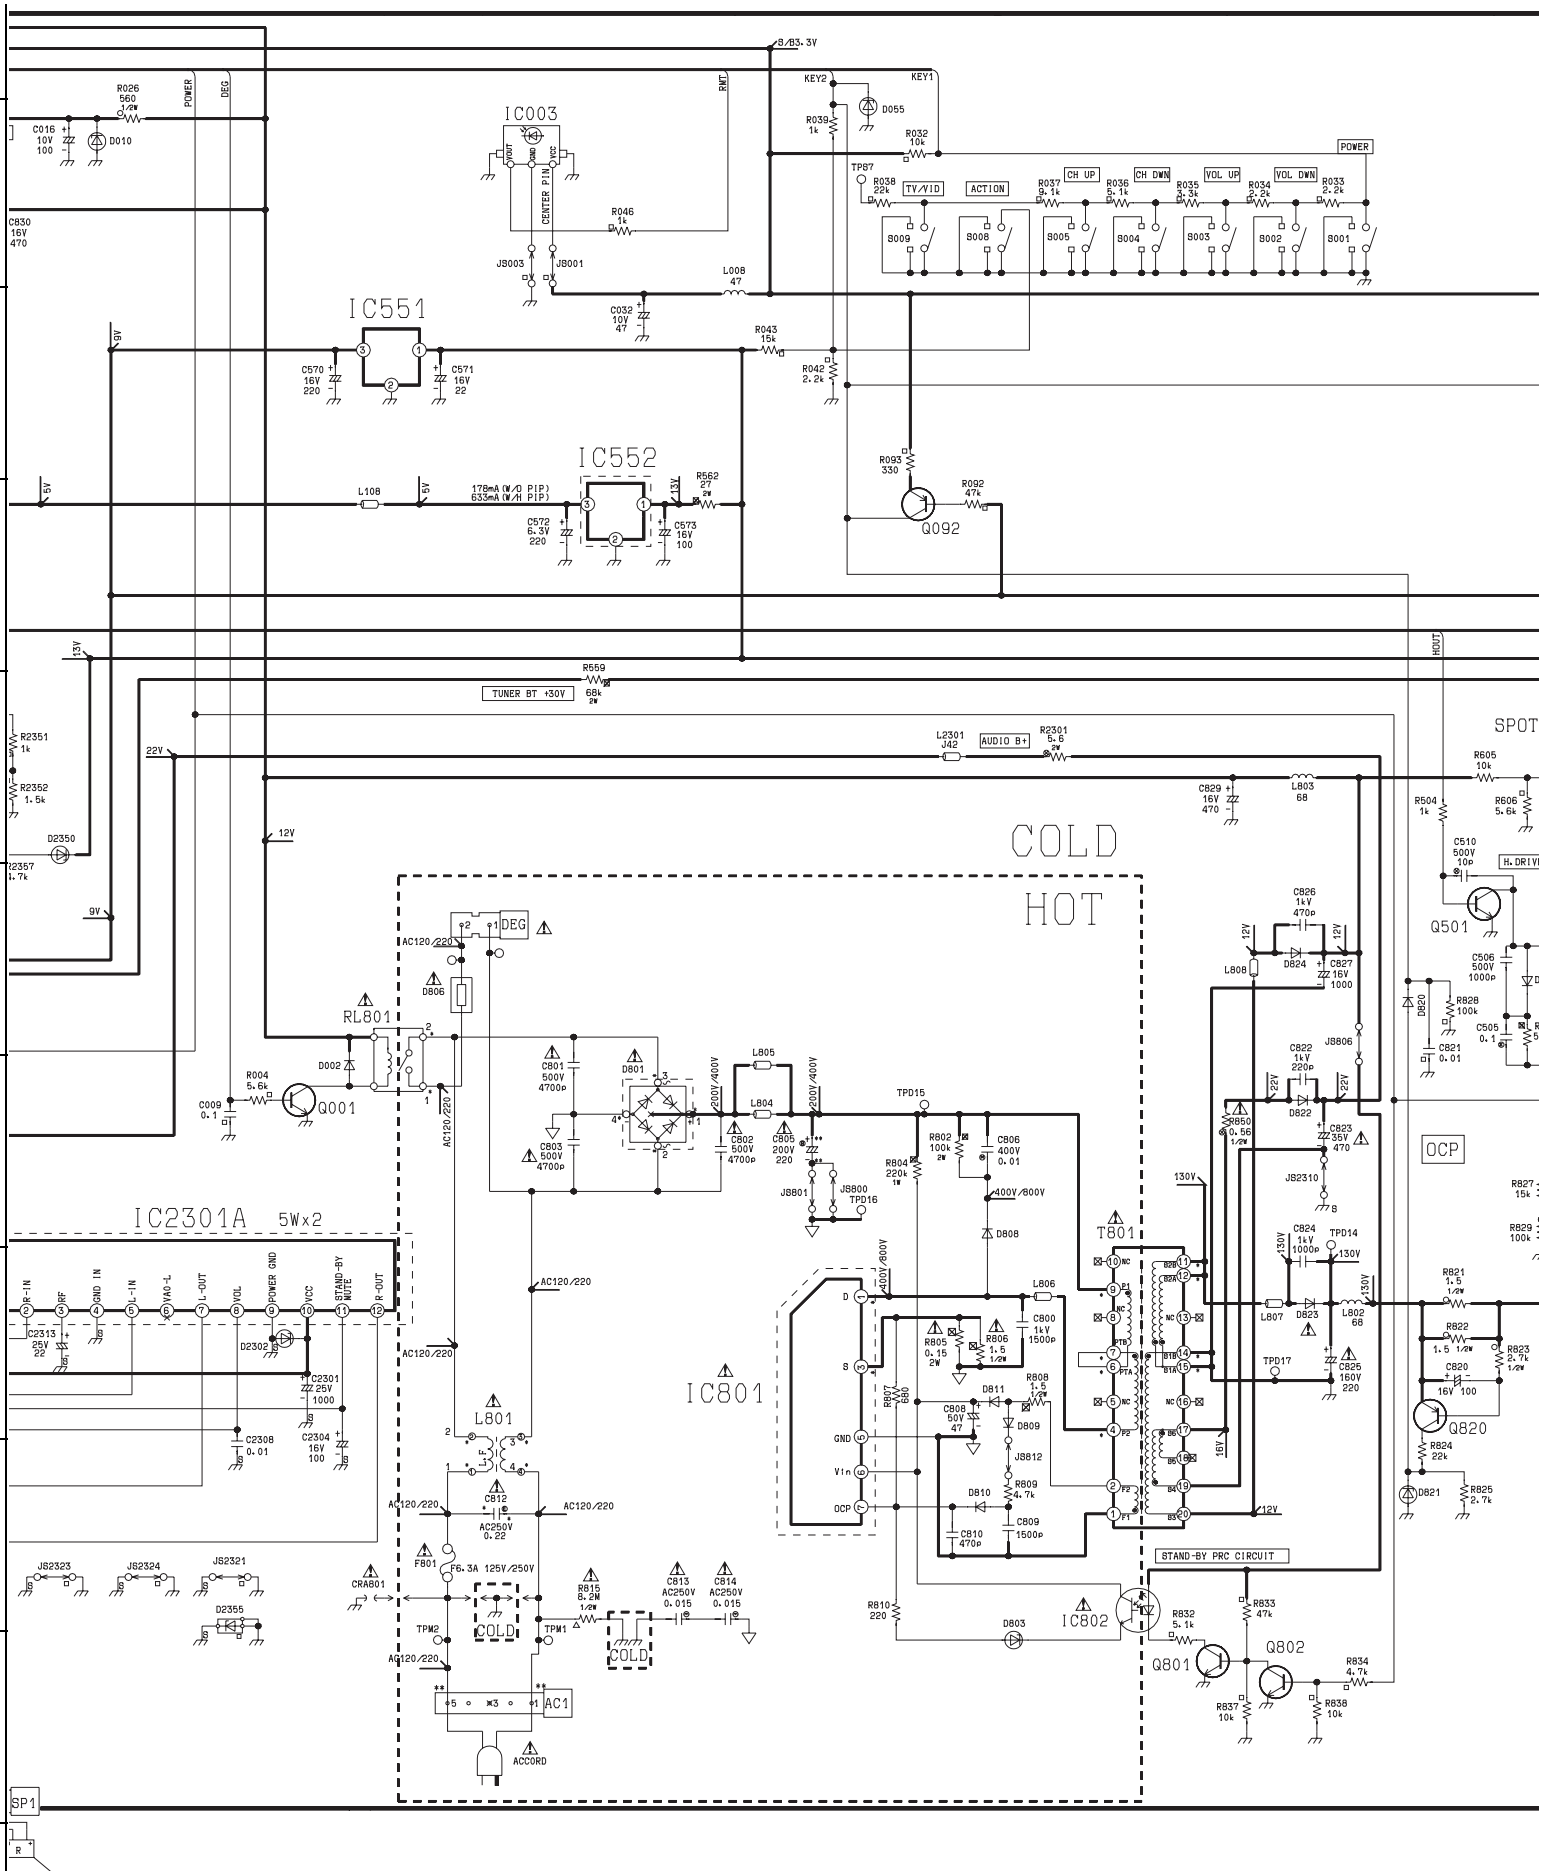
COLD
HOT
IC801
IC2301A 5Wx2
IC551
IC552
IC003
IC802
T801
L801
RL801
Q001
Q092
Q501
Q801
Q802
Q820
D010
D055
D2302
D2350
D2355
D806
D808
D809
D810
D811
D821
D822
D823
D824
D803
SP1
AC1
ACCORD
F6.3A 125V/250V
TUNER BT +30V
AUDIO B+
STAND-BY PRC CIRCUIT
OCP
SPOT
POWER
DEG
TV/VID
ACTION
CH UP
CH DWN
VOL UP
VOL DWN
178mA(W/O PIP)
633mA(W/ PIP)
AC120/220
R-IN
RF
GND IN
L-IN
AVAO-L
L-OUT
VOL
POWER GND
VCC
STAND-BY MUTE
R-OUT
CENTER PIN
J8001
J8003
J8806
J82310
J82321
J82323
J82324
J2301 J42
TPD14
TPD15
TPD16
TPD17
TPM1
TPM2
TP87
KEY1
KEY2
R-ANT
HOUT
H.DRIVE

1	2	3	4	5	6	7	8

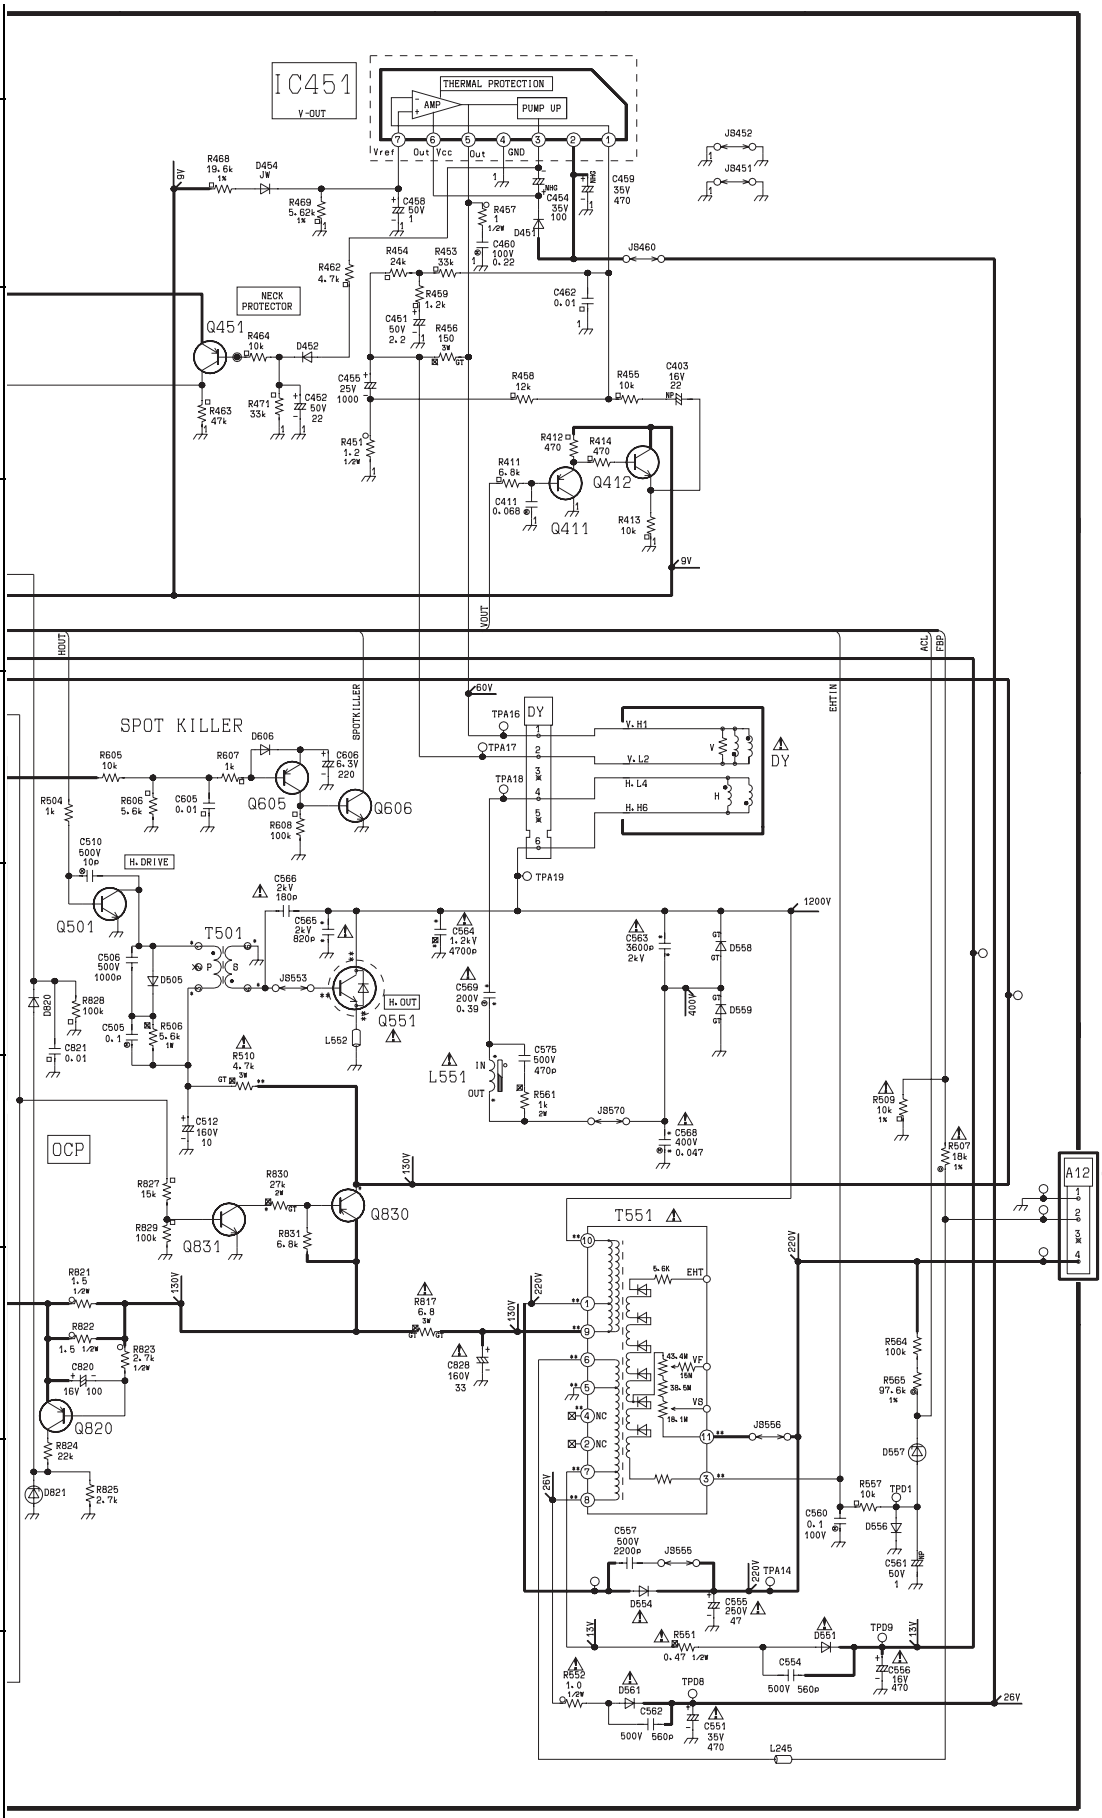
IC451
V-OUT
THERMAL PROTECTION
AMP
PUMP UP
Vref
Out
Vcc
Out
GND
J8452
J8451
J8460
NECK PROTECTOR
Q451
Q412
Q411
9V
HOUT
VOUT
ACL
FBP
SPOT KILLER
SPOTKILLER
60V
DY
TPA16
TPA17
TPA18
TPA19
V.H1
V.L2
H.L4
H.H6
EHT IN
Q605
Q606
D606
H.DRIVE
Q501
T501
H.OUT
Q551
L552
L551
1200V
D558
D559
400V
OCP
Q830
Q831
130V
T551
220V
EHT
VF
VS
NC
NC
26V
D557
D556
TPD1
TPD9
TPD8
TPA14
D554
D551
D561
13V
L245
A12
C2
HEATER GND
HEATER
220V

1	2	3	4	5	6	7	8

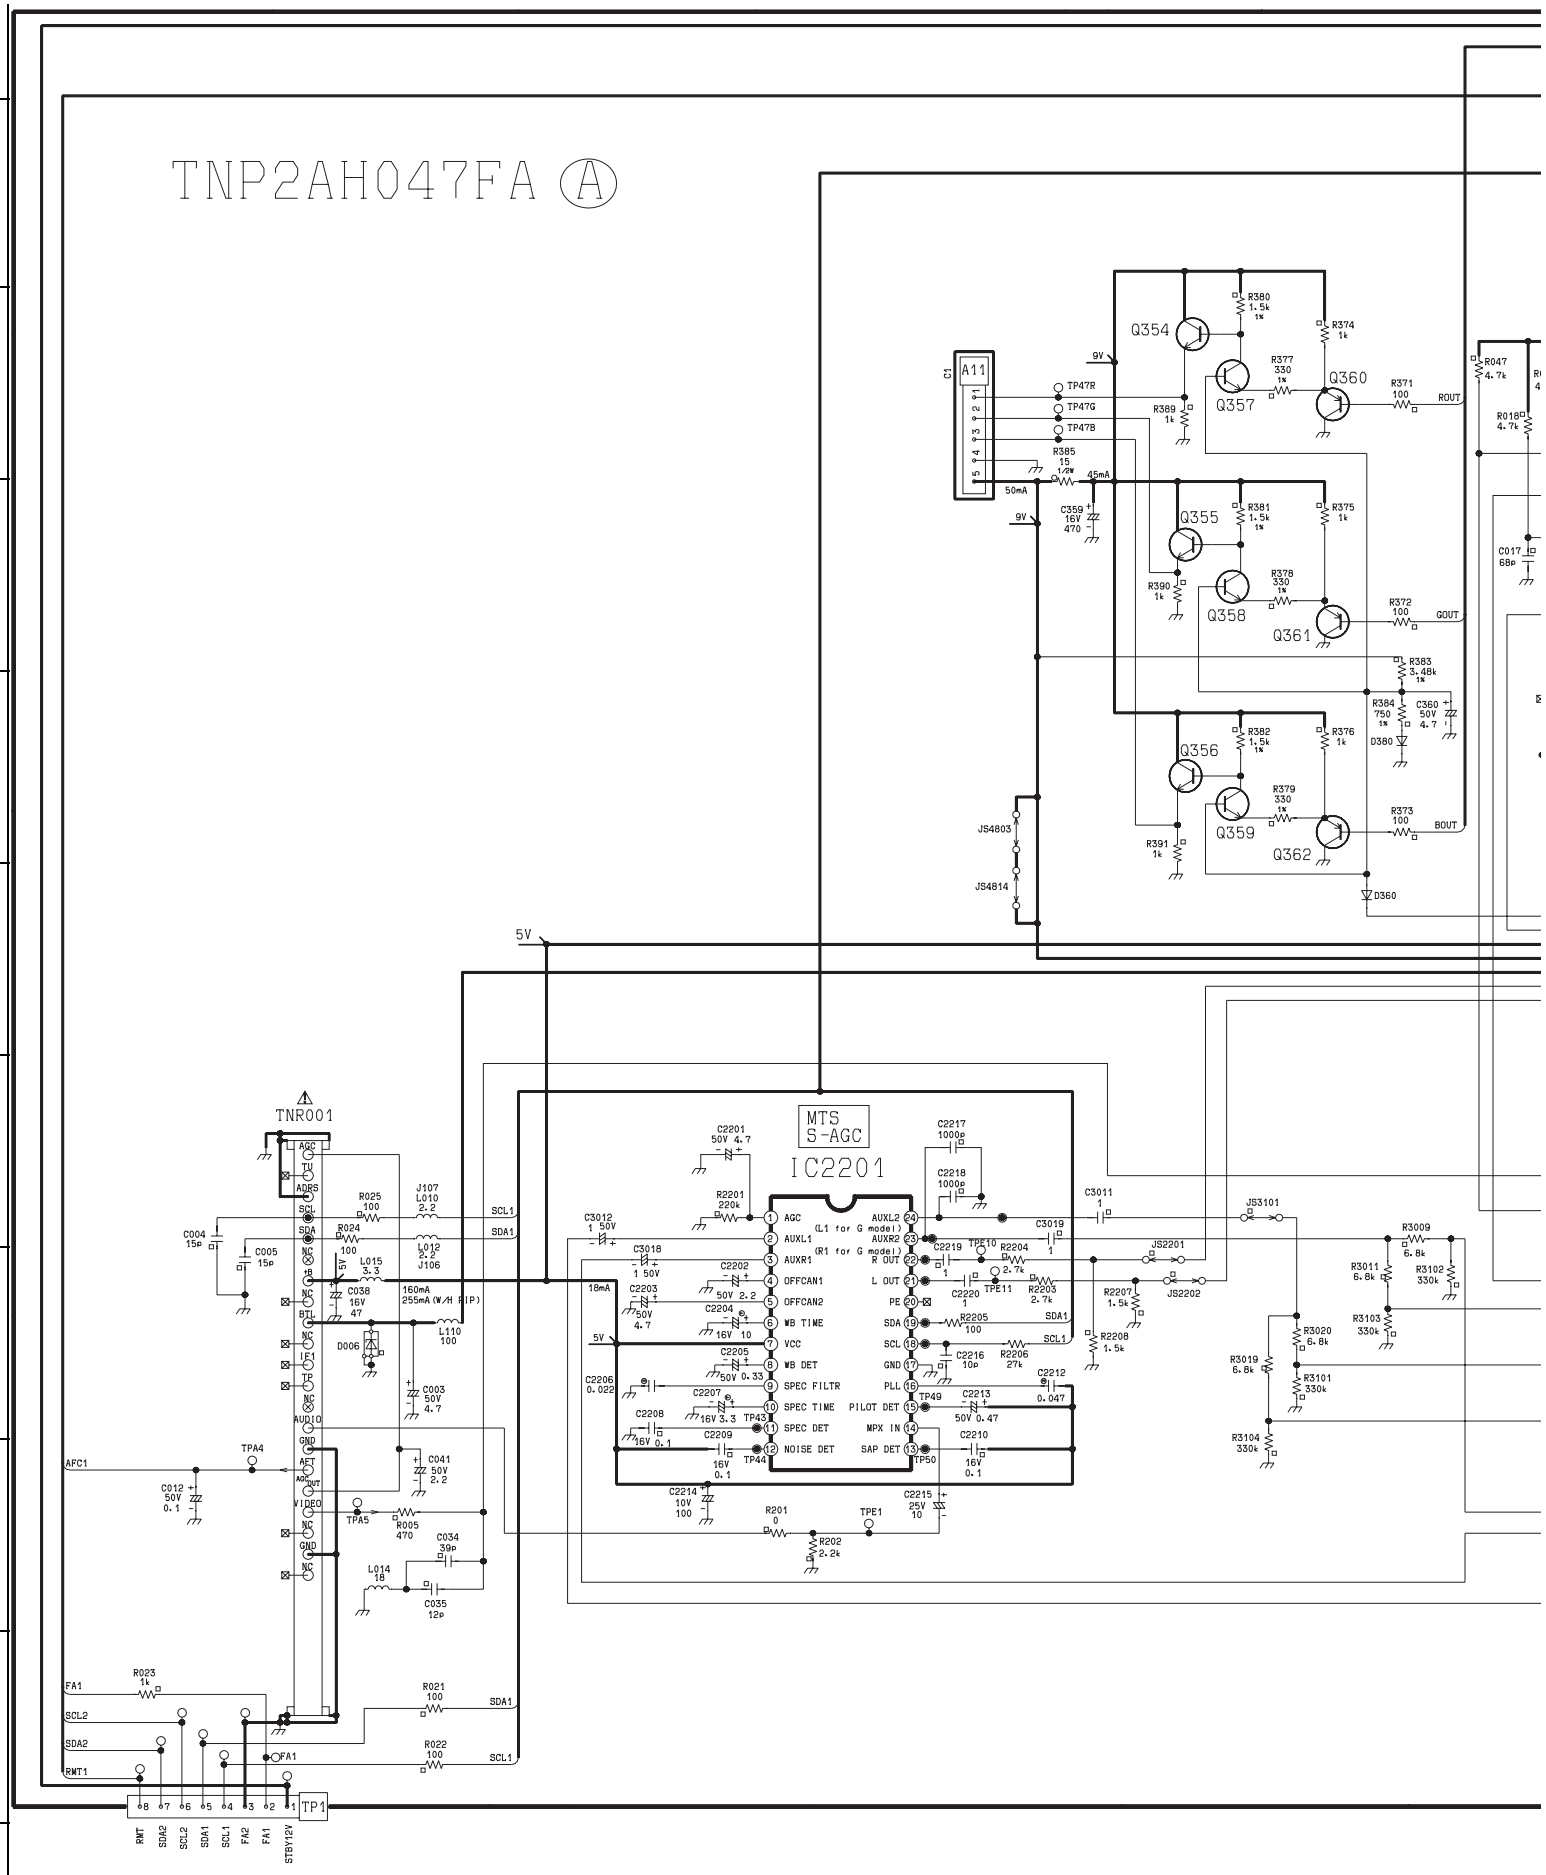
TNP2AH047FA Ⓐ
A11
TP47R
TP47G
TP47B
R385 15 1/2W
45mA
50mA
9V
C359 16V 470
Q354
Q355
Q356
Q357
Q358
Q359
Q360
Q361
Q362
R380 1.5k 1%
R381 1.5k 1%
R382 1.5k 1%
R374 1k
R375 1k
R376 1k
R377 330 1%
R378 330 1%
R379 330 1%
R389 1k
R390 1k
R391 1k
R371 100
R372 100
R373 100
ROUT
GOUT
BOUT
R383 3.48k 1%
R384 750 1%
C360 50V 4.7
D380
D360
JS4803
JS4814
5V
TNR001
AGC
TU
ADRS
SCL
SDA
R025 100
R024 100
J107 L010 2.2
L012 2.2 J106
SCL1
SDA1
C004 15p
C005 15p
L015 3.3
C038 16V 47
160mA 255mA(W/H PIP)
L110 100
D006
C003 50V 4.7
AUDIO
VIDEO
TP4
TP5
AFC1
C012 50V 0.1
C041 50V 2.2
R005 470
C034 39p
C035 12p
L014 18
FA1
SCL2
SDA2
RMT1
R023 1k
R021 100
R022 100
TP1
RMT
SDA2
SCL2
SDA1
SCL1
FA2
FA1
STBY12V
MTS S-AGC
IC2201
AGC
AUXL1
AUXR1
OFFCAN1
OFFCAN2
WB TIME
VCC
WB DET
SPEC FILTR
SPEC TIME
SPEC DET
NOISE DET
AUXL2
AUXR2
R OUT
L OUT
PE
SDA
SCL
GND
PLL
PILOT DET
MPX IN
SAP DET
C2201 50V 4.7
R2201 220k
C3012 1 50V
C3018 1 50V
C2202 50V 2.2
C2203 50V 4.7
C2204 16V 10
C2205 50V 0.33
C2206 0.022
C2207 16V 3.3
C2208 16V 0.1
C2209 16V 0.1
TP43
TP44
C2214 10V 100
R201 0
R202 2.2k
TPE1
C2215 25V 10
C2217 1000p
C2218 1000p
C2219 1
TPE10
TPE11
C2220 1
C2216 10p
C2213 50V 0.47
C2212 0.047
TP49
TP50
C2210 16V 0.1
C3011 1
C3019 1
R2204 2.7k
R2203 2.7k
R2205 100
R2206 27k
R2207 1.5k
R2208 1.5k
JS2201
JS2202
JS3101
R3009 6.8k
R3011 6.8k
R3102 330k
R3103 330k
R3020 6.8k
R3019 6.8k
R3101 330k
R3104 330k
18mA

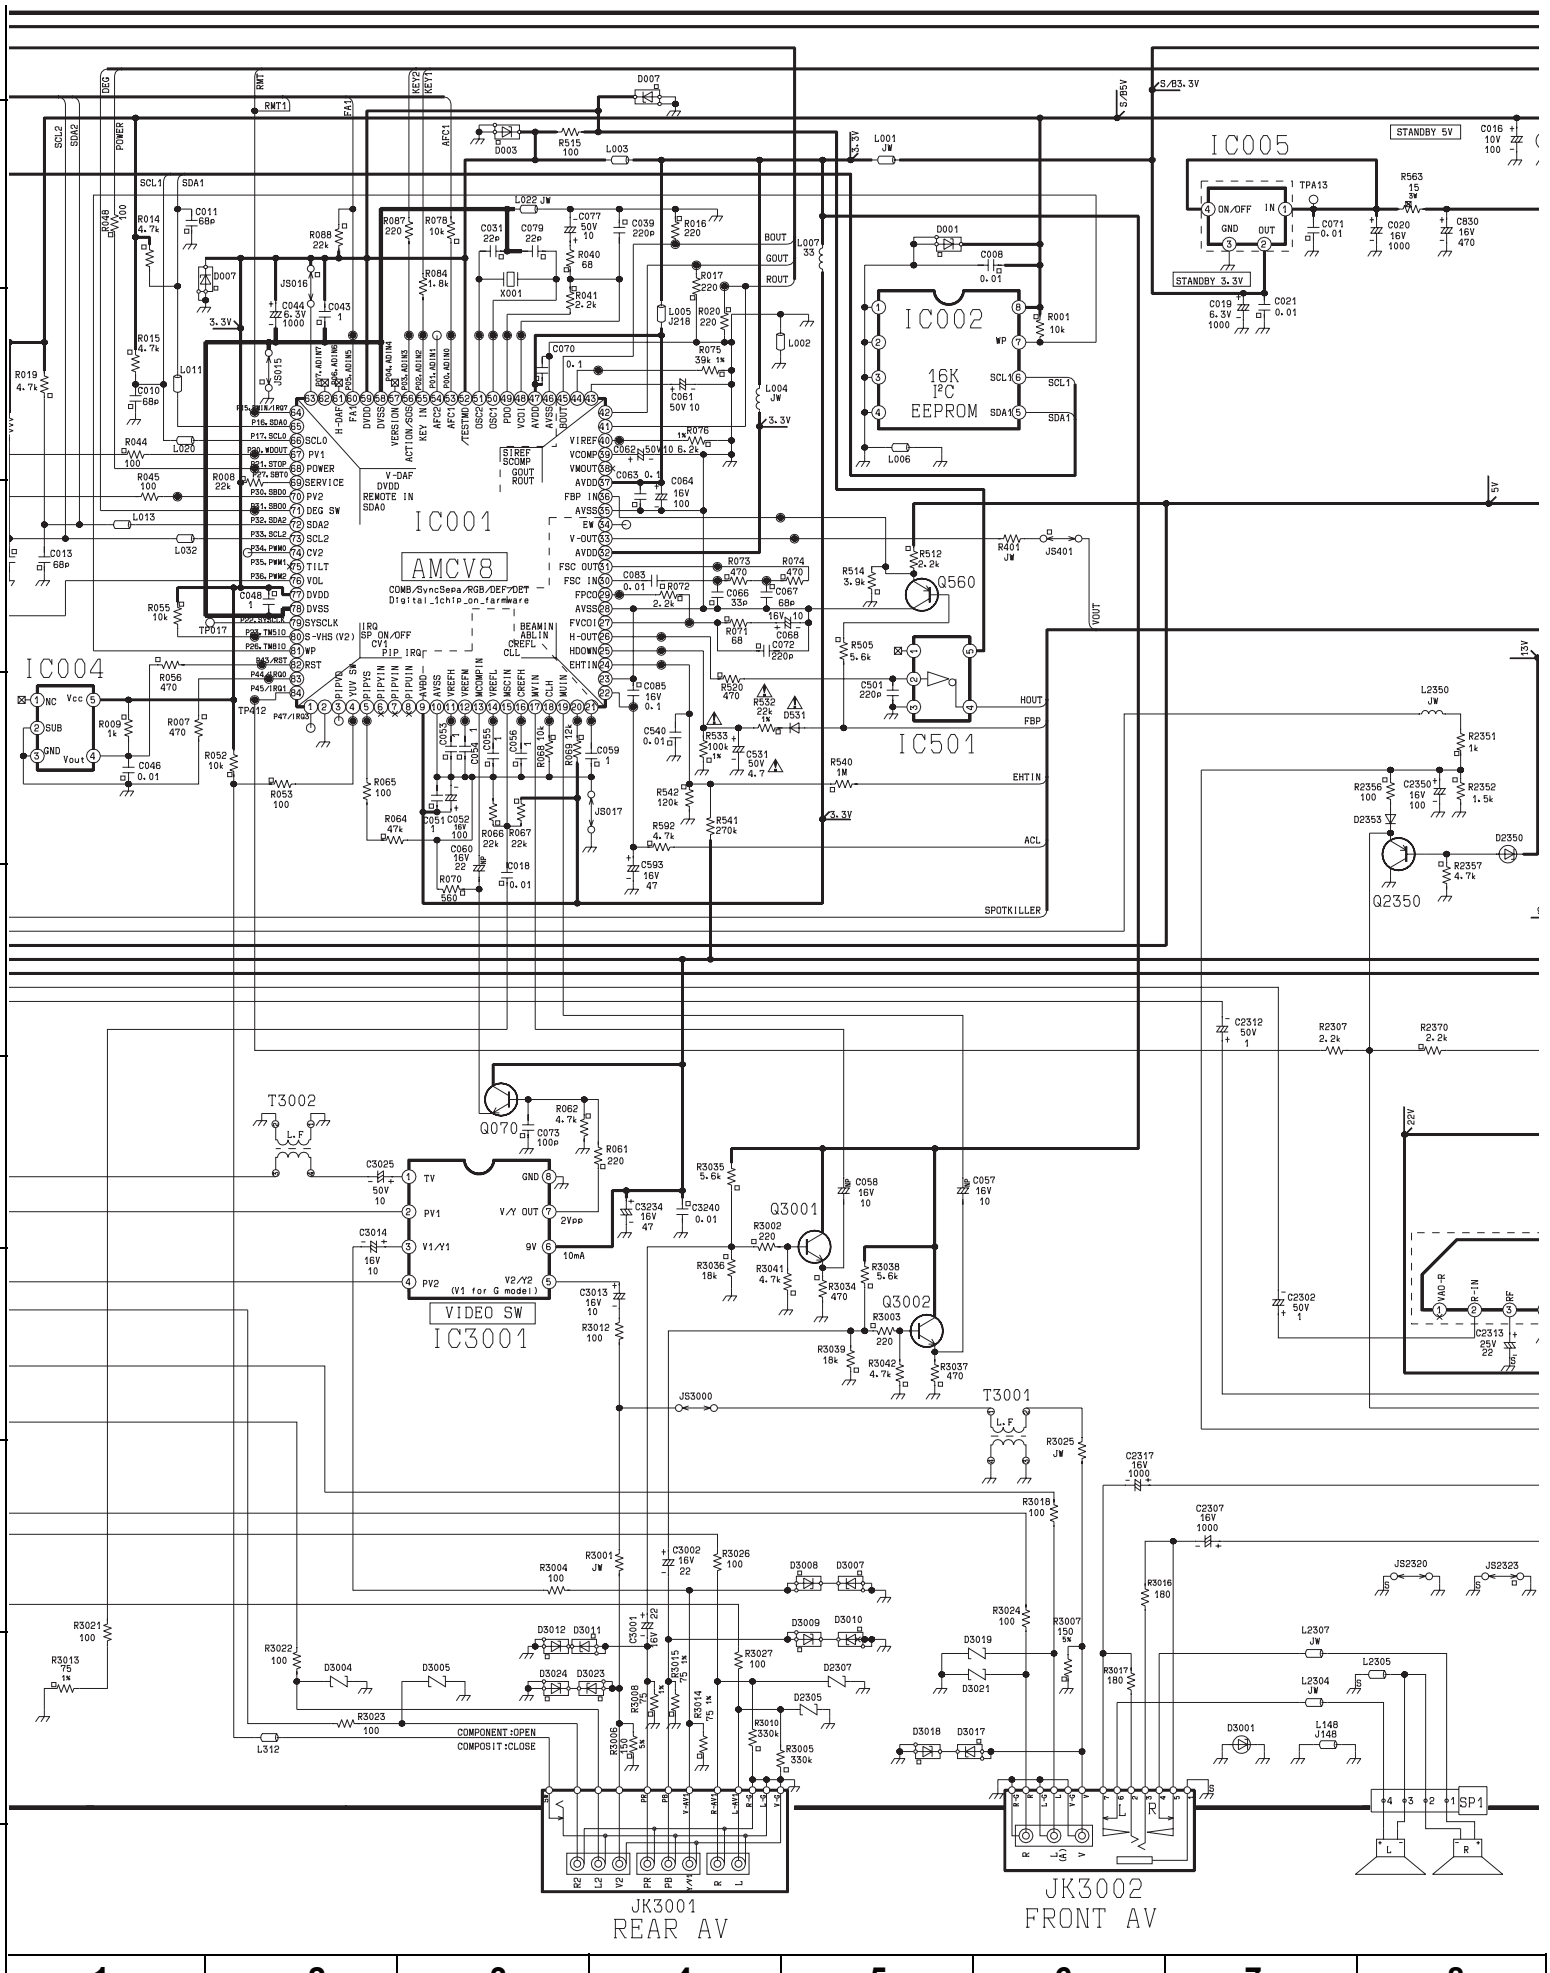
IC001
AMCV8
COMB/SyncSepa/RGB/DEF/DET
Digital_1chip_on_farmware
IC002
16K
I2C
EEPROM
IC004
IC005
IC501
Q560
Q2350
Q070
Q3001
Q3002
T3002
T3001
IC3001
VIDEO SW
JK3001
REAR AV
JK3002
FRONT AV
STANDBY 5V
STANDBY 3.3V
COMPONENT:OPEN
COMPOSIT:CLOSE
SP1

1	2	3	4	5	6	7	8

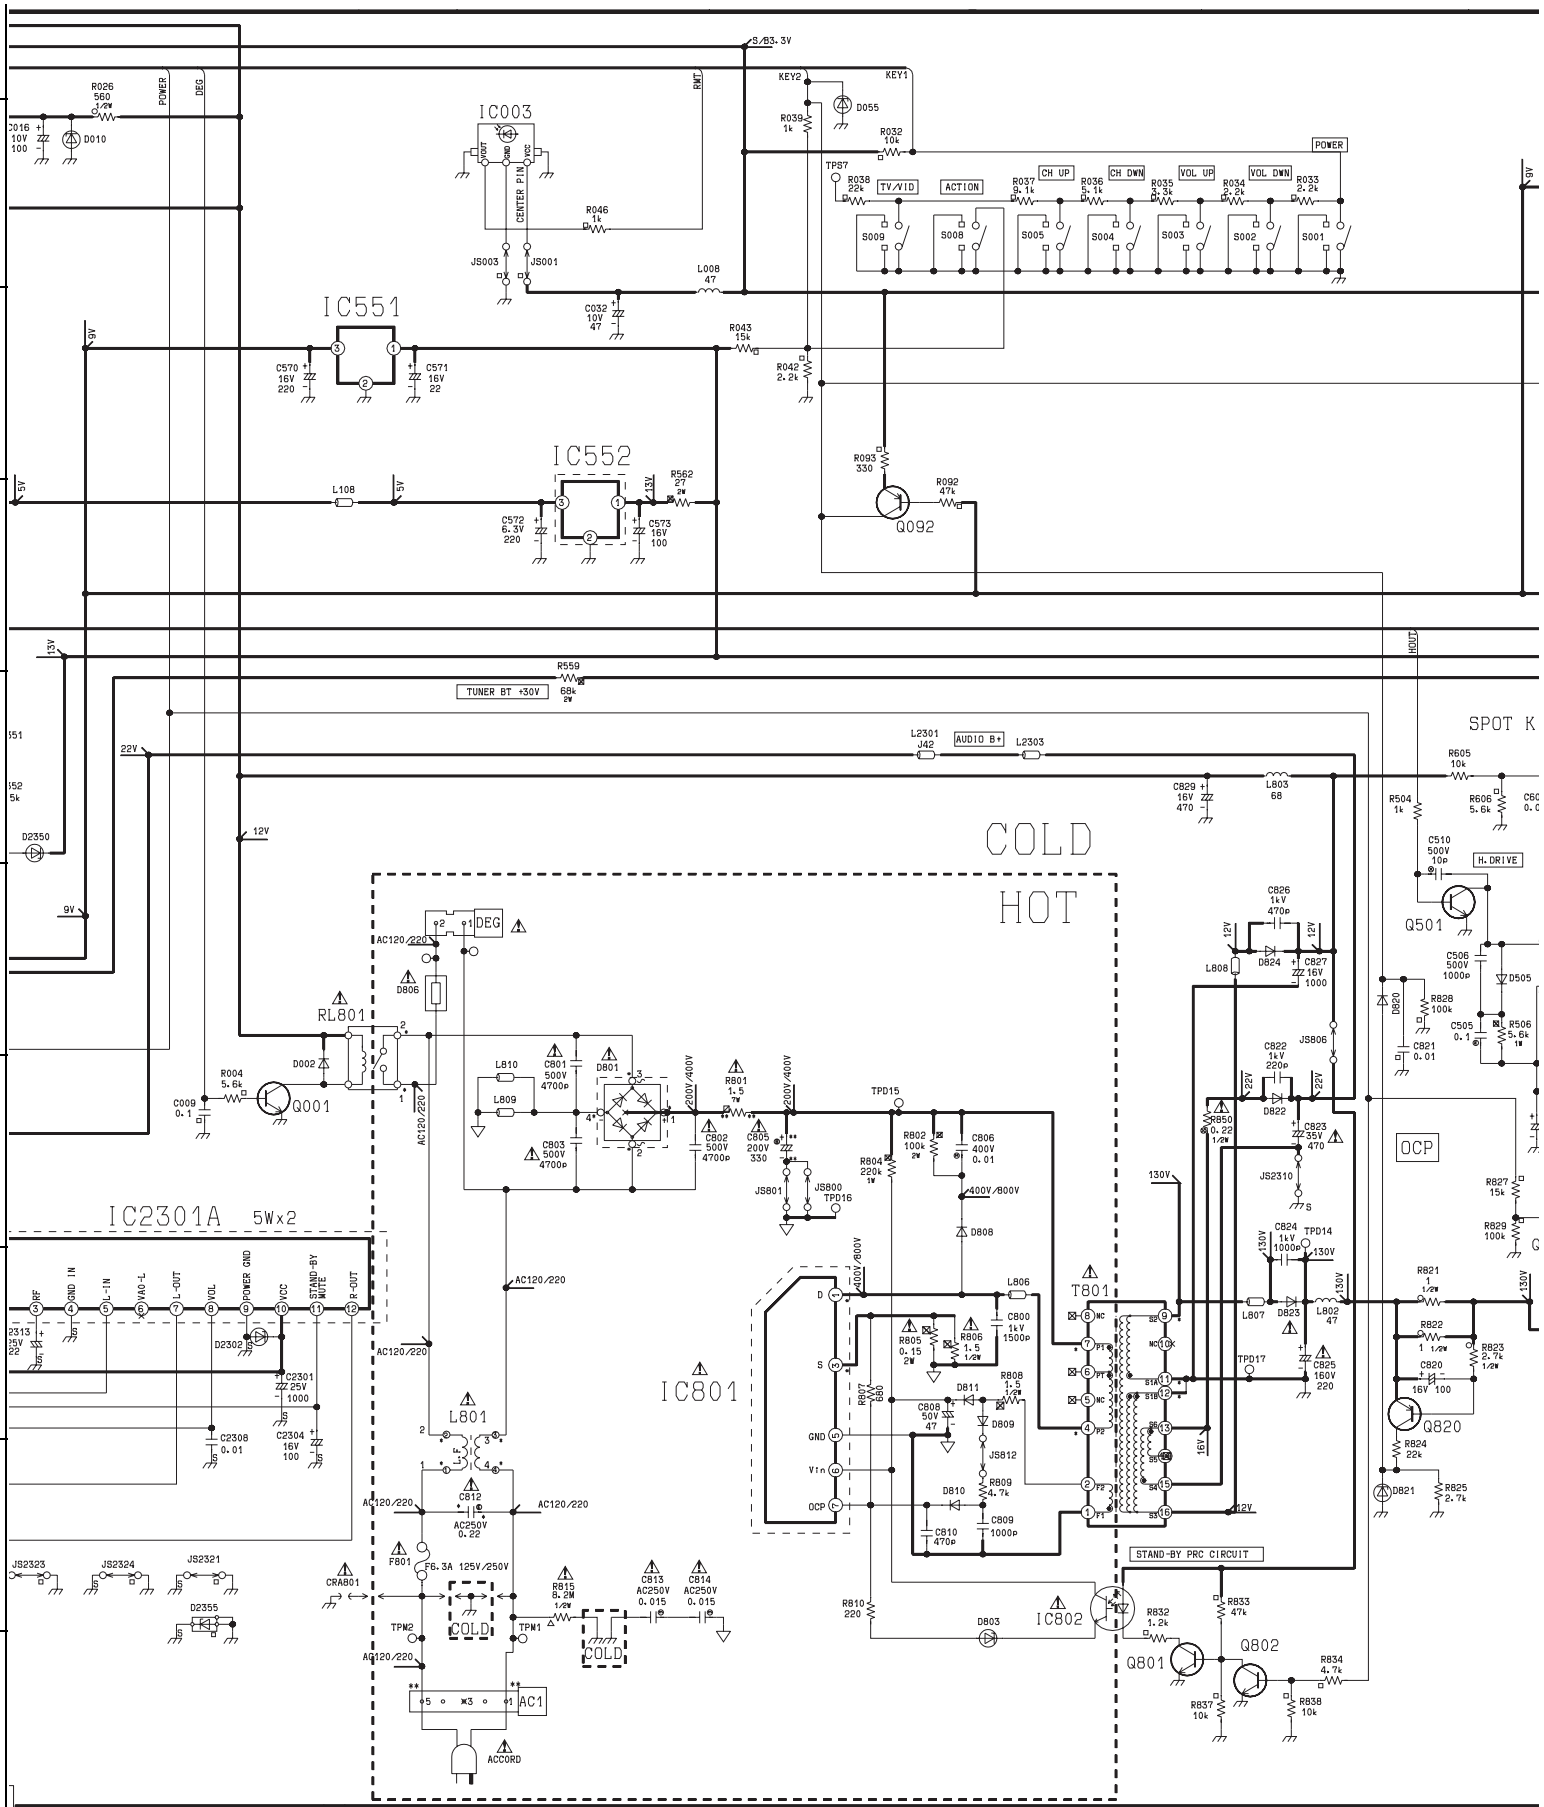
IC003
IC551
IC552
IC2301A 5Wx2
IC801
IC802
T801
L801
RL801
Q001
Q092
Q501
Q801
Q802
Q820
COLD
HOT
POWER
TV/VID
ACTION
CH UP
CH DWN
VOL UP
VOL DWN
TUNER BT +30V
AUDIO B+
STAND-BY PRC CIRCUIT
OCP
H.DRIVE
SPOT K
ACCORD
AC1

1	2	3	4	5	6	7	8

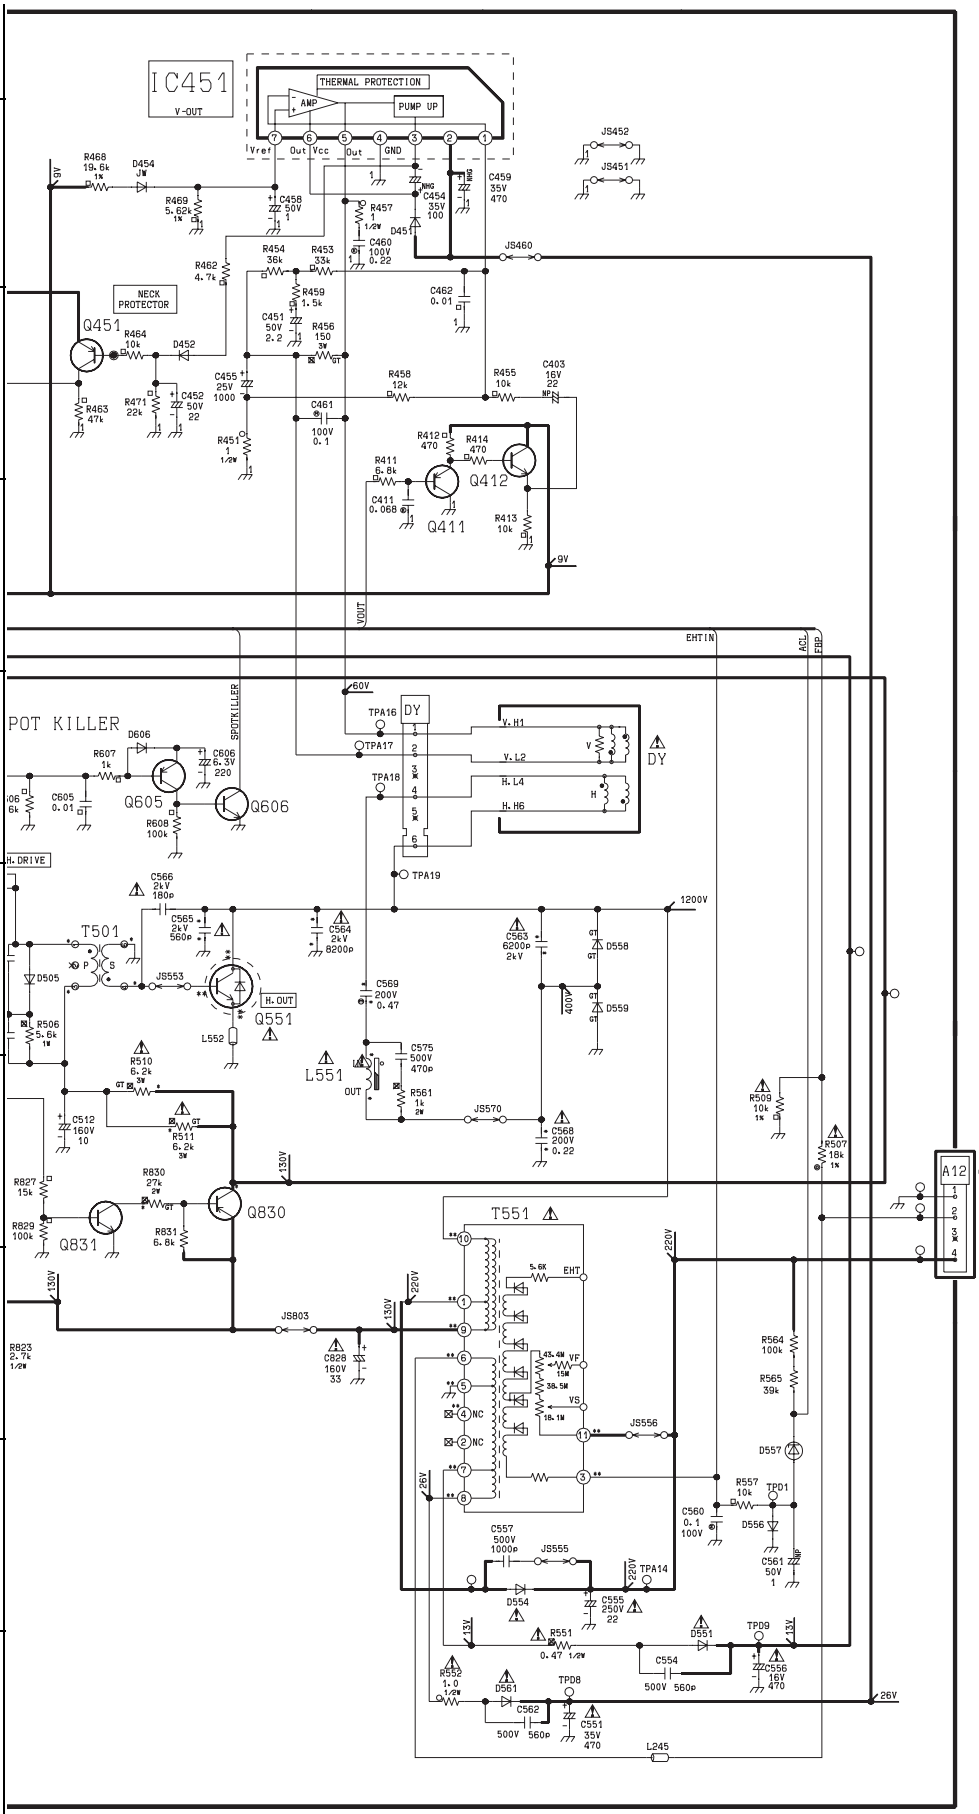
IC451
V-OUT
THERMAL PROTECTION
AMP
PUMP UP
Vref
Out
Vcc
Out
GND
JS452
JS451
JS460
NECK PROTECTOR
Q451
Q412
Q411
POT KILLER
SPOTKILLER
Q605
Q606
H.DRIVE
T501
Q551
L552
L551
T551
Q830
Q831
JS803
JS553
JS570
JS556
JS555
DY
V.H1
V.L2
H.L4
H.H6
TPA16
TPA17
TPA18
TPA19
60V
1200V
130V
220V
26V
13V
9V
VOUT
EHTIN
ACL
FBP
EHT
VF
VS
TPD1
TPD8
TPD9
TPA14
D554
D551
D557
D556
D558
D559
D561
L245
A12
C2
HEATER GND
HEATER
220V

1	2	3	4	5	6	7	8

Audio signal path block diagram

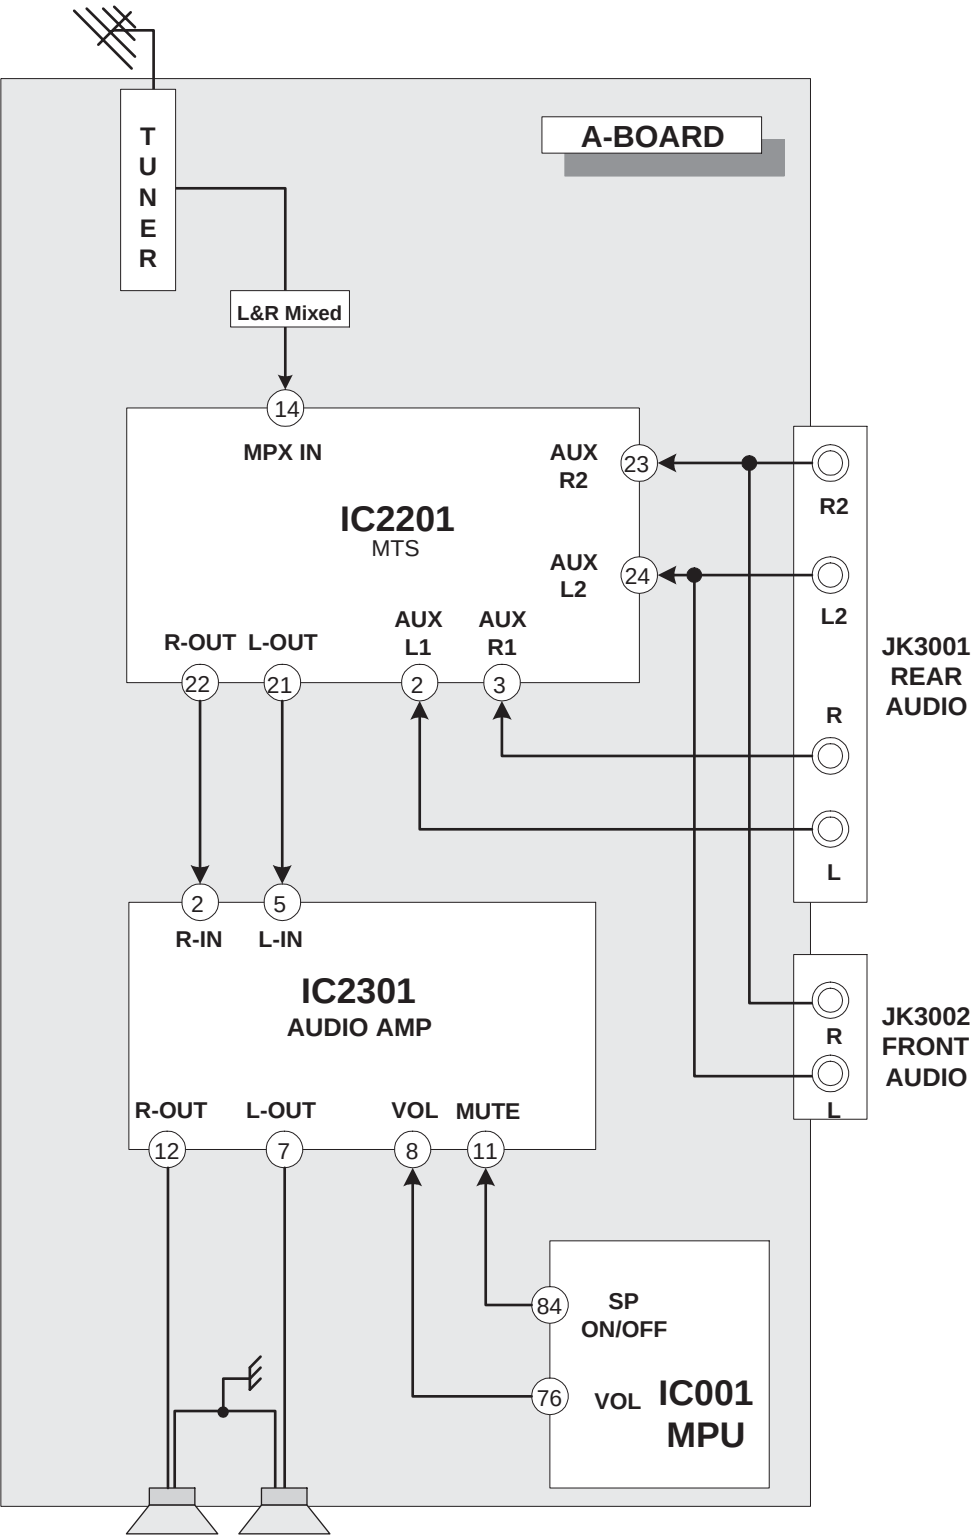

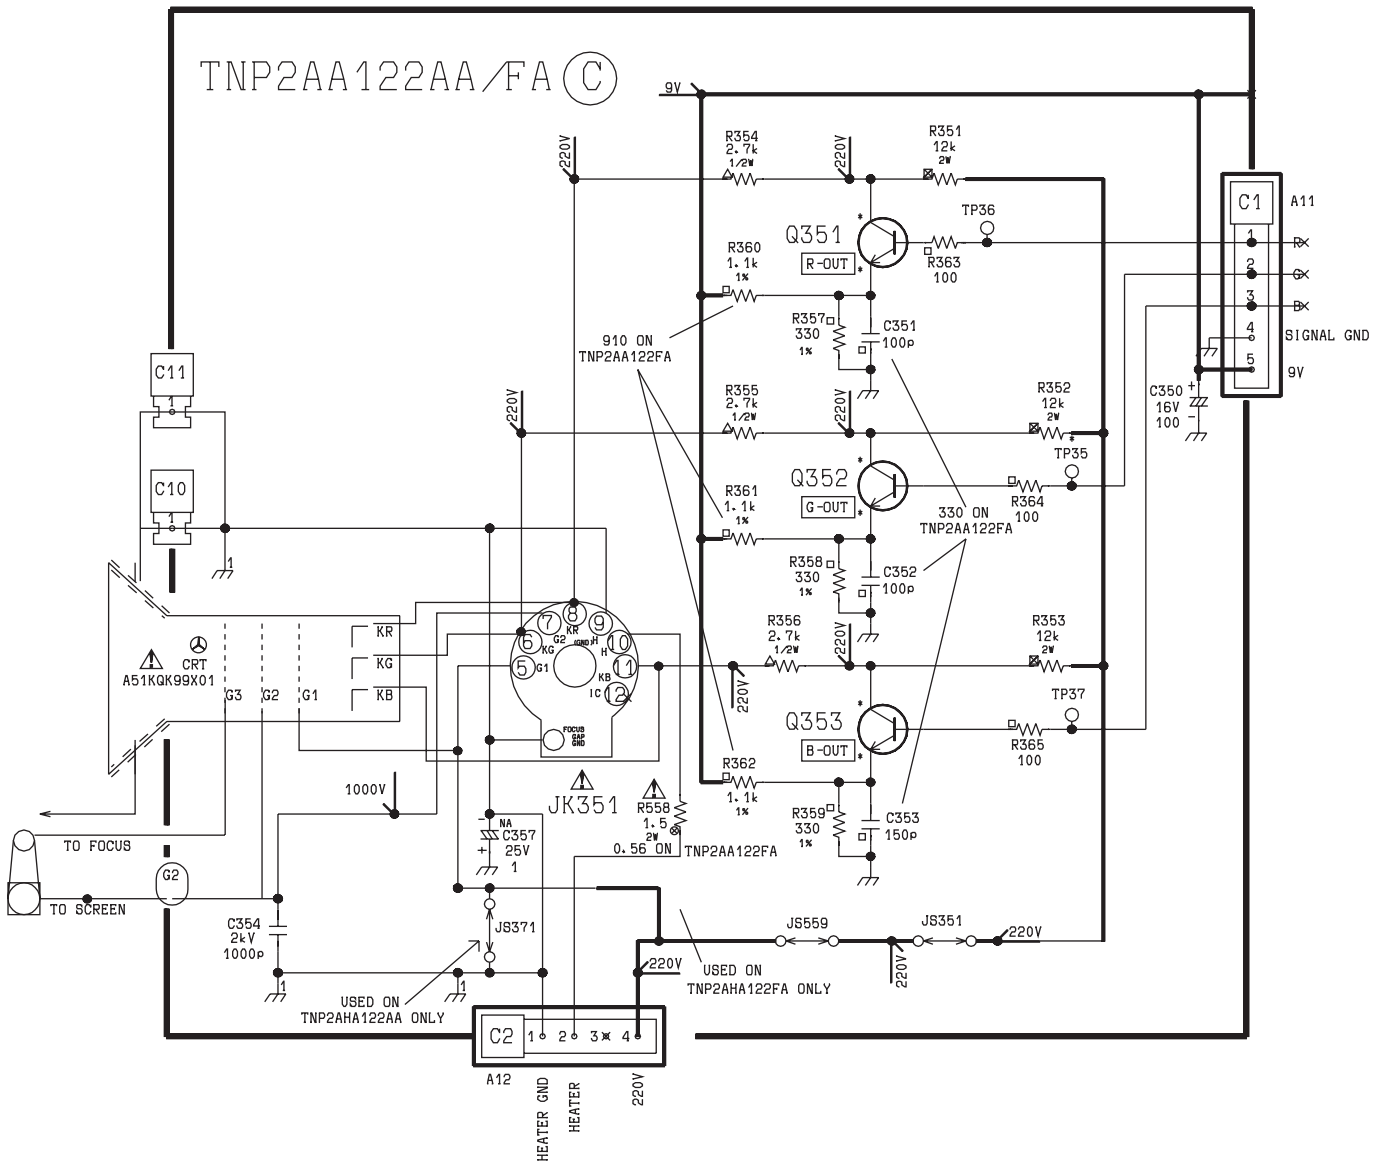
TNP2AA122AA/FA (C)
9V
220V
R354 2.7k 1/2W
R351 12k 2W
TP36
Q351
R-OUT
R360 1.1k 1%
R363 100
R357 330 1%
C351 100p
910 ON TNP2AA122FA
C1
A11
SIGNAL GND
C11
C10
R355 2.7k 1/2W
R352 12k 2W
C350 16V 100
TP35
Q352
G-OUT
R361 1.1k 1%
R364 100
330 ON TNP2AA122FA
R358 330 1%
C352 100p
R356 2.7k 1/2W
R353 12k 2W
TP37
Q353
B-OUT
R365 100
R362 1.1k 1%
R359 330 1%
C353 150p
CRT A51KQK99X01
G3
G2
G1
KR
KG
KB
JK351
R558 1.5 2W
0.56 ON TNP2AA122FA
1000V
NA C357 25V 1
TO FOCUS
TO SCREEN
G2
C354 2kV 1000p
JS371
JS559
JS351
USED ON TNP2AHA122AA ONLY
USED ON TNP2AHA122FA ONLY
C2
A12
HEATER GND
HEATER
220V

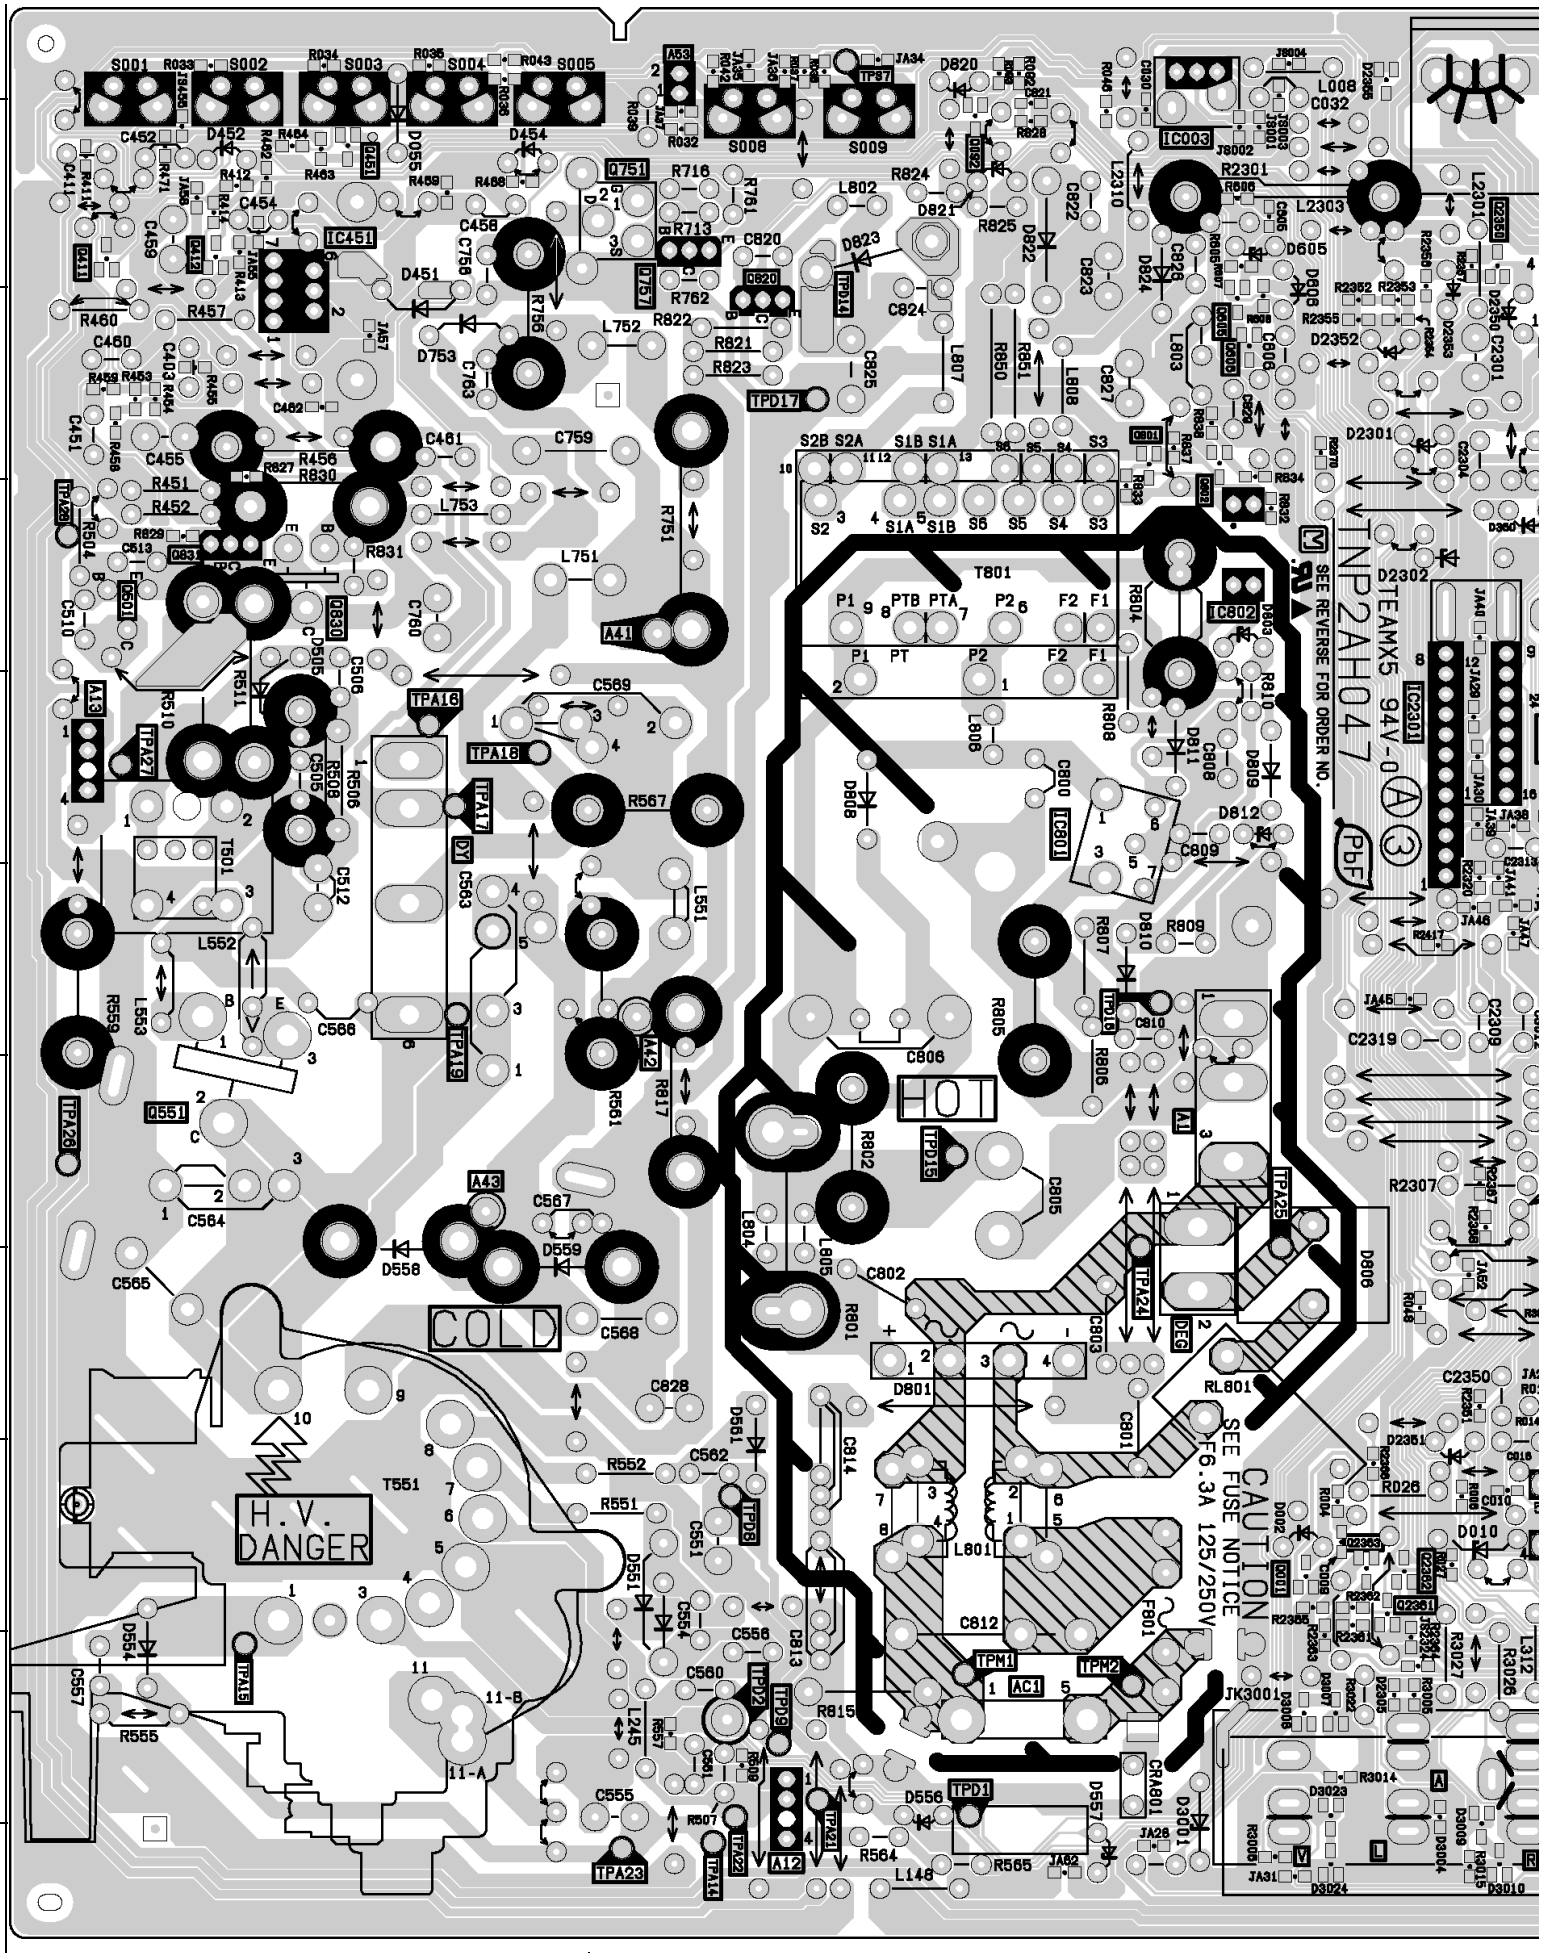
TNP2AH047
TEAMX5 94V-0
SEE REVERSE FOR ORDER NO.
HOT
COLD
H.V. DANGER
CAUTION
SEE FUSE NOTICE
F6.3A 125/250V

1	2	3	4	5	6	7	8

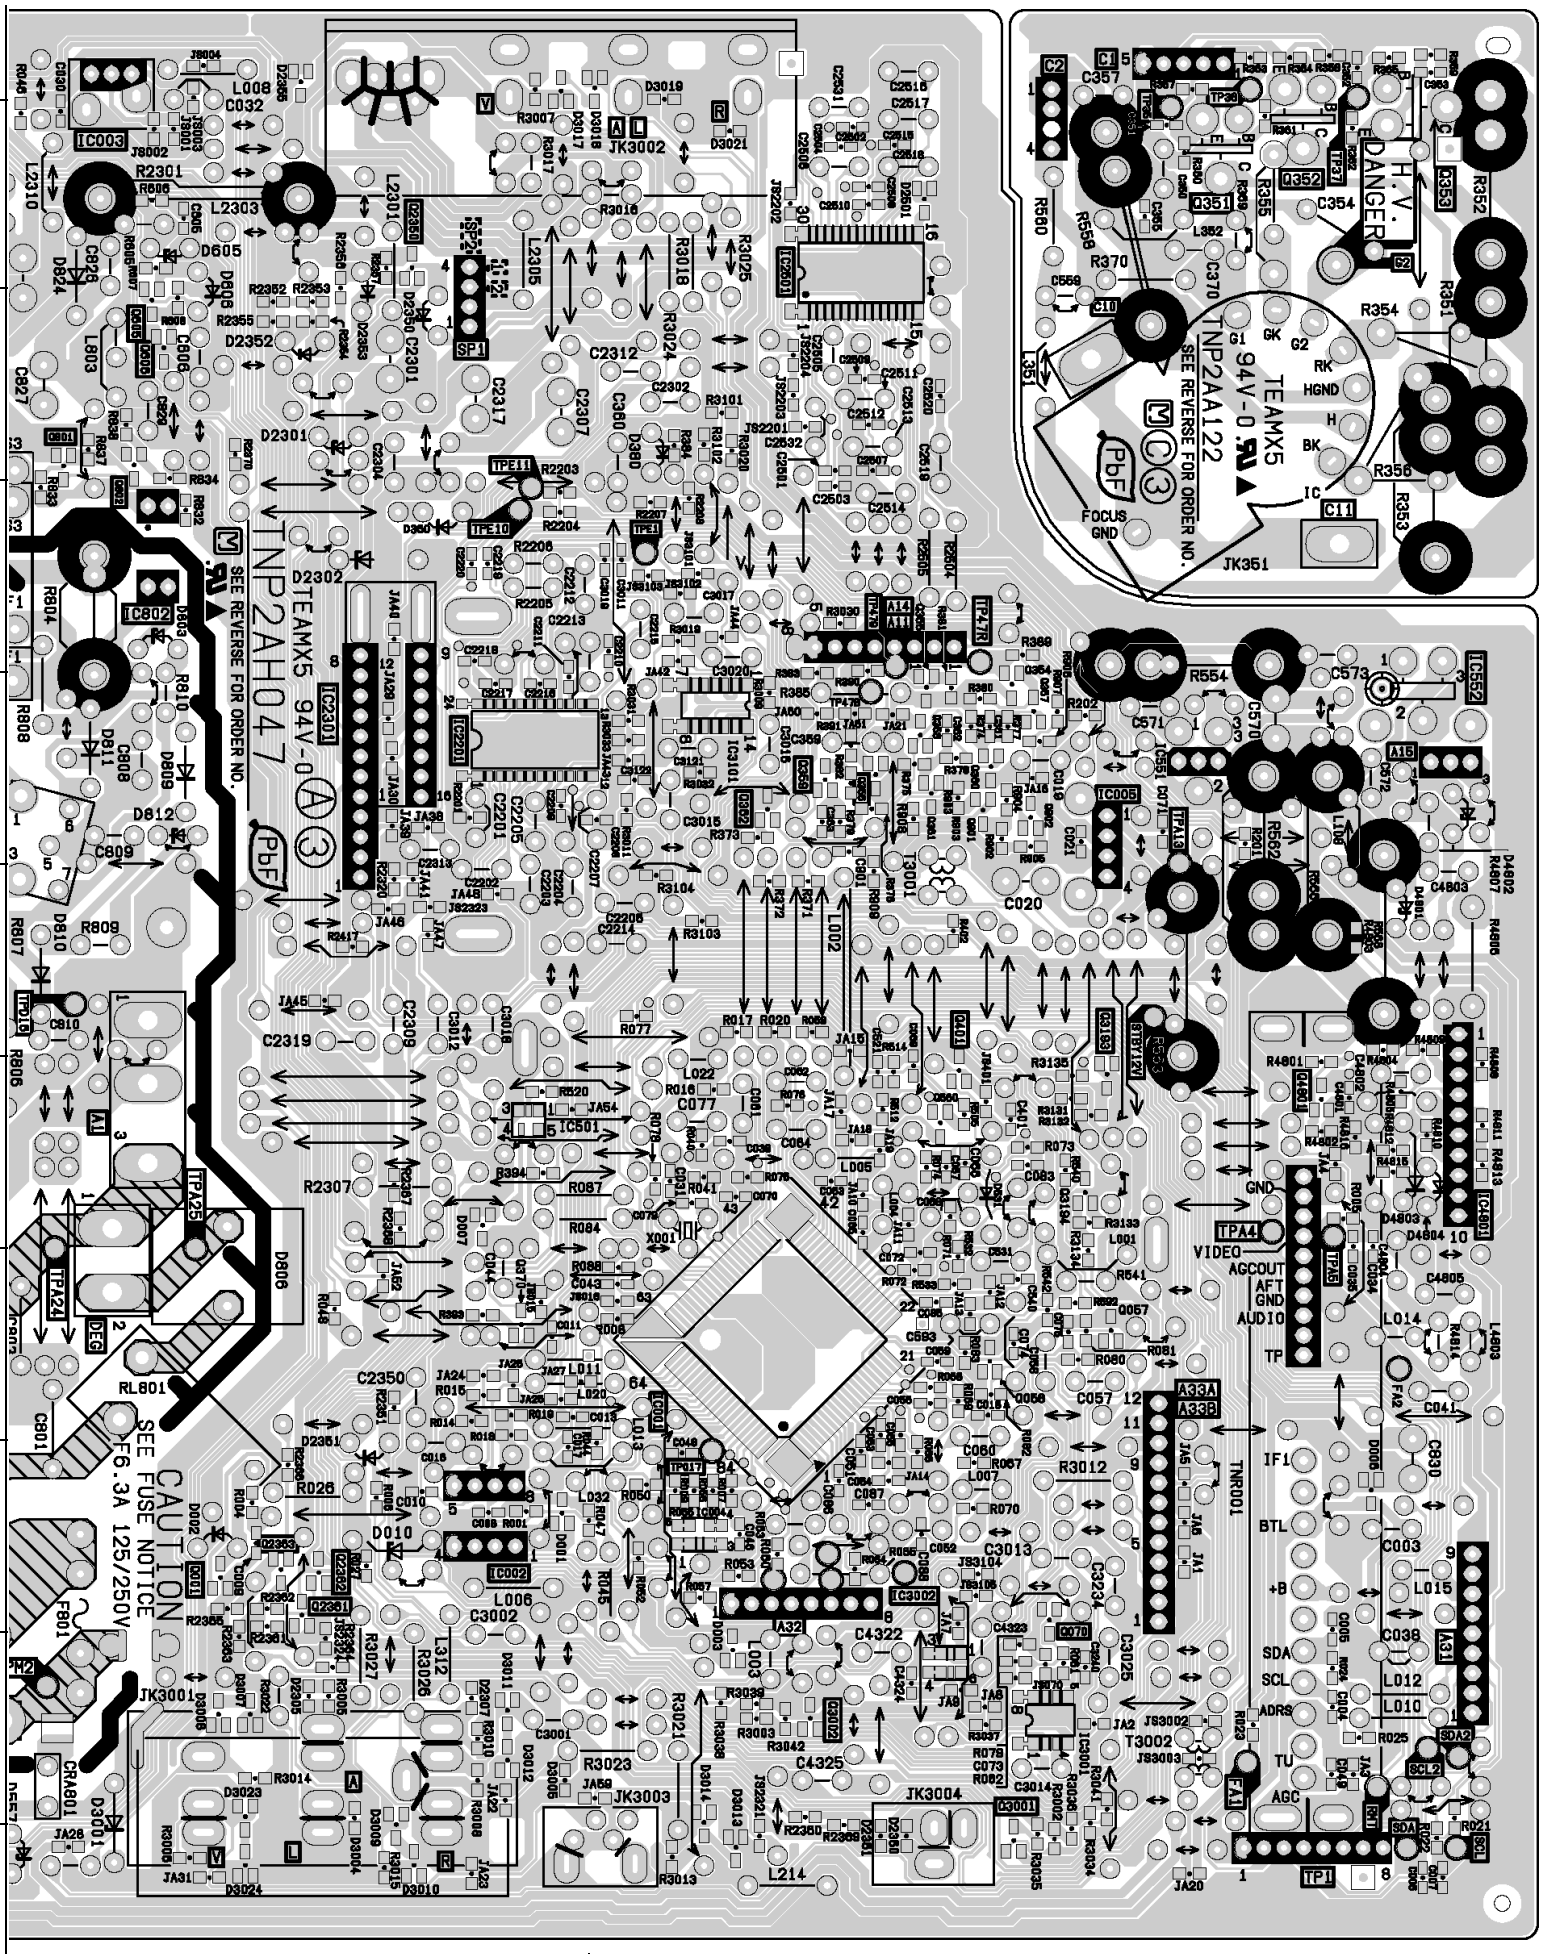
TNP2AH047
94V-0
SEE REVERSE FOR ORDER NO.
TNP2AA122
TEAMX5
94V-0
SEE REVERSE FOR ORDER NO.
H.V. DANGER
CAUTION
SEE FUSE NOTICE
F6.3A 125/250V
A-BOARD
2 of 2
TNP2AH047
C-BOARD
TNP2AA122
CT-20L8G / CT-20G8G / CT-20G8SG / CT-25L8G / CT-25L8UG

Video signal path block diagram

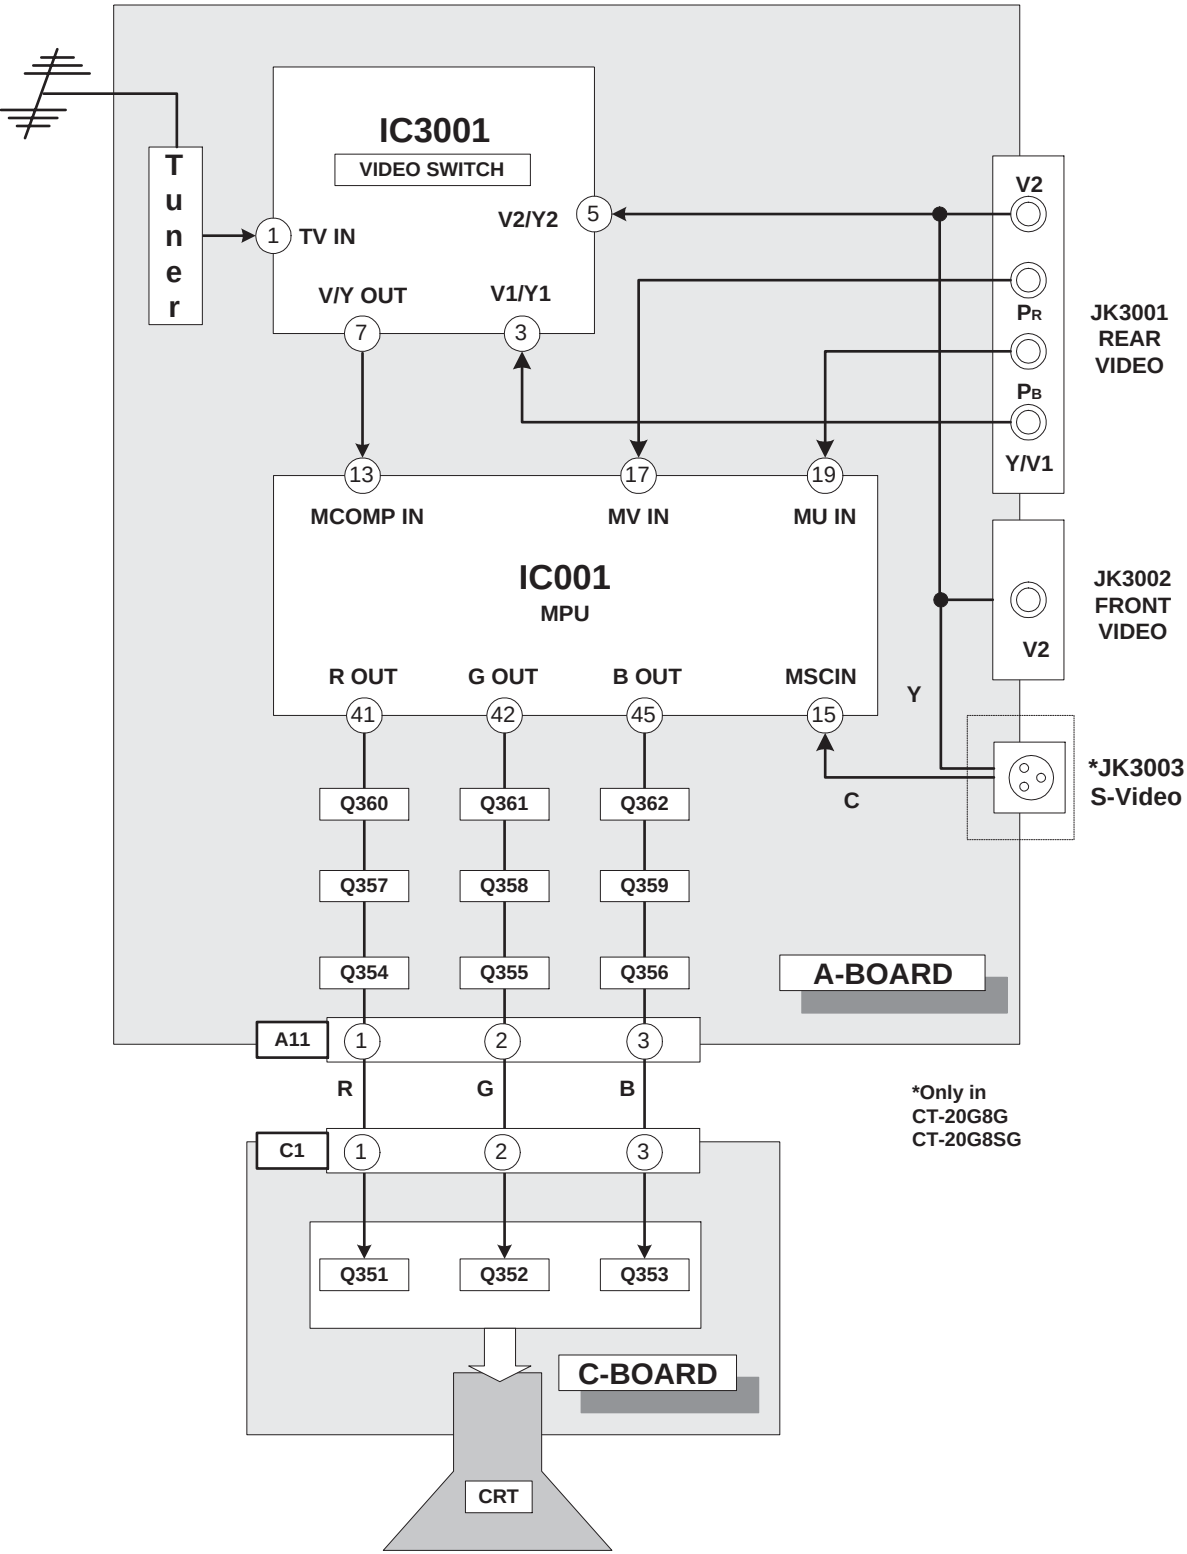

A - BOARD

IC001

1	0.00	43	2.50
2	0.00	44	1.70
3	0.00	45	0.00
4	0.00	46	0.00
5	0.00	47	3.30
6	1.20	48	1.90
7	1.20	49	1.90
8	1.30	50	1.60
9	3.30	51	1.70
10	0.00	52	3.30
11	2.70	53	1.70
12	1.50	54	1.40
13	1.40	55	3.30
14	0.40	56	1.40
15	1.60	57	0.00
16	2.20	58	0.00
17	0.07	59	3.30
18	1.70	60	3.30
19	0.00	61	3.30
20	1.40	62	0.70
21	1.00	63	3.30
22	2.60	64	3.30
23	0.00	65	3.40
24	1.90	66	3.50
25	1.90	67	0.10
26	1.40	68	3.20
27	0.00	69	0.00
28	0.00	70	0.00
29	1.30	71	0.00
30	1.80	72	5.20
31	1.00	73	5.20
32	3.30	74	0.00
33	1.70	75	0.00
34	0.80	76	0.00
35	0.00	77	3.30
36	0.60	78	0.00
37	3.30	79	0.00
38	3.30	80	3.30
39	2.30	81	5.20
40	1.70	82	3.30
41	0.40	83	0.00
42	0.40	84	3.30

IC002

1	0.00
2	0.00
3	0.00
4	0.00
5	3.40
6	3.40
7	5.20
8	5.20

IC003

1	0.00
2	3.31
3	3.27

IC004

1	0.00
2	0.00
3	0.00
4	3.30
5	3.30

IC005

1	9.10
2	3.30
3	0.00
4	9.10

IC451

1	2.00
2	23.30
3	1.20
4	0.00
5	11.60
6	23.50
7	2.00

IC501

1	0.00
2	1.35
3	0.00
4	1.05
5	3.30

IC551

1	12.20
2	0.00
3	9.00

IC552

1	7.50
2	0.00
3	5.00

IC801↓

1	-21.00
2	N/A
3	0.10
4	N/A
5	0.00
6	32.24
7	1.50

IC802↓

1	2.30
2	32.24

IC2201

1	1.60	13	2.80
2	2.20	14	2.20
3	2.20	15	2.50
4	2.30	16	3.50
5	2.40	17	0.00
6	0.07	18	3.20
7	5.00	19	3.40
8	2.50	20	0.00
9	2.60	21	2.20
10	0.80	22	2.20
11	2.30	23	2.20
12	2.50	24	2.20

IC2301

1	6.40
2	5.60
3	16.80
4	0.00
5	5.60
6	6.30
7	8.60
8	0.00
9	0.00
10	18.30
11	3.10
12	8.70

IC3001

1	4.10
2	0.20
3	4.10
4	0.00
5	4.10
6	9.00
7	4.30
8	0.00

A - BOARD

	Q001	Q057	Q058	Q070	Q092	Q2350	Q3001	Q3002	Q354
B	0.00	1.50	1.50	4.12	8.90	5.35	1.30	1.30	4.50
C	13.00	0.00	0.00	8.90	1.40	0.00	3.30	3.30	8.50
E	0.00	0.07	0.07	3.50	3.30	3.14	0.70	0.70	3.80

	Q355	Q356	Q357	Q358	Q359	Q360	Q361	Q362	Q411
B	4.30	4.40	2.60	2.60	2.60	0.50	0.40	0.40	2.25
C	8.40	8.40	4.50	4.30	4.40	0.00	0.00	0.00	0.00
E	3.60	3.70	2.00	2.00	2.00	1.10	1.10	1.10	2.90

	Q412	Q451	Q501	Q551	Q560	Q605	Q606	Q801	Q802
B	2.90	5.10	0.40	0.00	0.30	4.80	0.00	0.00	0.70
C	9.00	1.40	56.80	14.70	0.00	0.00	3.30	12.52	0.00
E	2.40	3.30	0.00	0.00	0.60	4.70	0.00	0.00	0.00

	Q820	Q830	Q831
B	130.40	129.80	0.60
C	0.00	130.40	0.20
E	130.80	130.50	0.00

C - BOARD

	Q351	Q352	Q353
B	130.40	129.80	0.60
C	0.00	130.40	0.20
E	130.80	130.50	0.00